


WCK003 Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.

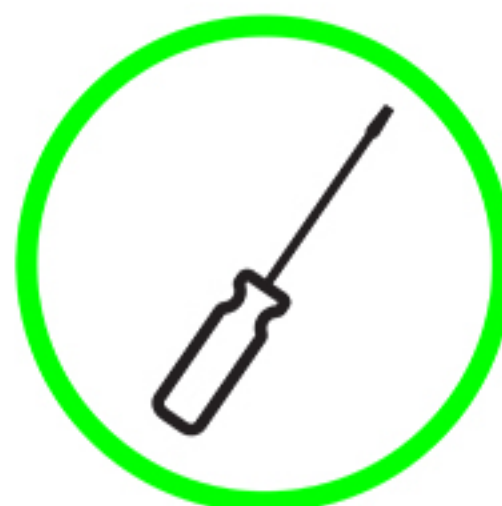

Accessories description



Side bracket left x1 Side bracket right x1



Door panel x2



Top shelf x 1 (with groove on the back)



Middle layer board x 1 (with grooves on both sides)



Bottom shelf x 1 (with groove on the front)




Small layer board Ax1




Small shelf B x1



Backplane x4

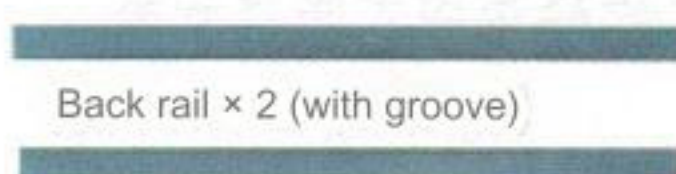

Back rail x 2 (with groove)

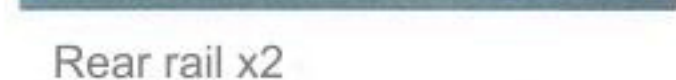

Rear rail x2



door handle x2



Door Stopper



door gasket



Metal strips



flat head screw



big screw





small screws



Installation tools




Start assembling

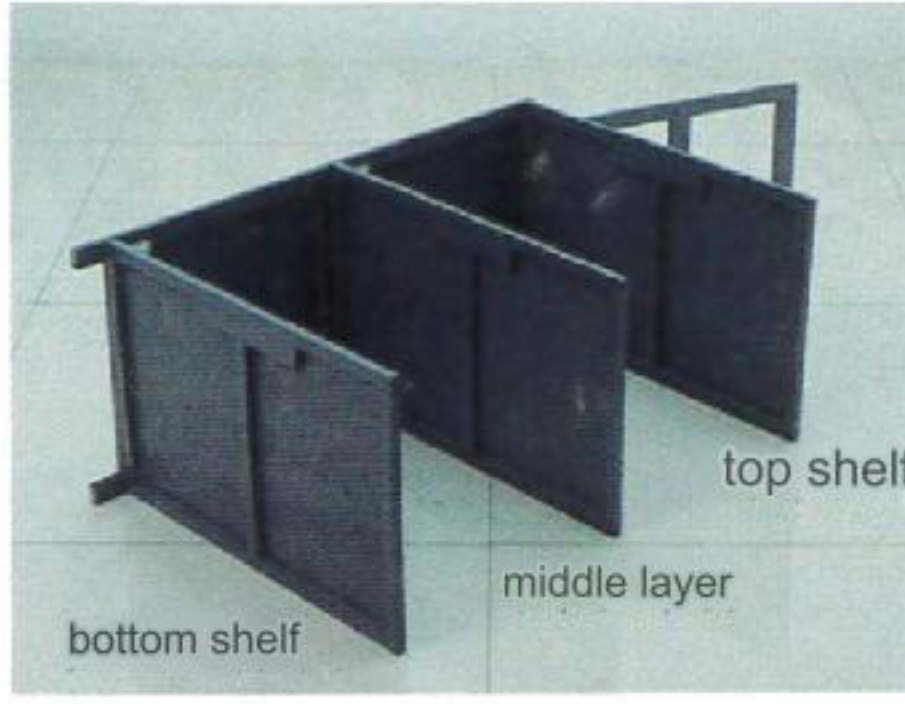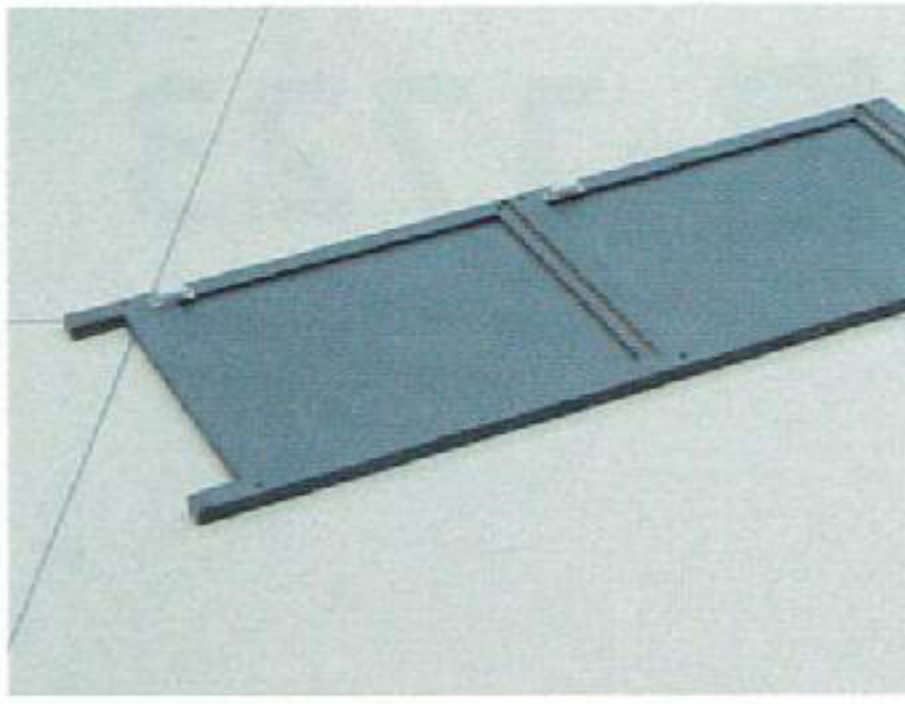

1. Take out the left and right side brackets and the door sucker and install them with small screws

2. Take out the left side bracket, bottom shelf, top shelf, and middle shelf and install them with large screws




3. Take out the back rail and install it with large screws

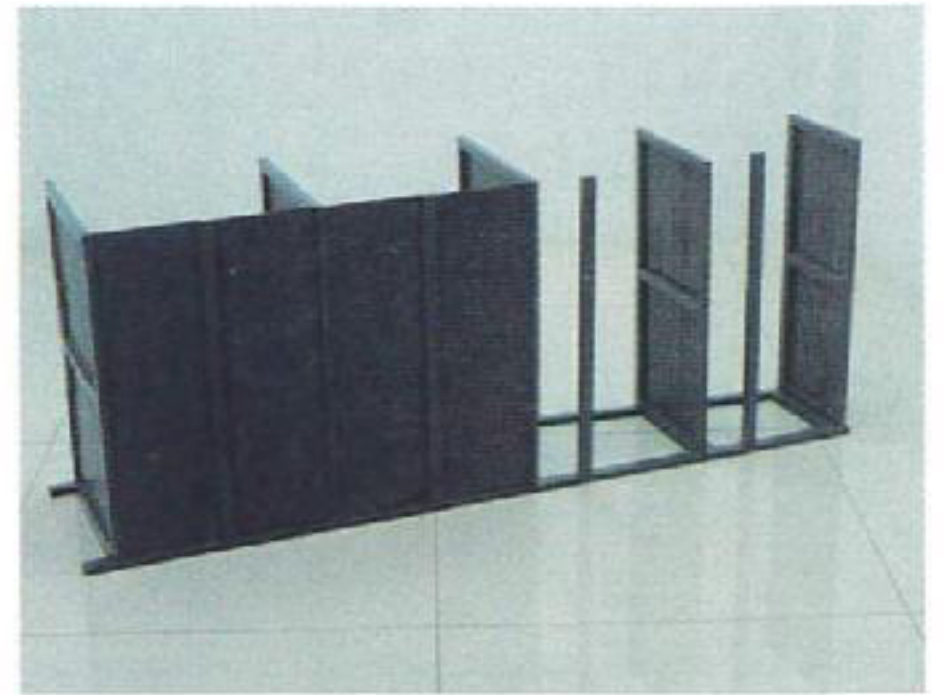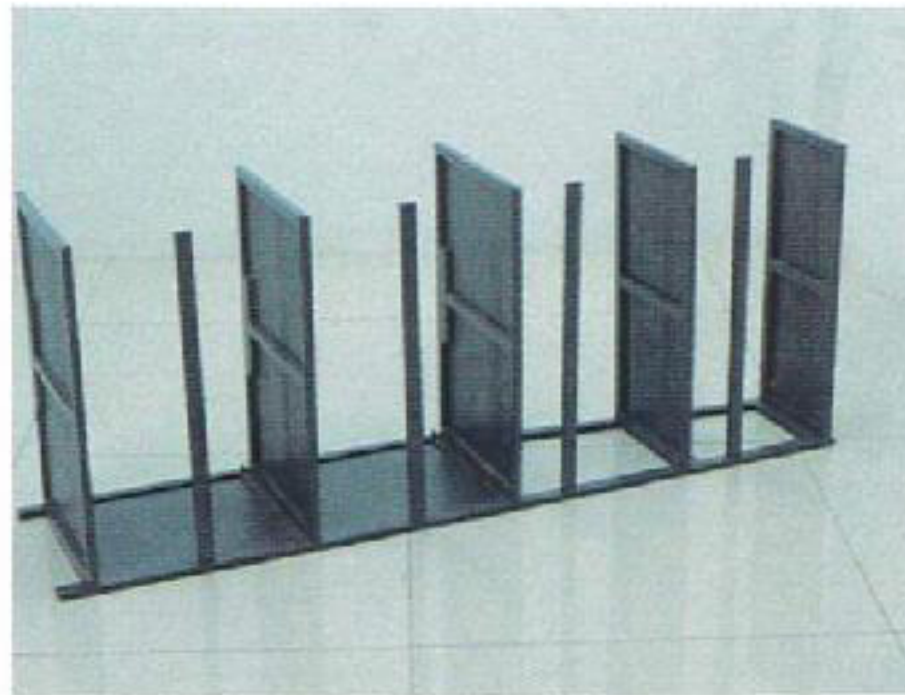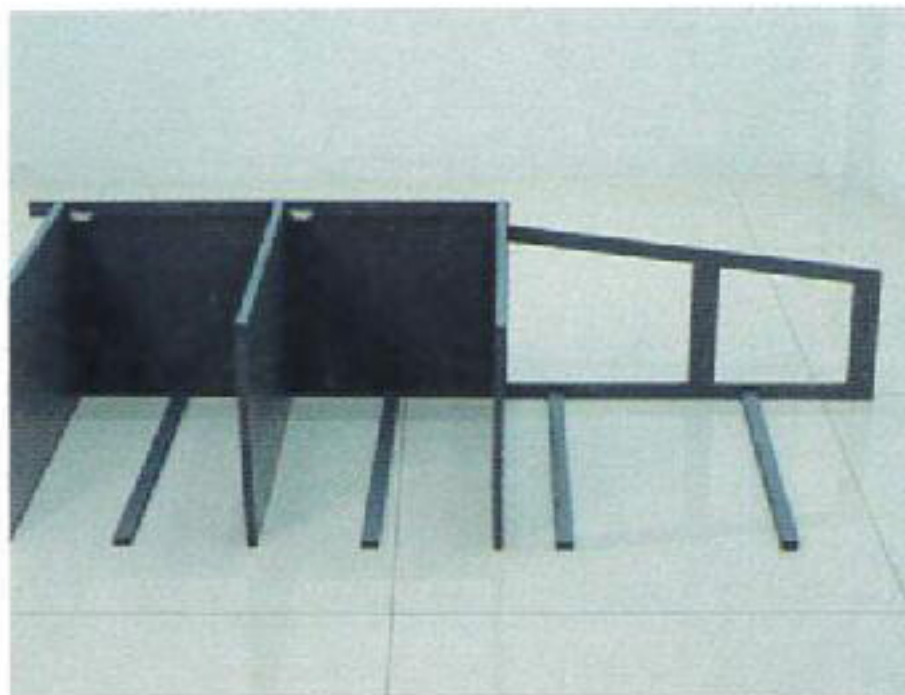

4. Take out the rear rail and install it with large screws

5. Take out the small shelves A and B and install them with large screws to erect the brackets.



6. Take out the back plate and insert it along the groove

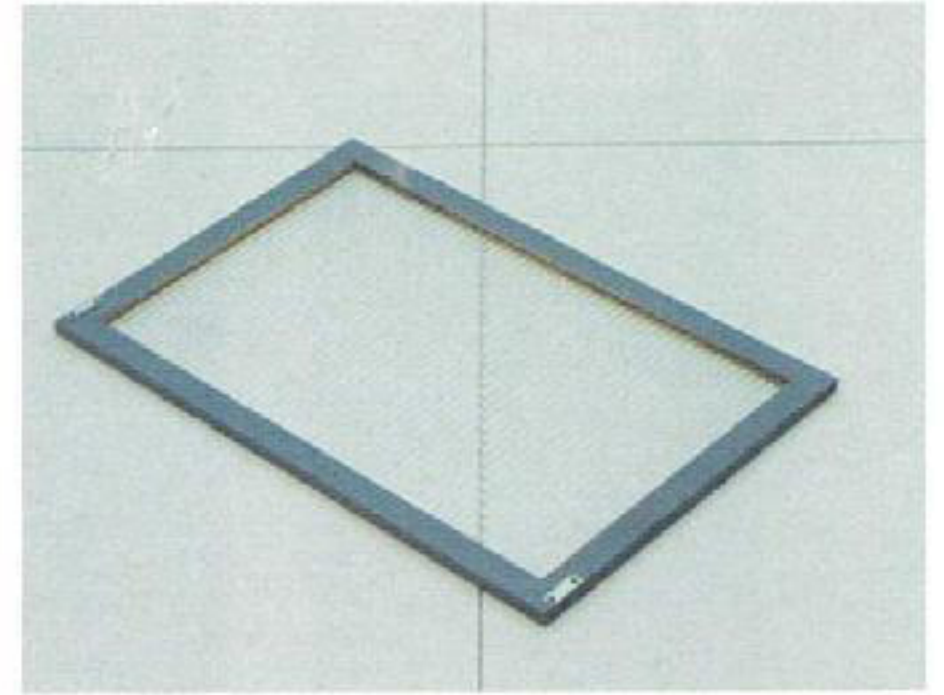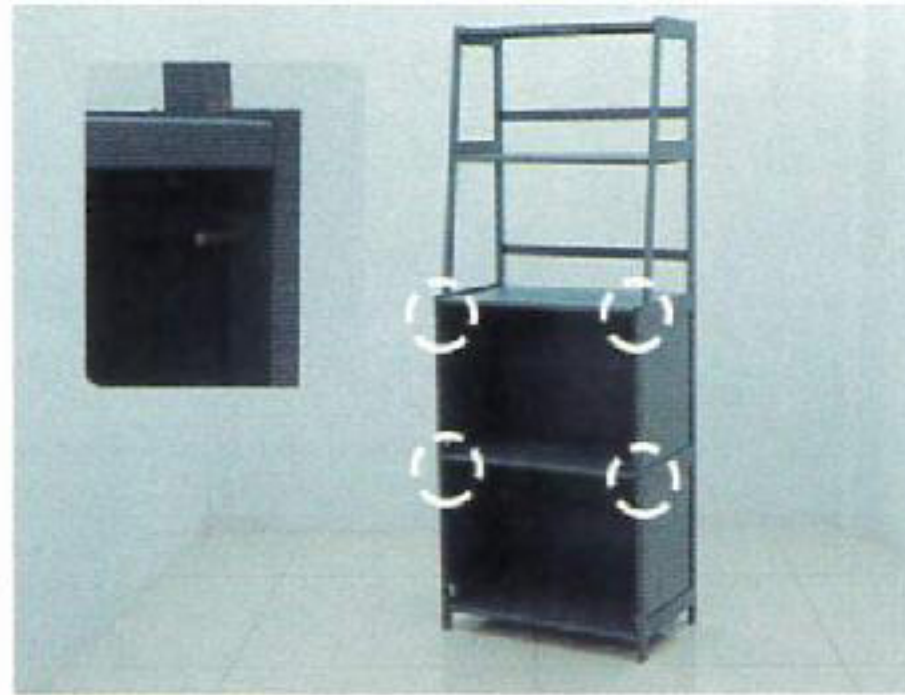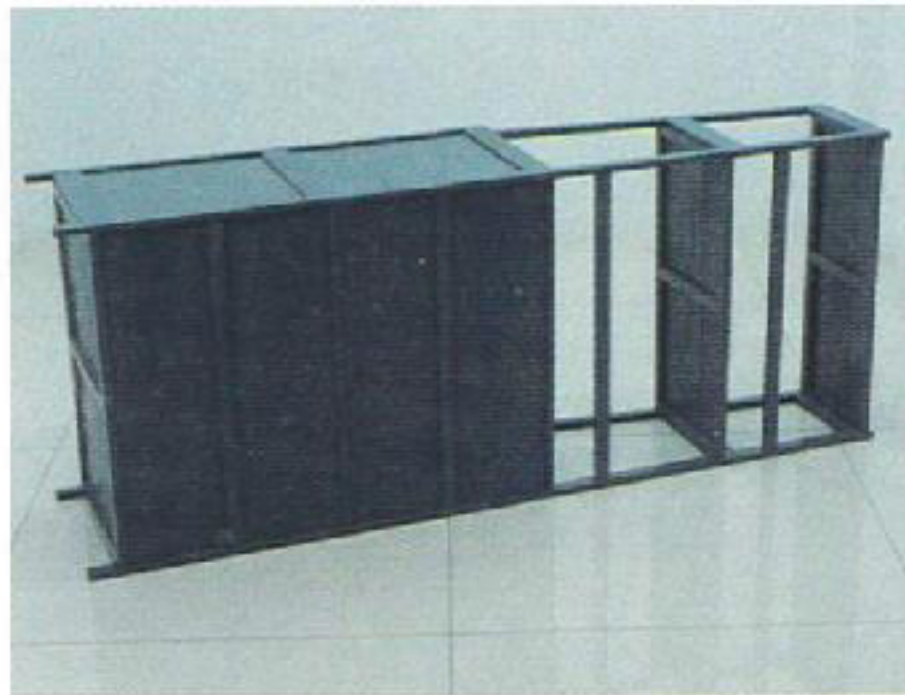

7. Take out the side bracket and install it with large screws on the right side (do not tighten the front screws)

8. Take out the metal strip and insert it into the hole of the side bracket

9. Take out the door panel and door gasket and install them with small screws

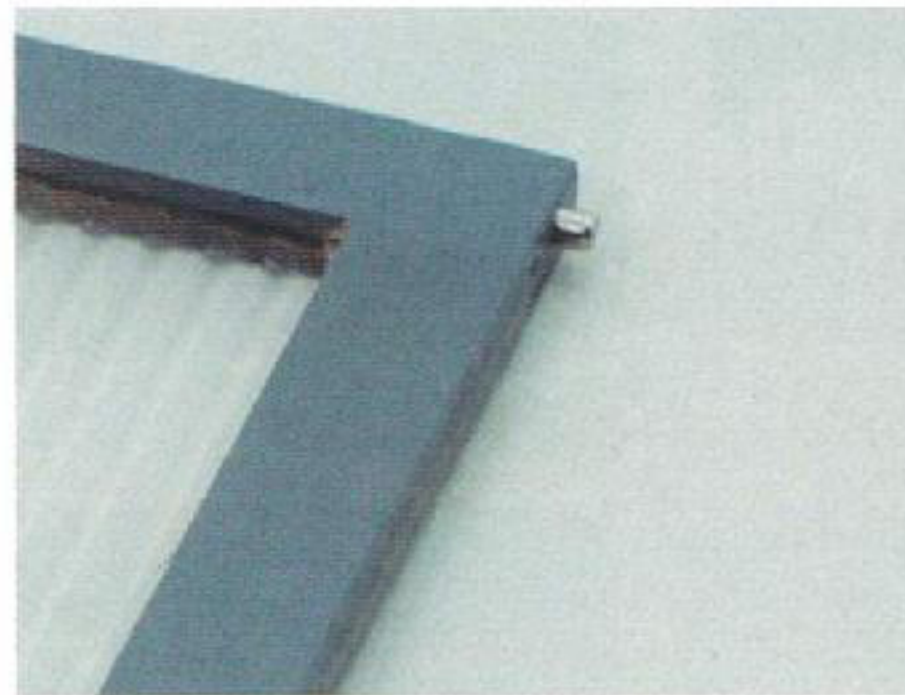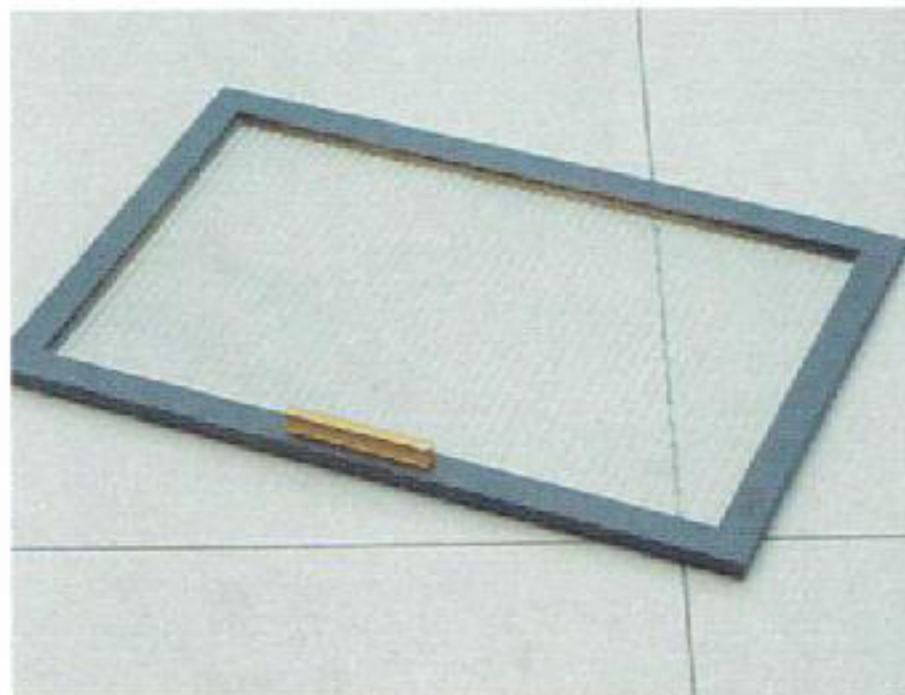

10. Take out the door lever and install it with flat head screws

11. Take out the metal strip and insert it into both ends of the door panel

12. Take out the door panel, insert the metal strip into the groove, and finally screw in the large screws.