

SOB001 Installation Instruction



PARTS

Wheels X 4



M Screws X 6



S Screws X 4



L Screws X 4



**Install all the wheels
using S-sized screws
and nuts. (X 4)**





Connect the crossbars to the handrail using M-sized screws and nuts. (X 2 Sides).



X 2



**Attach the backrest to the handrail
using screws and nuts of size L.
(X 2 Sides)**



A close-up photograph of a white metal frame assembly. The frame consists of several white-painted metal bars connected by bolts and nuts. A blue panel is visible in the upper left corner. To the right, a cardboard box is partially visible, featuring a warning symbol (two upward-pointing arrows) and the Chinese text "禁止层压/防" (Prohibit layering/prevention). The background is dark and textured, possibly a carpet or mat. The text "X 2" is overlaid in the center of the image.

X 2




Place the folding bed panel with the wheels facing the ground, and position the leather covering outward.



Lift the folding bed panel and move it towards the handrail.


Align the small hole on the side of the folding bed panel with the small hole on the metal piece at a 45° angle on the crossbar.

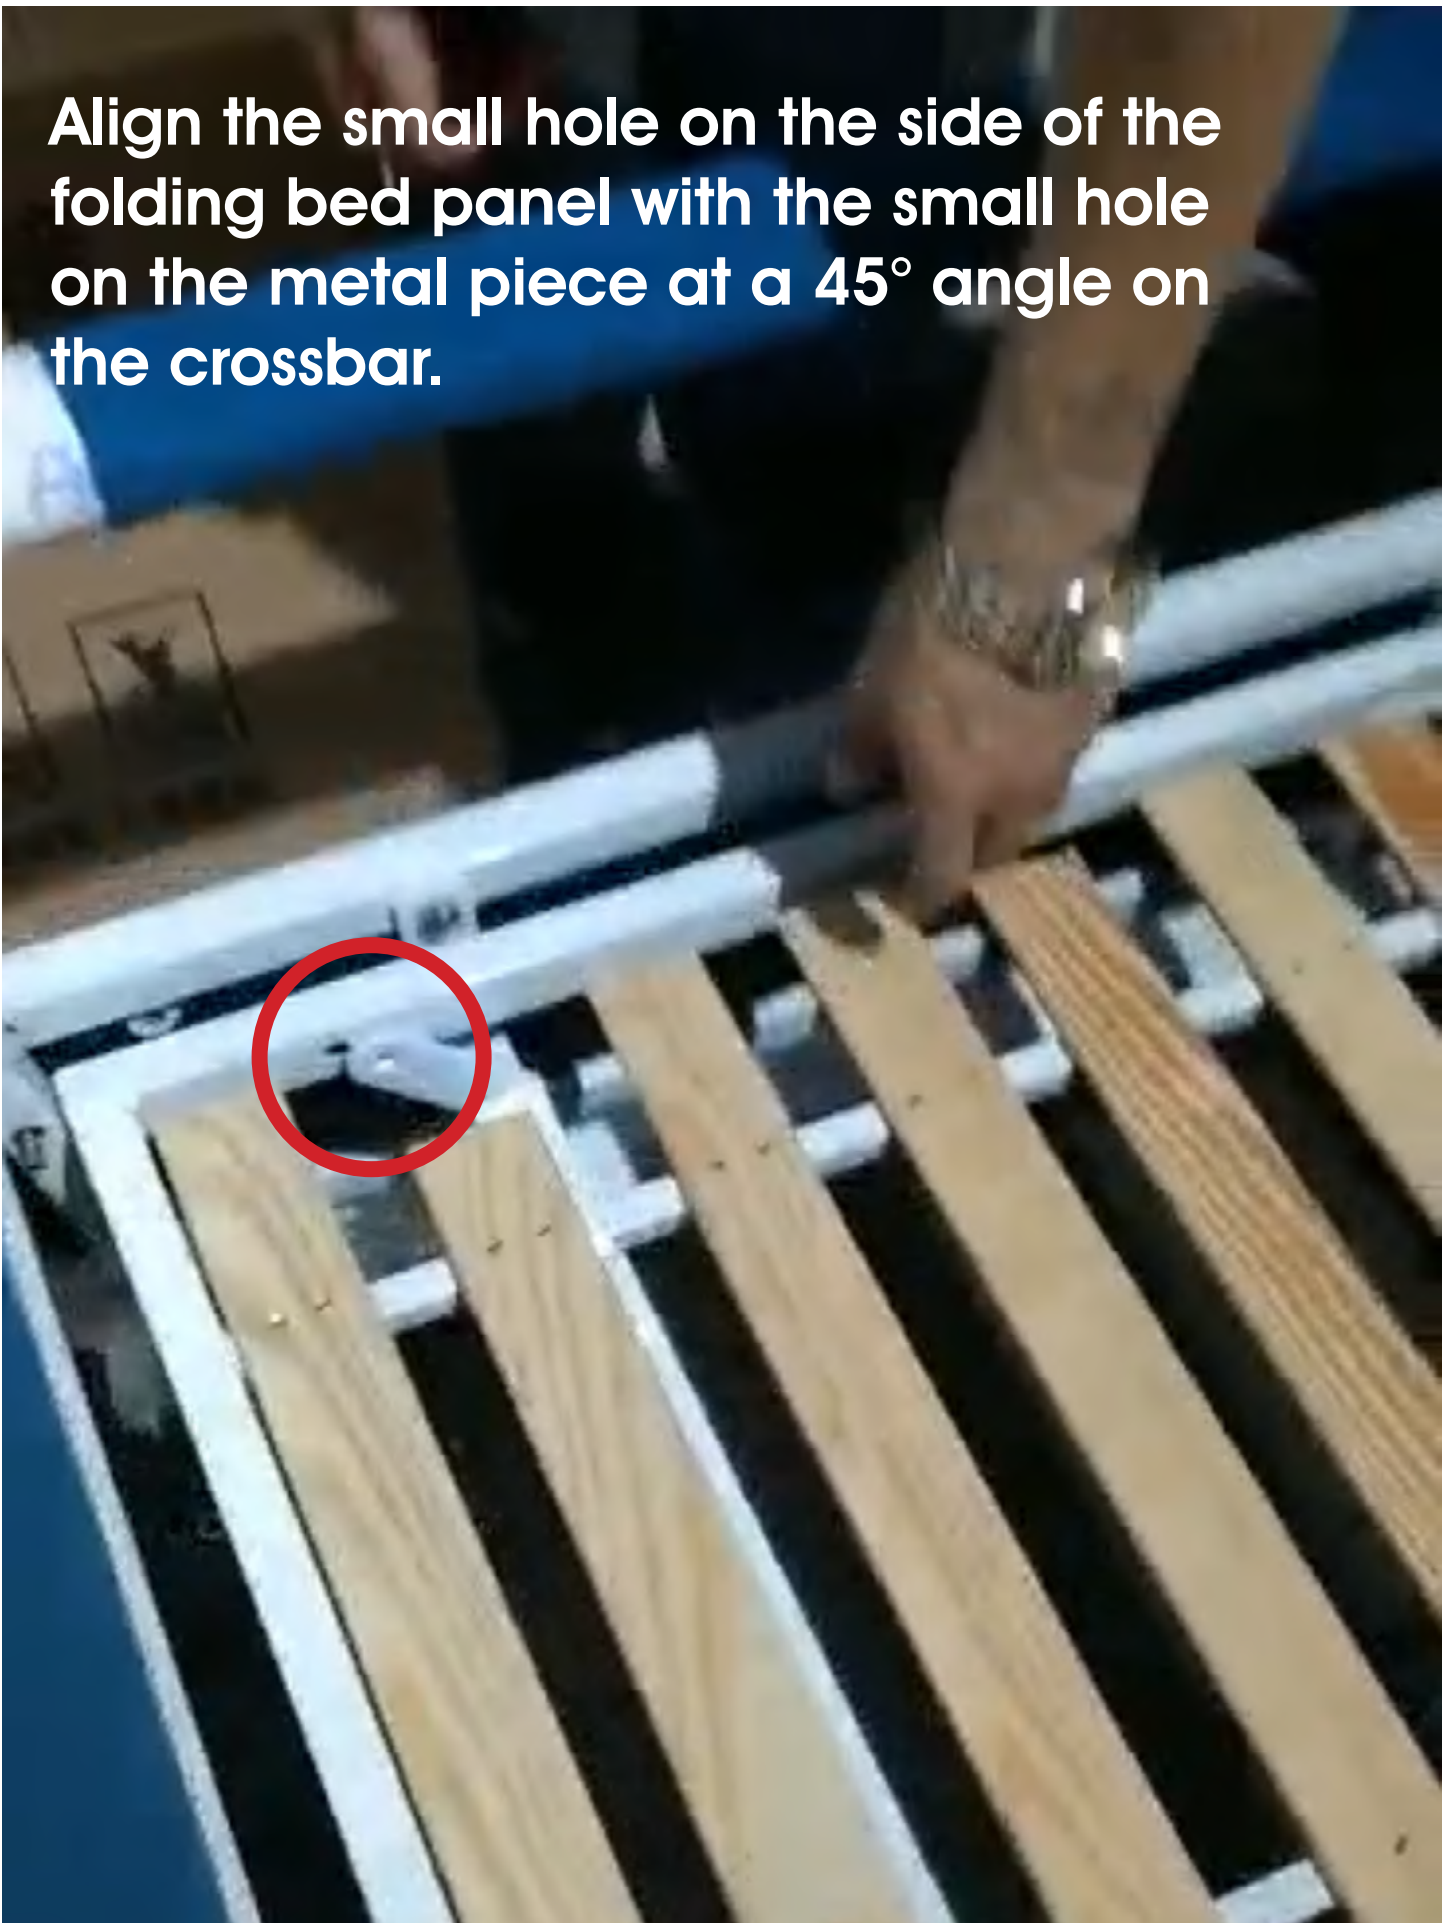



Secure both sides using
screws and nuts of size
M.(X 2 Sides)

Secure the foam cushion onto the bed frame using the provided rope.

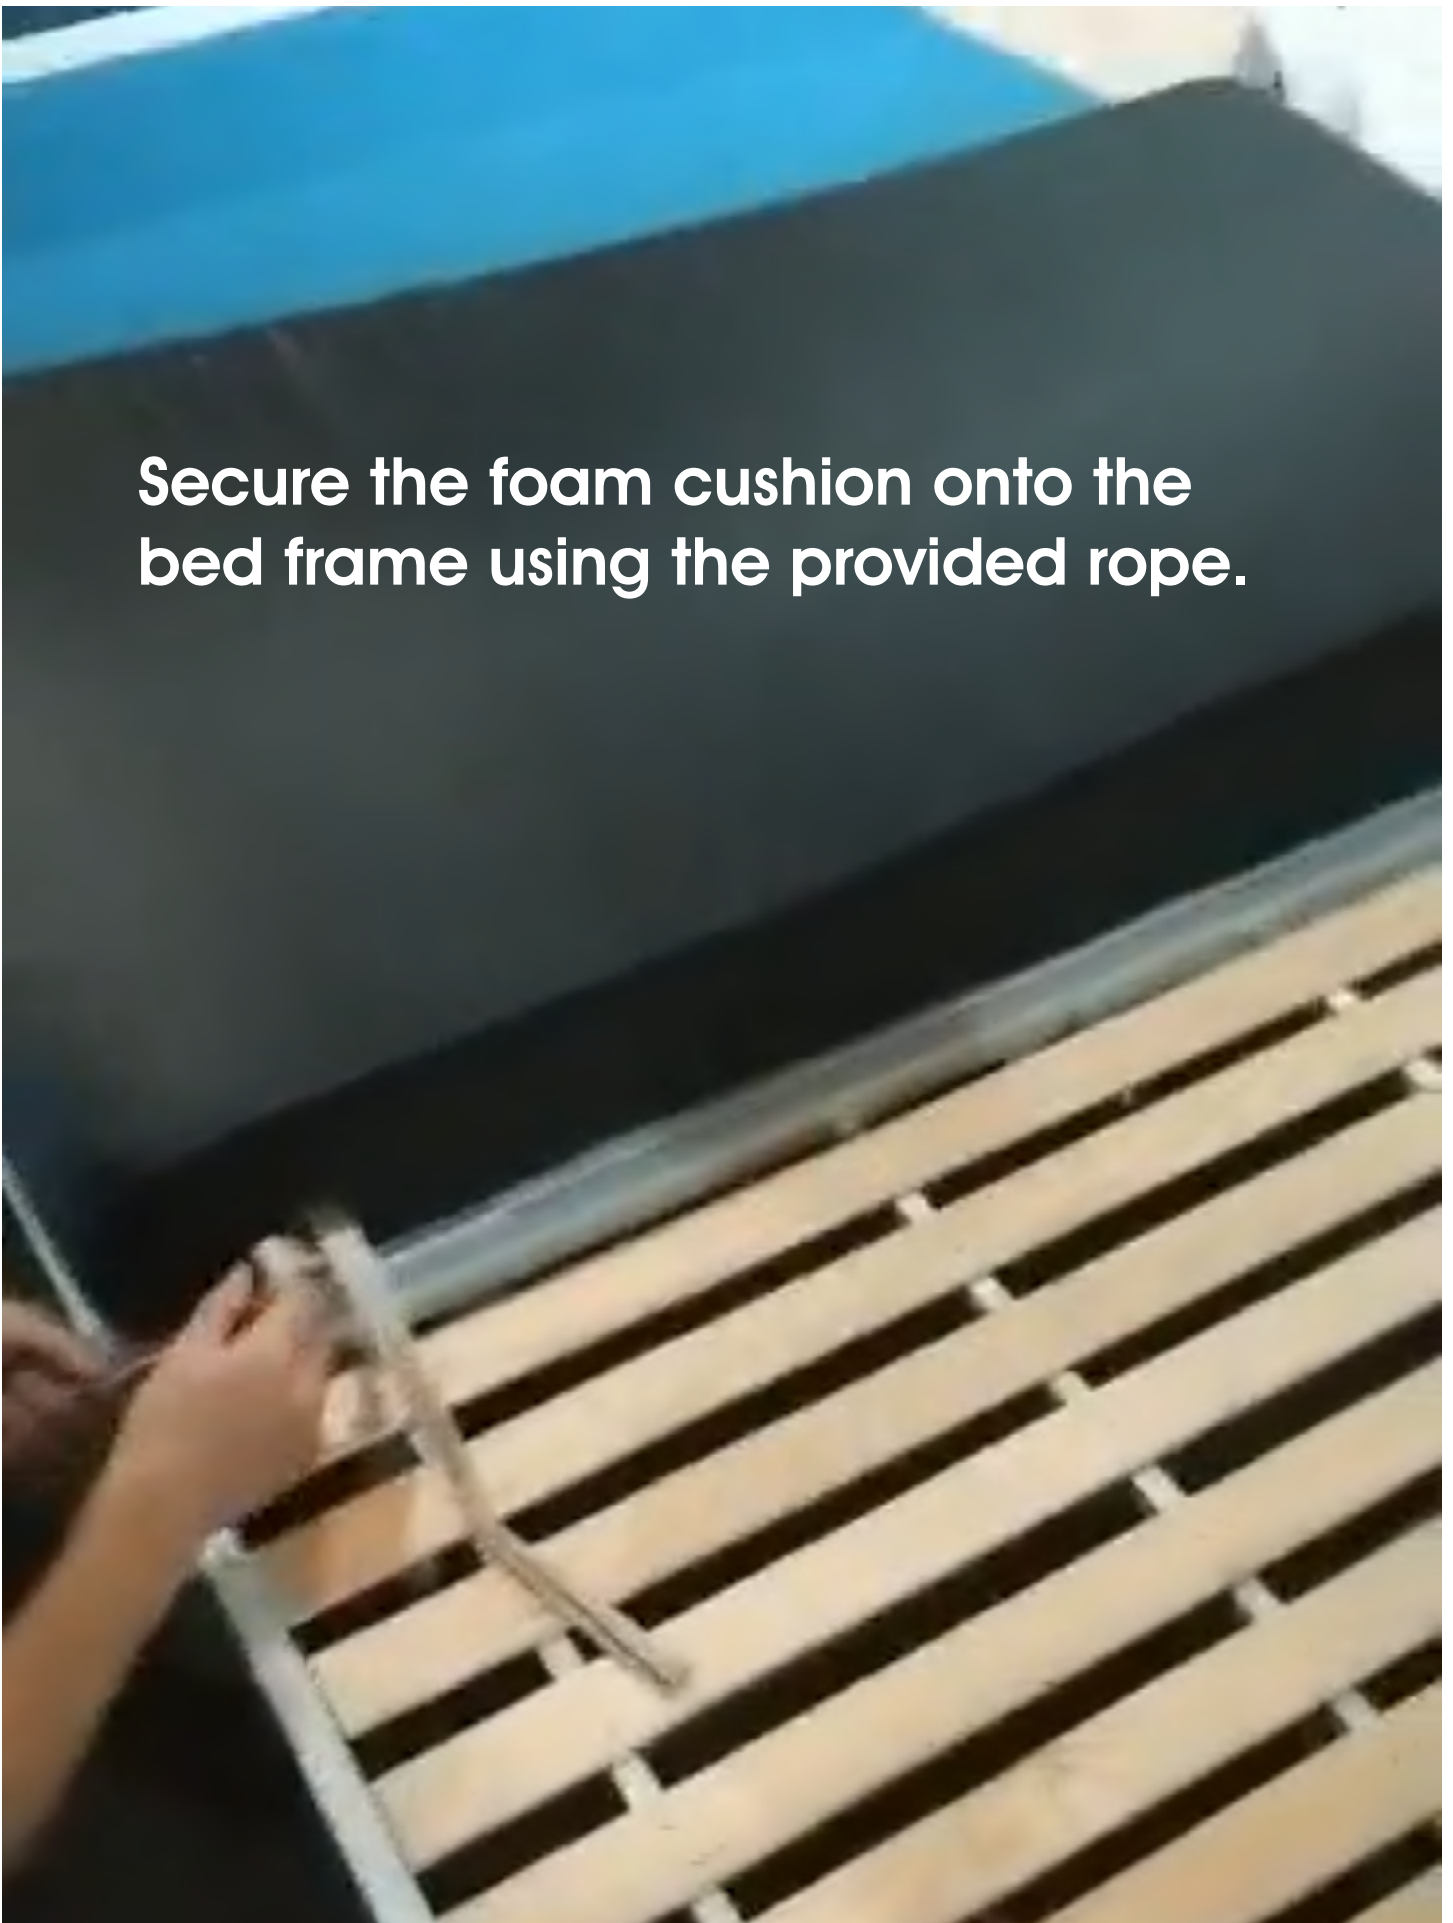



After completing all the steps, lift the bed frame portion.

