



# SOCE009-100/80x24CM



Please be sure to use a manual screwdriver and refrain from using an electric drill.

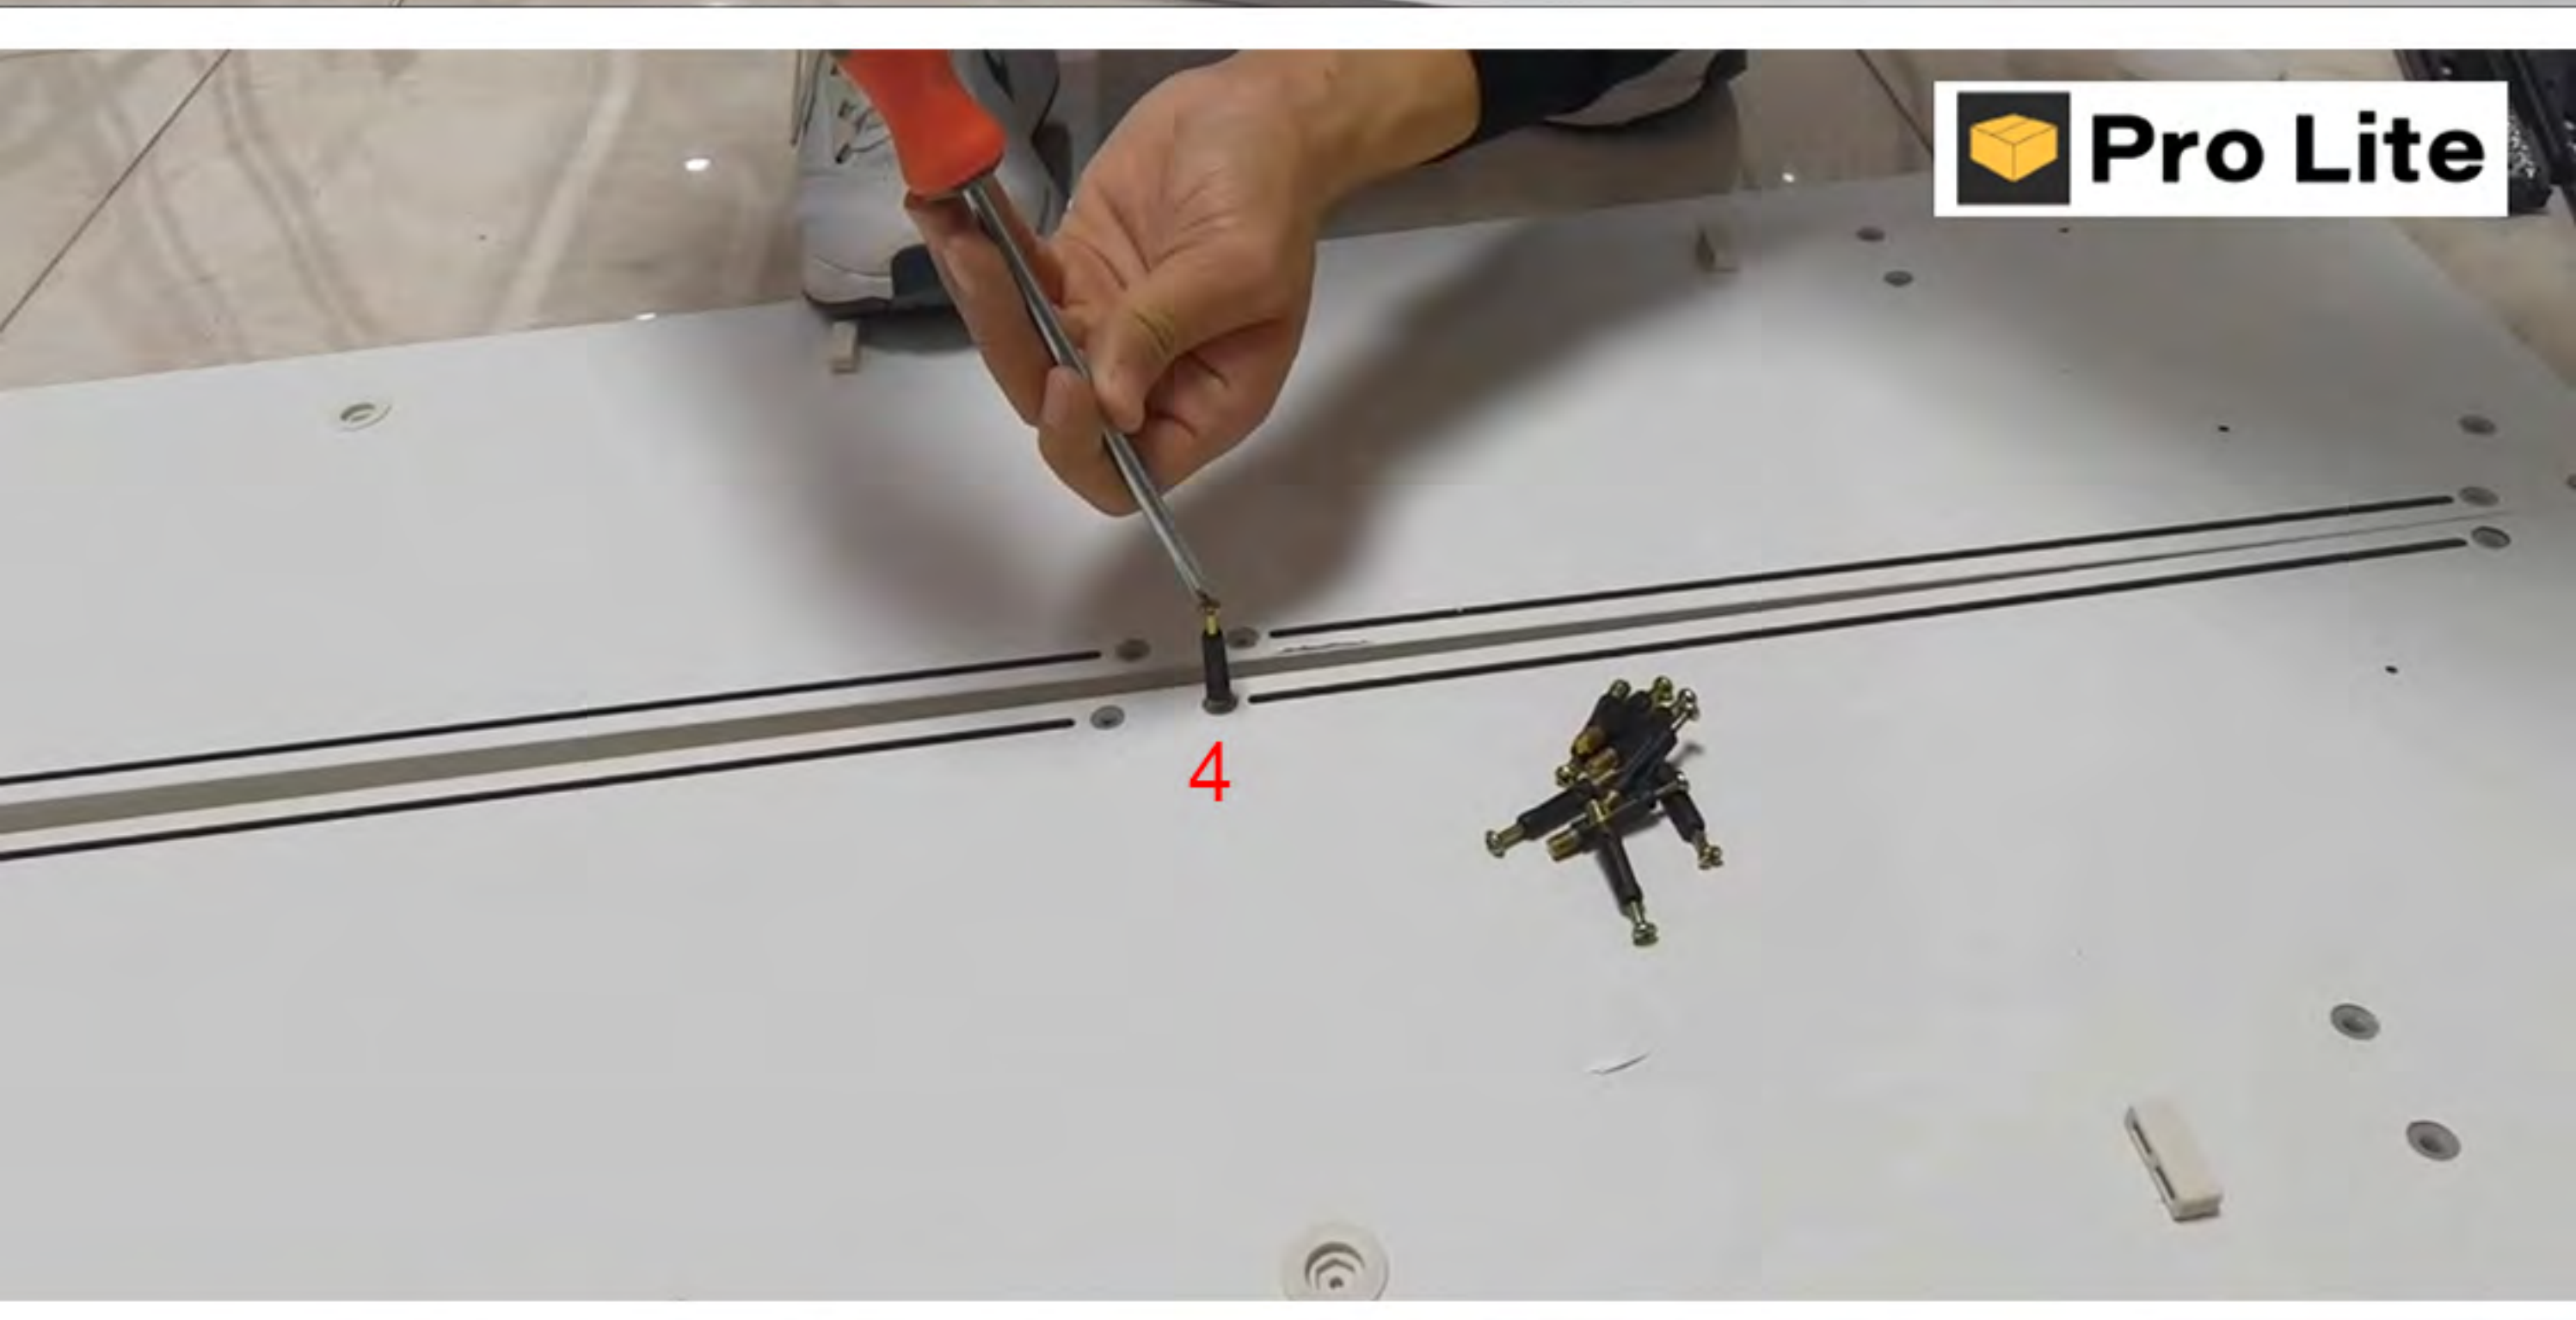

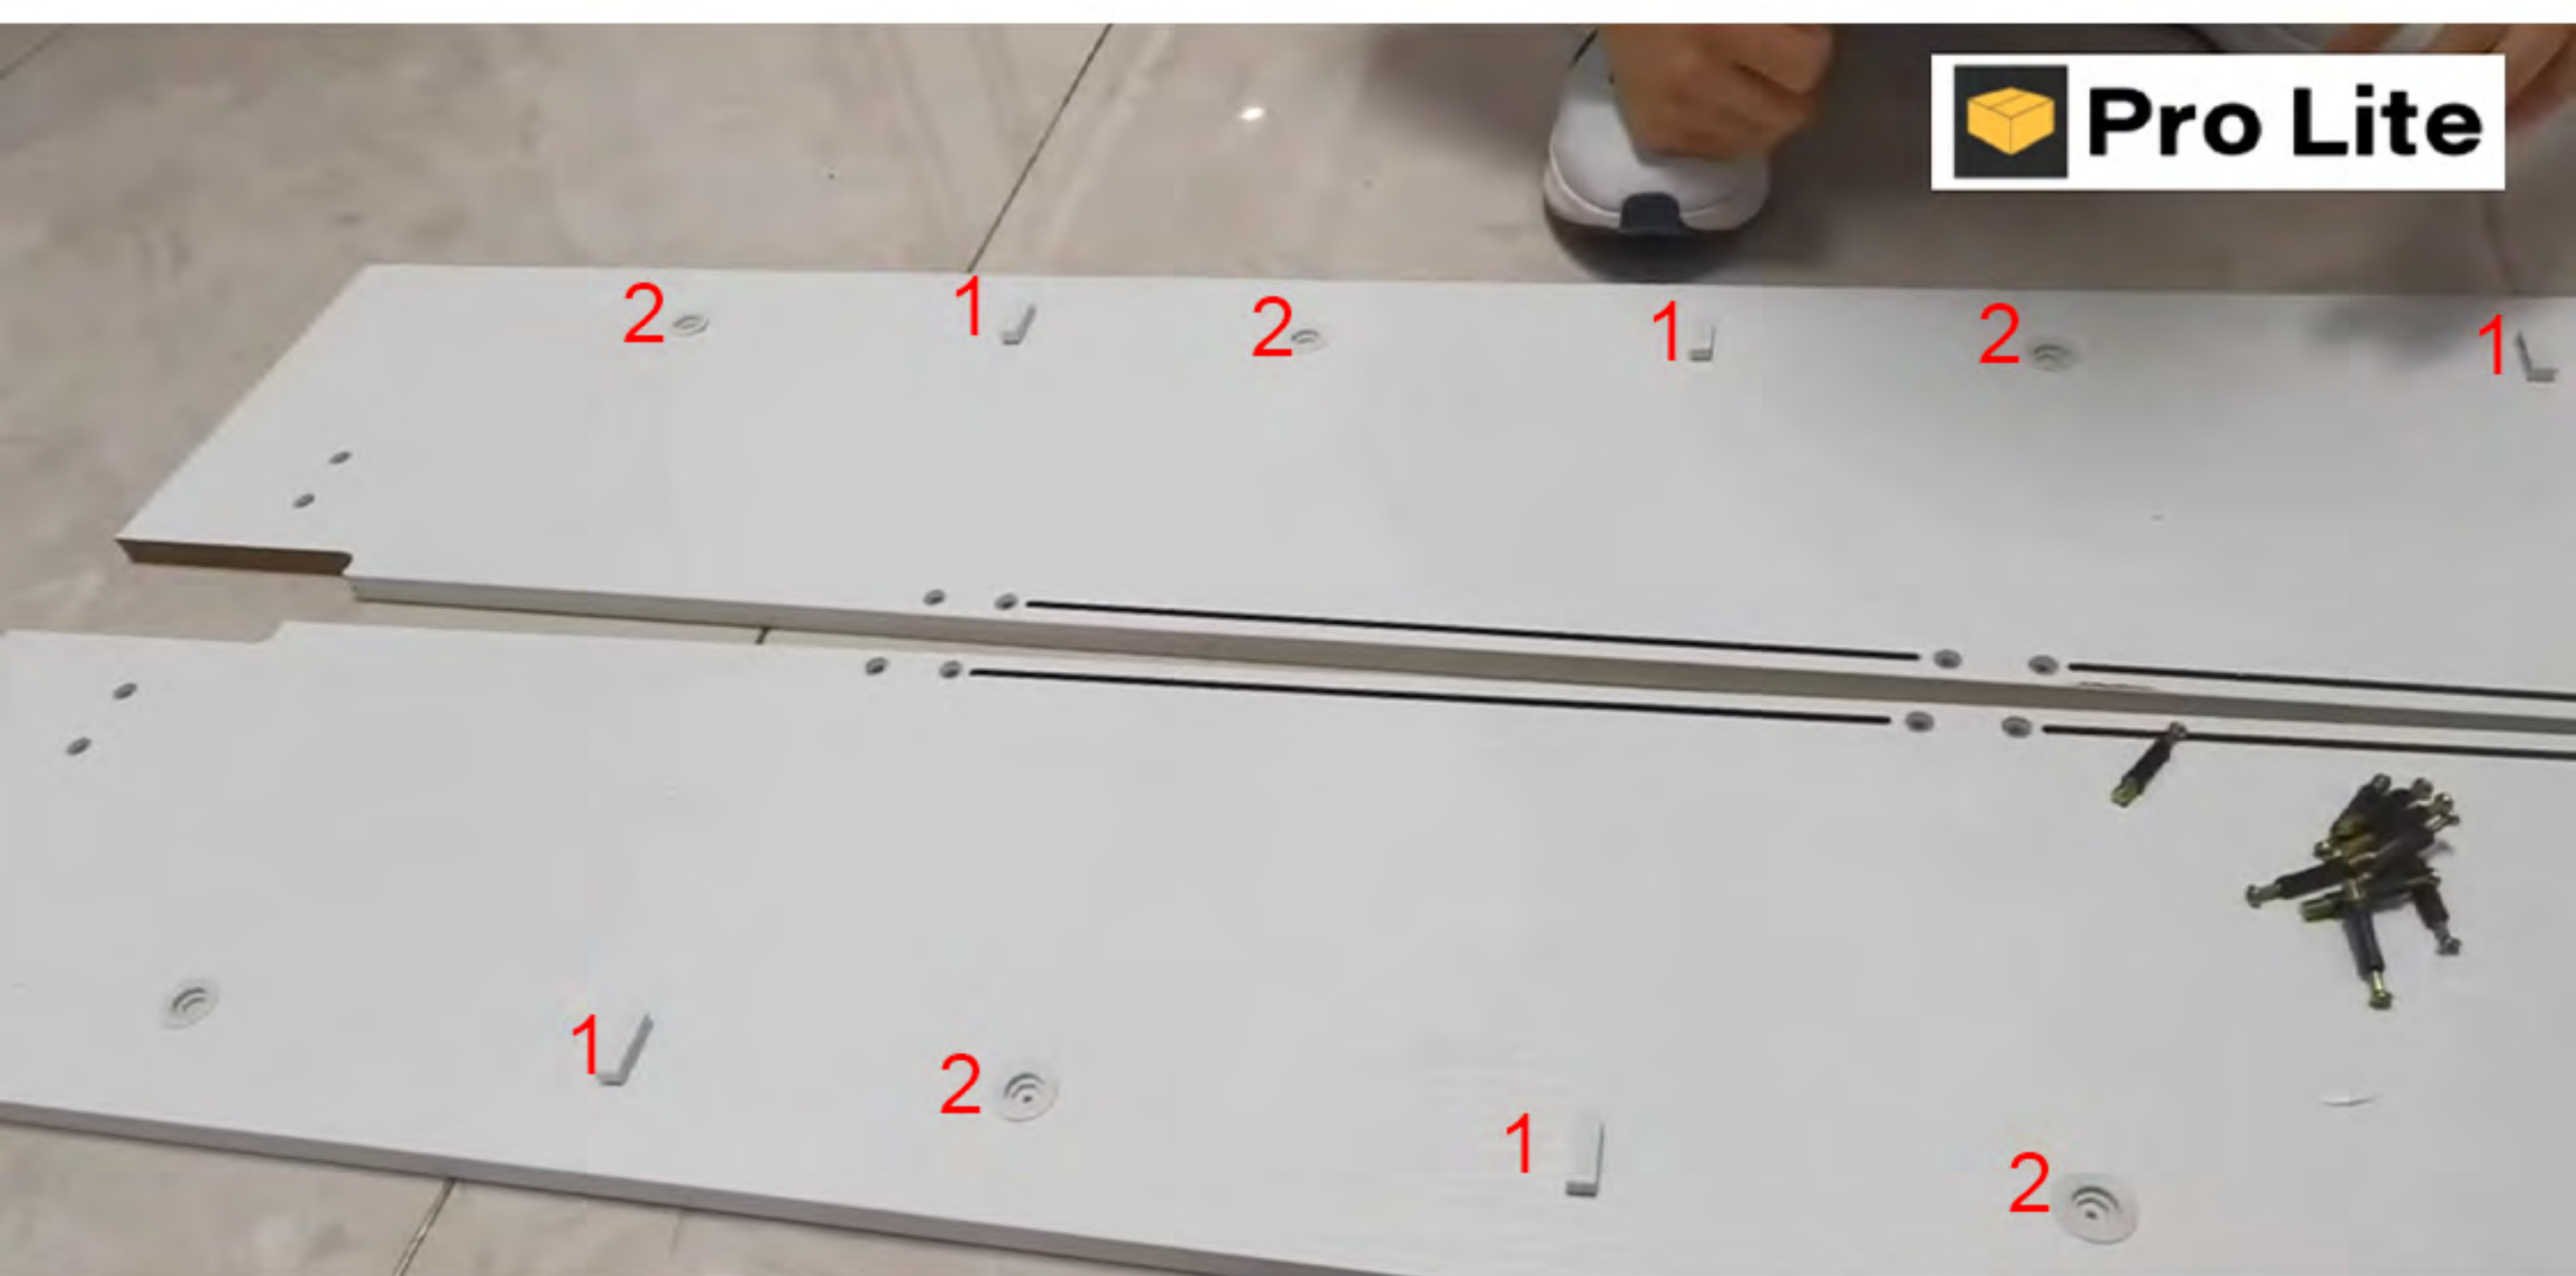









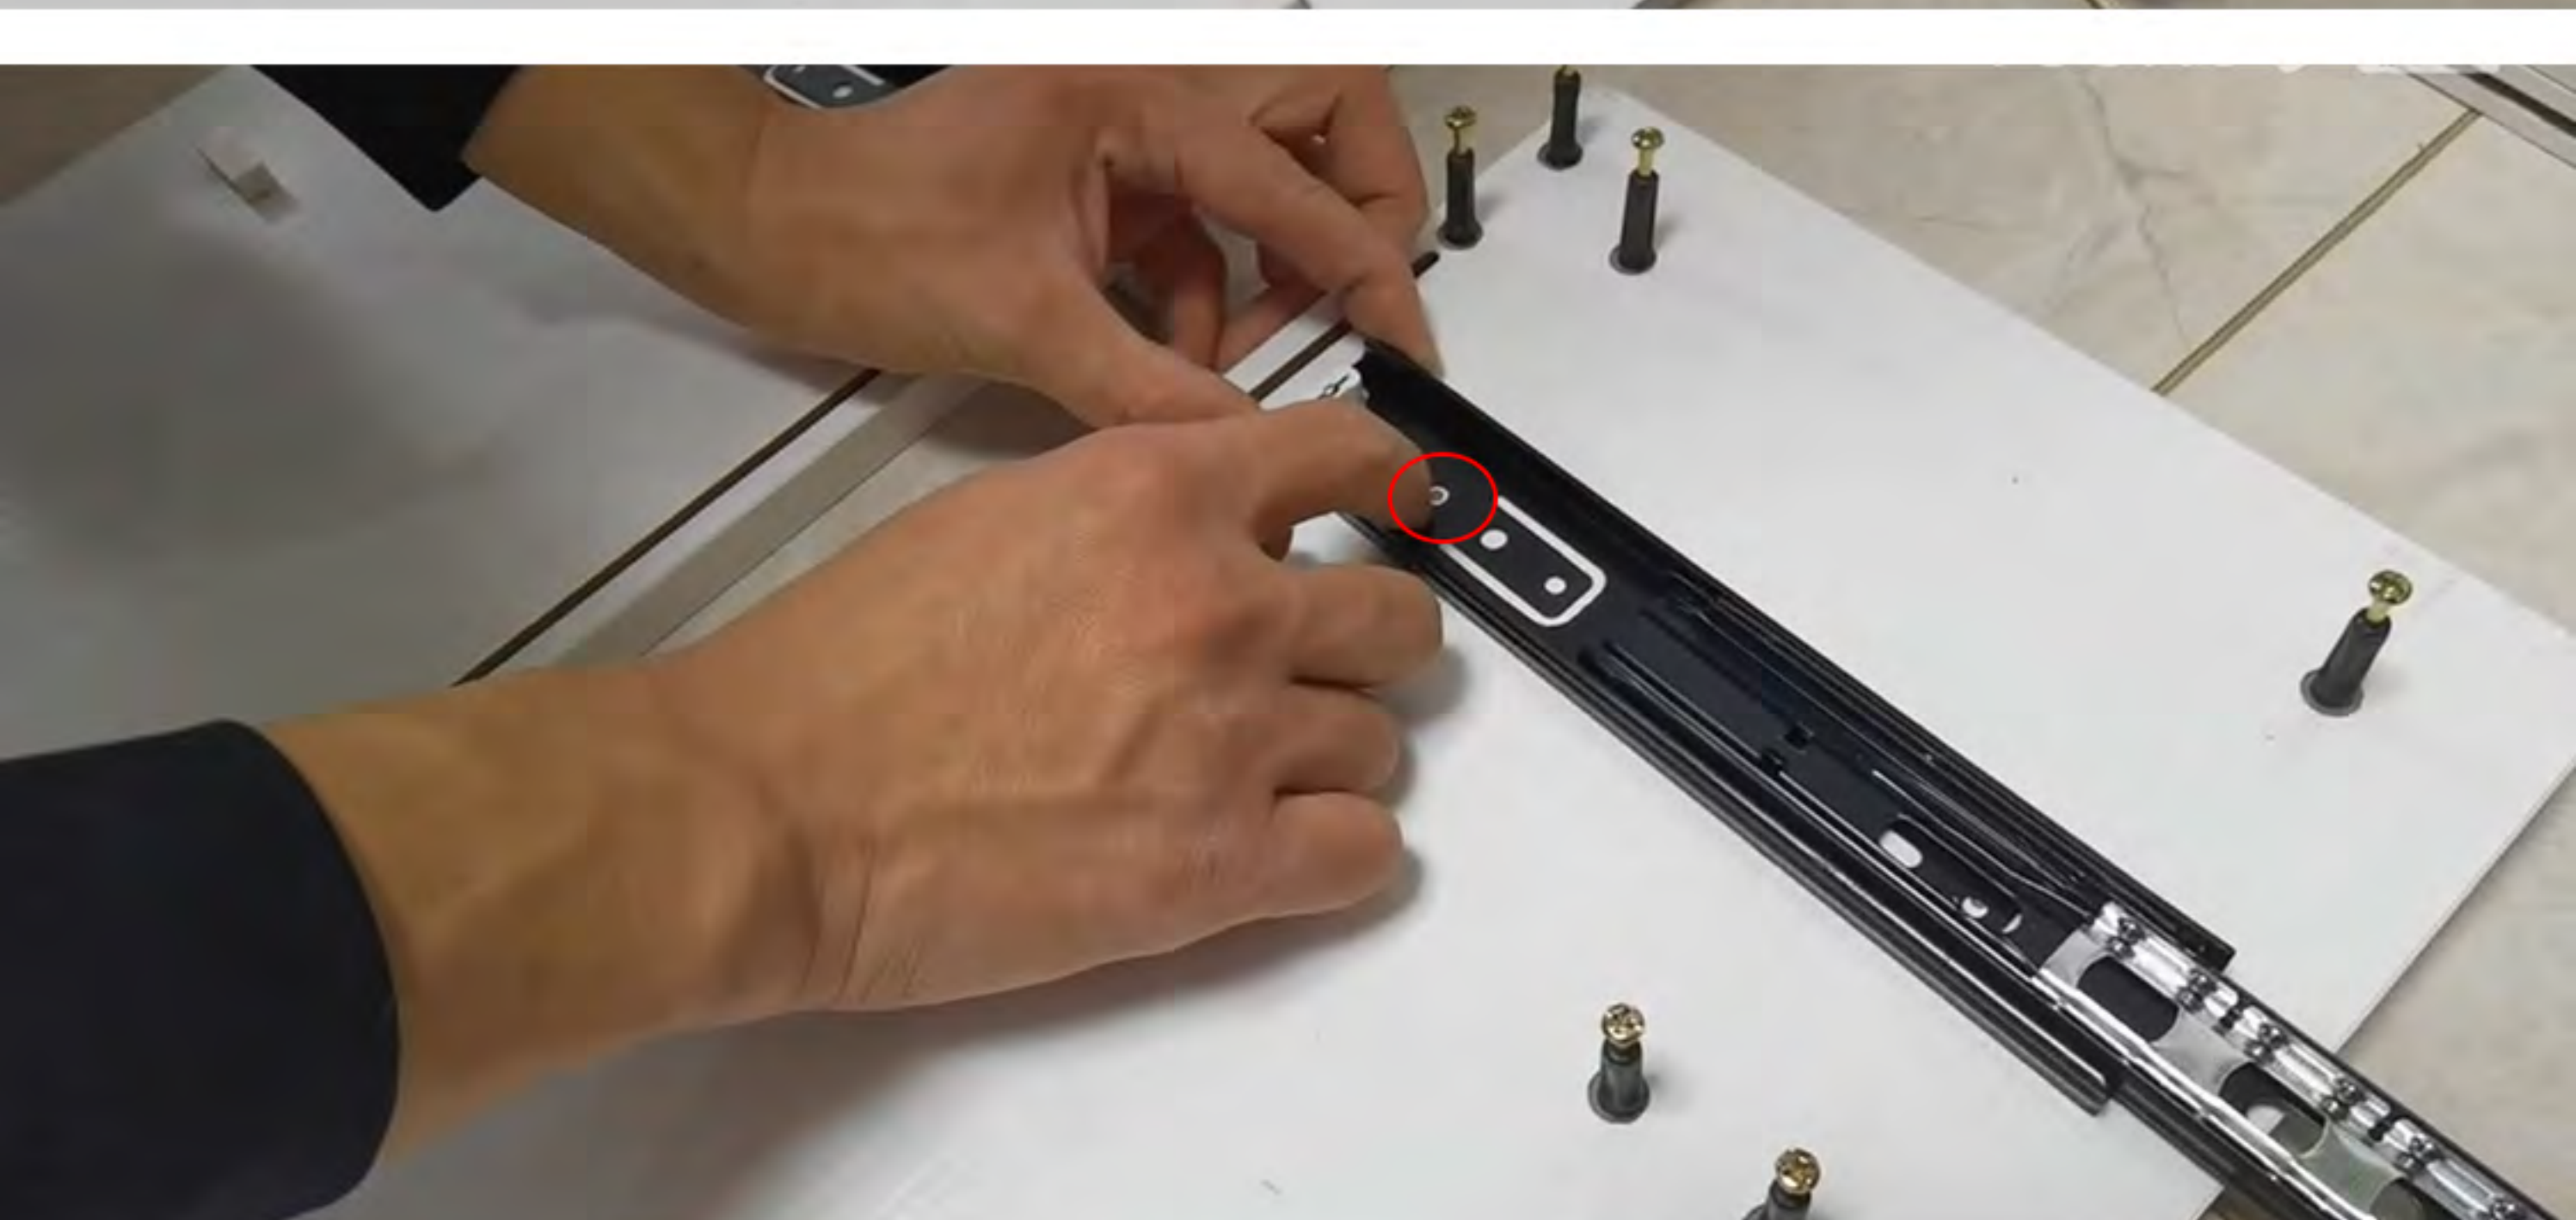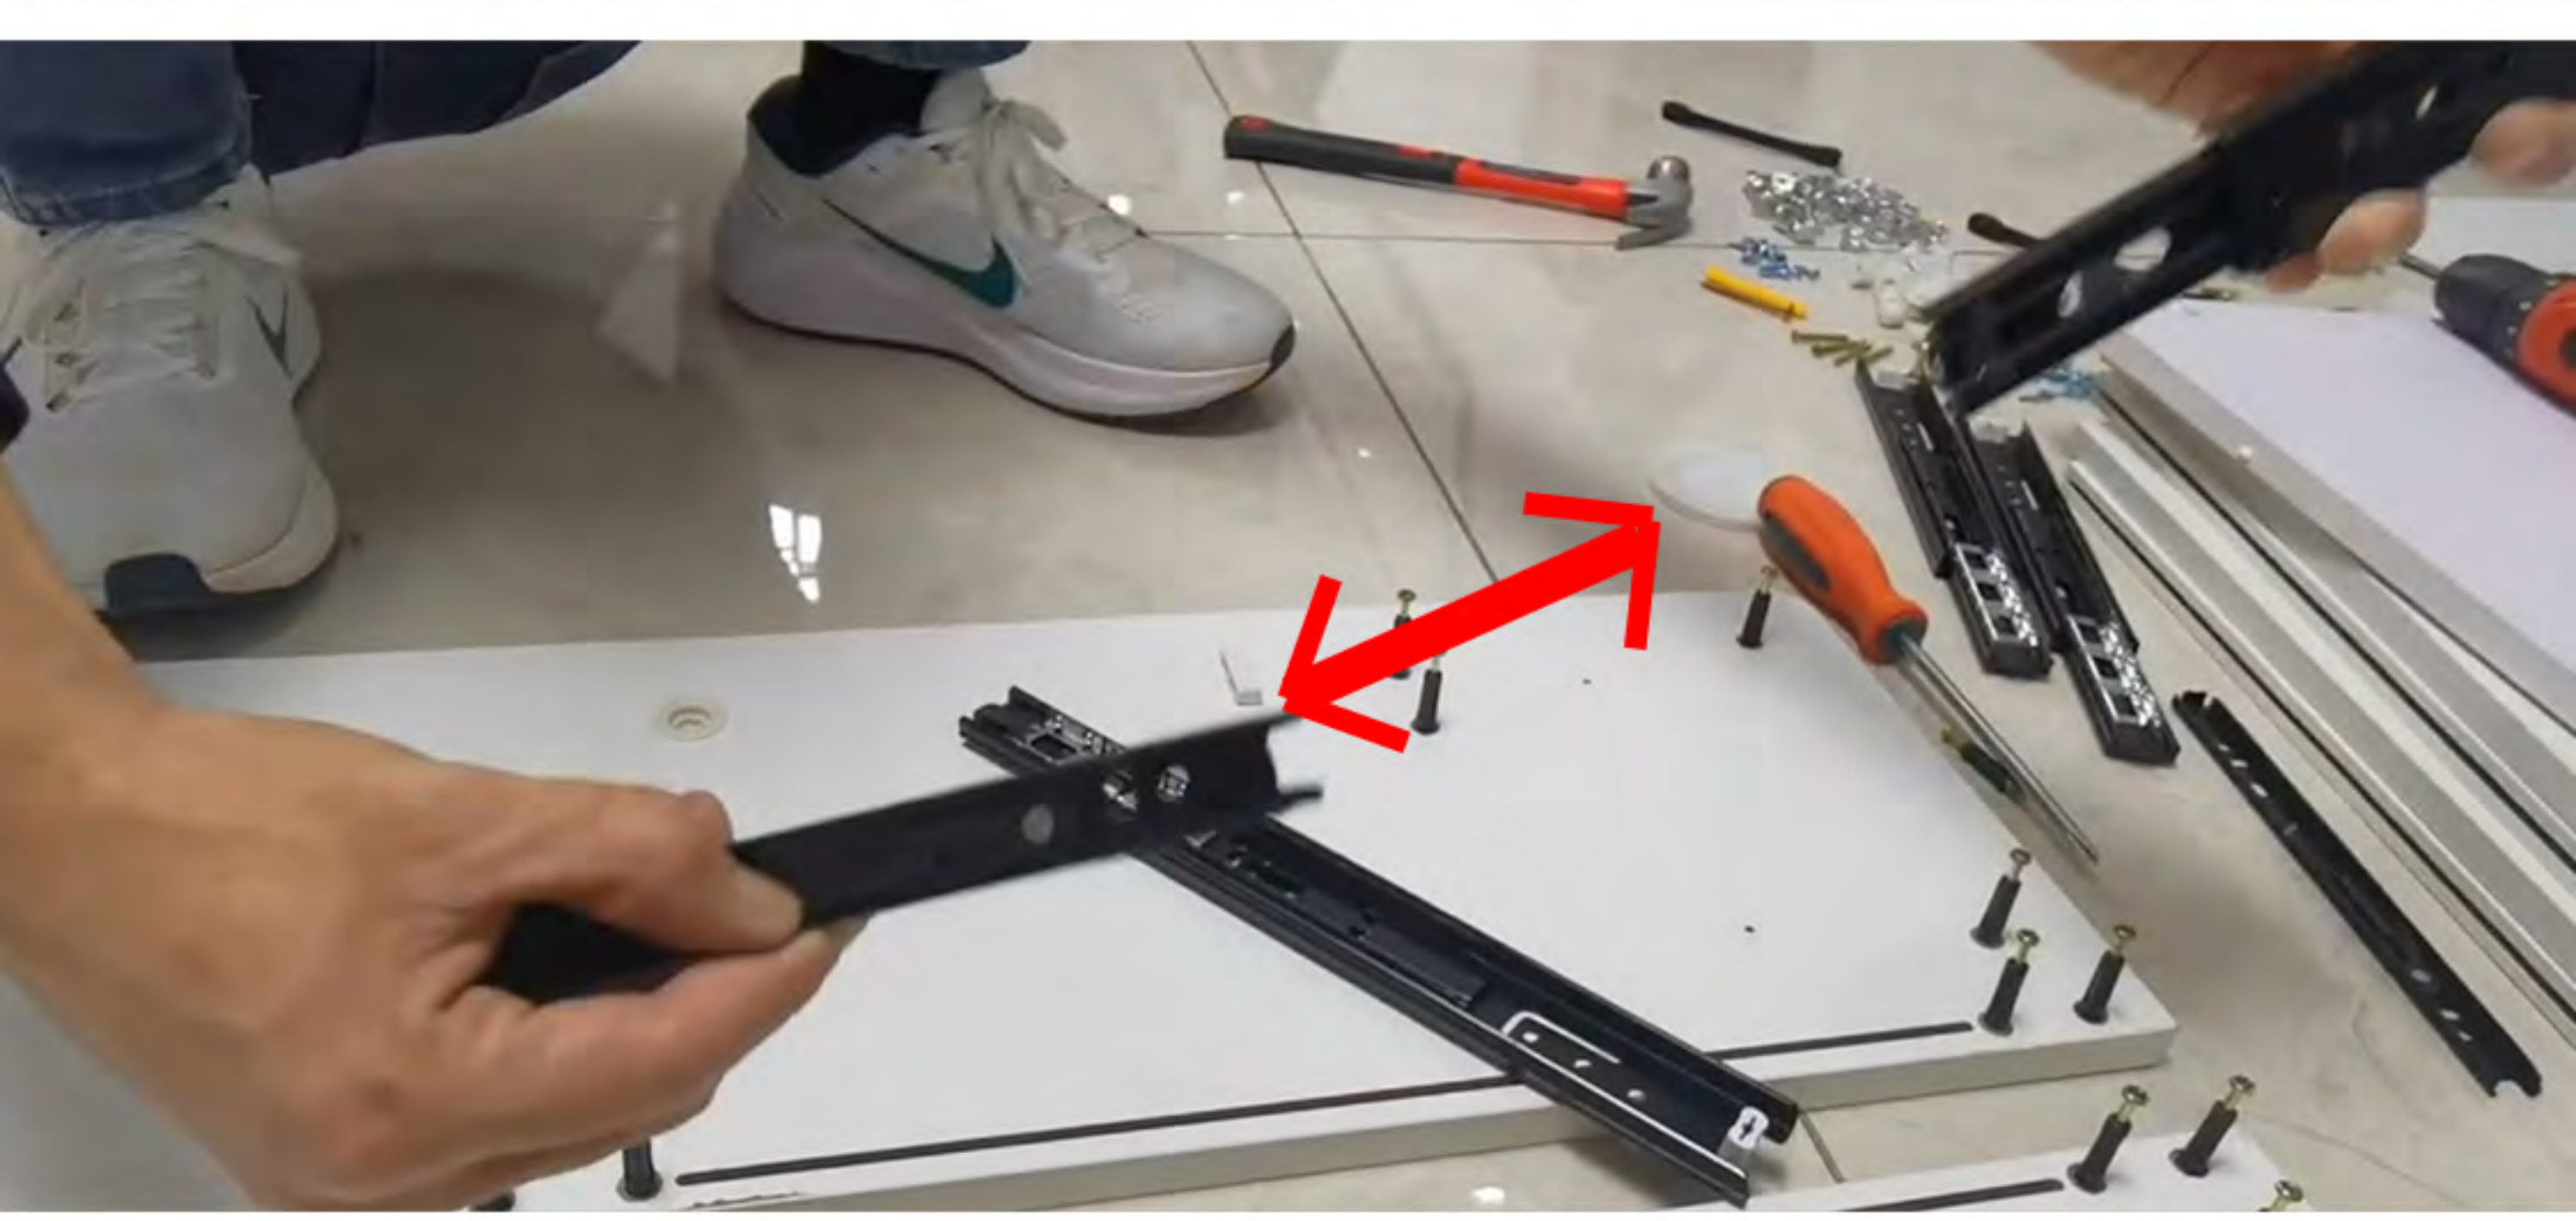






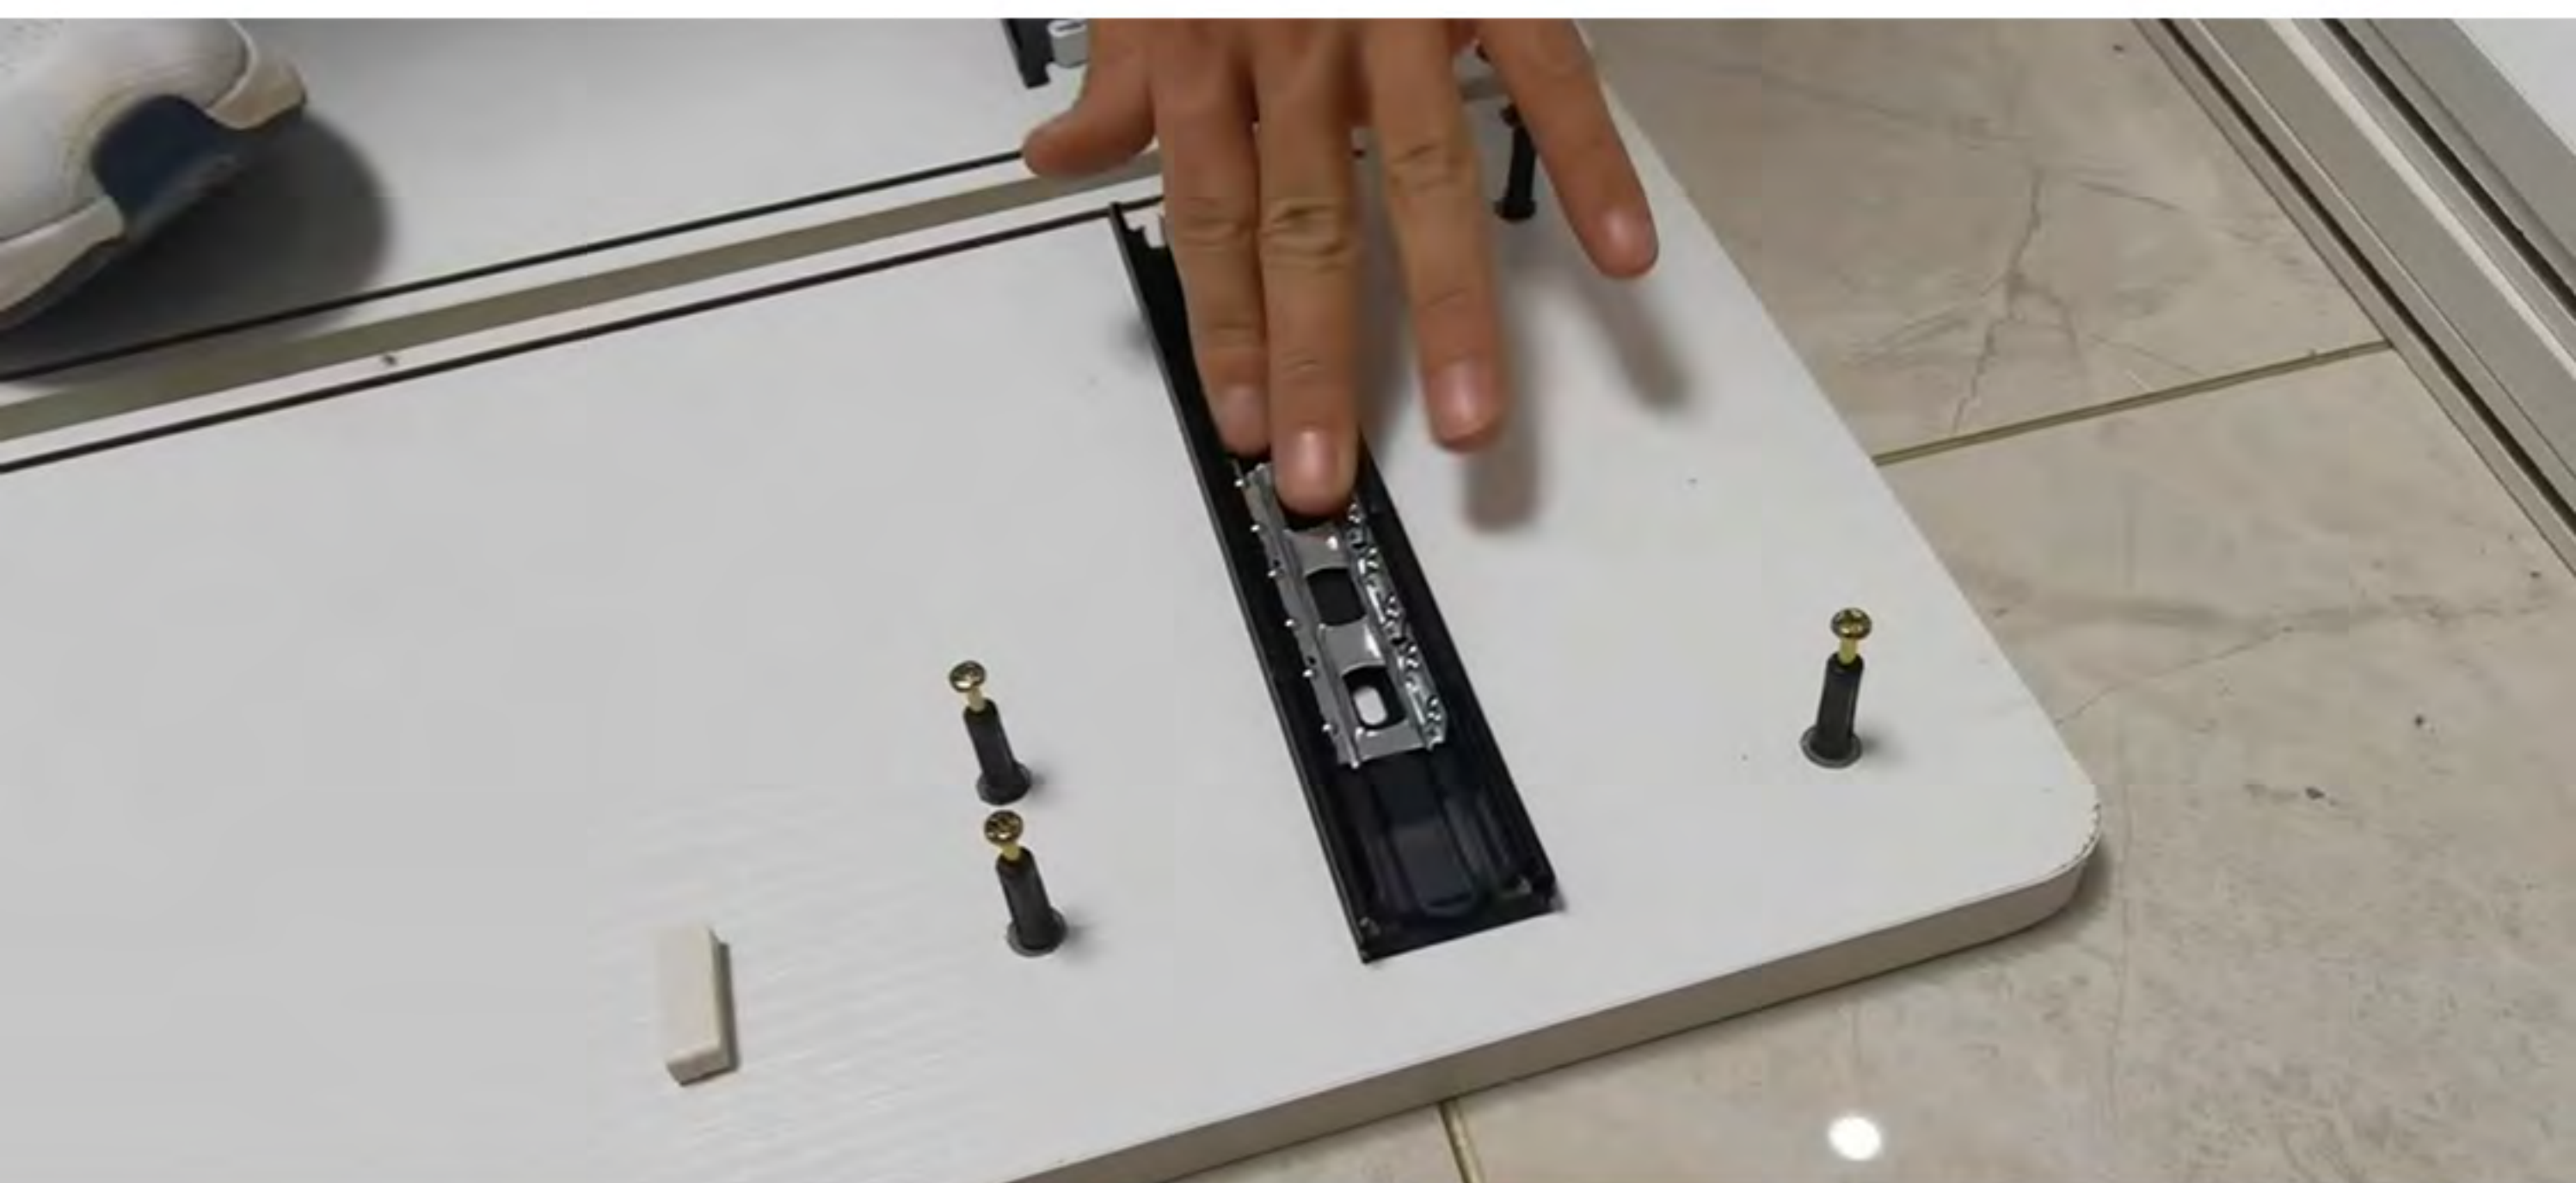





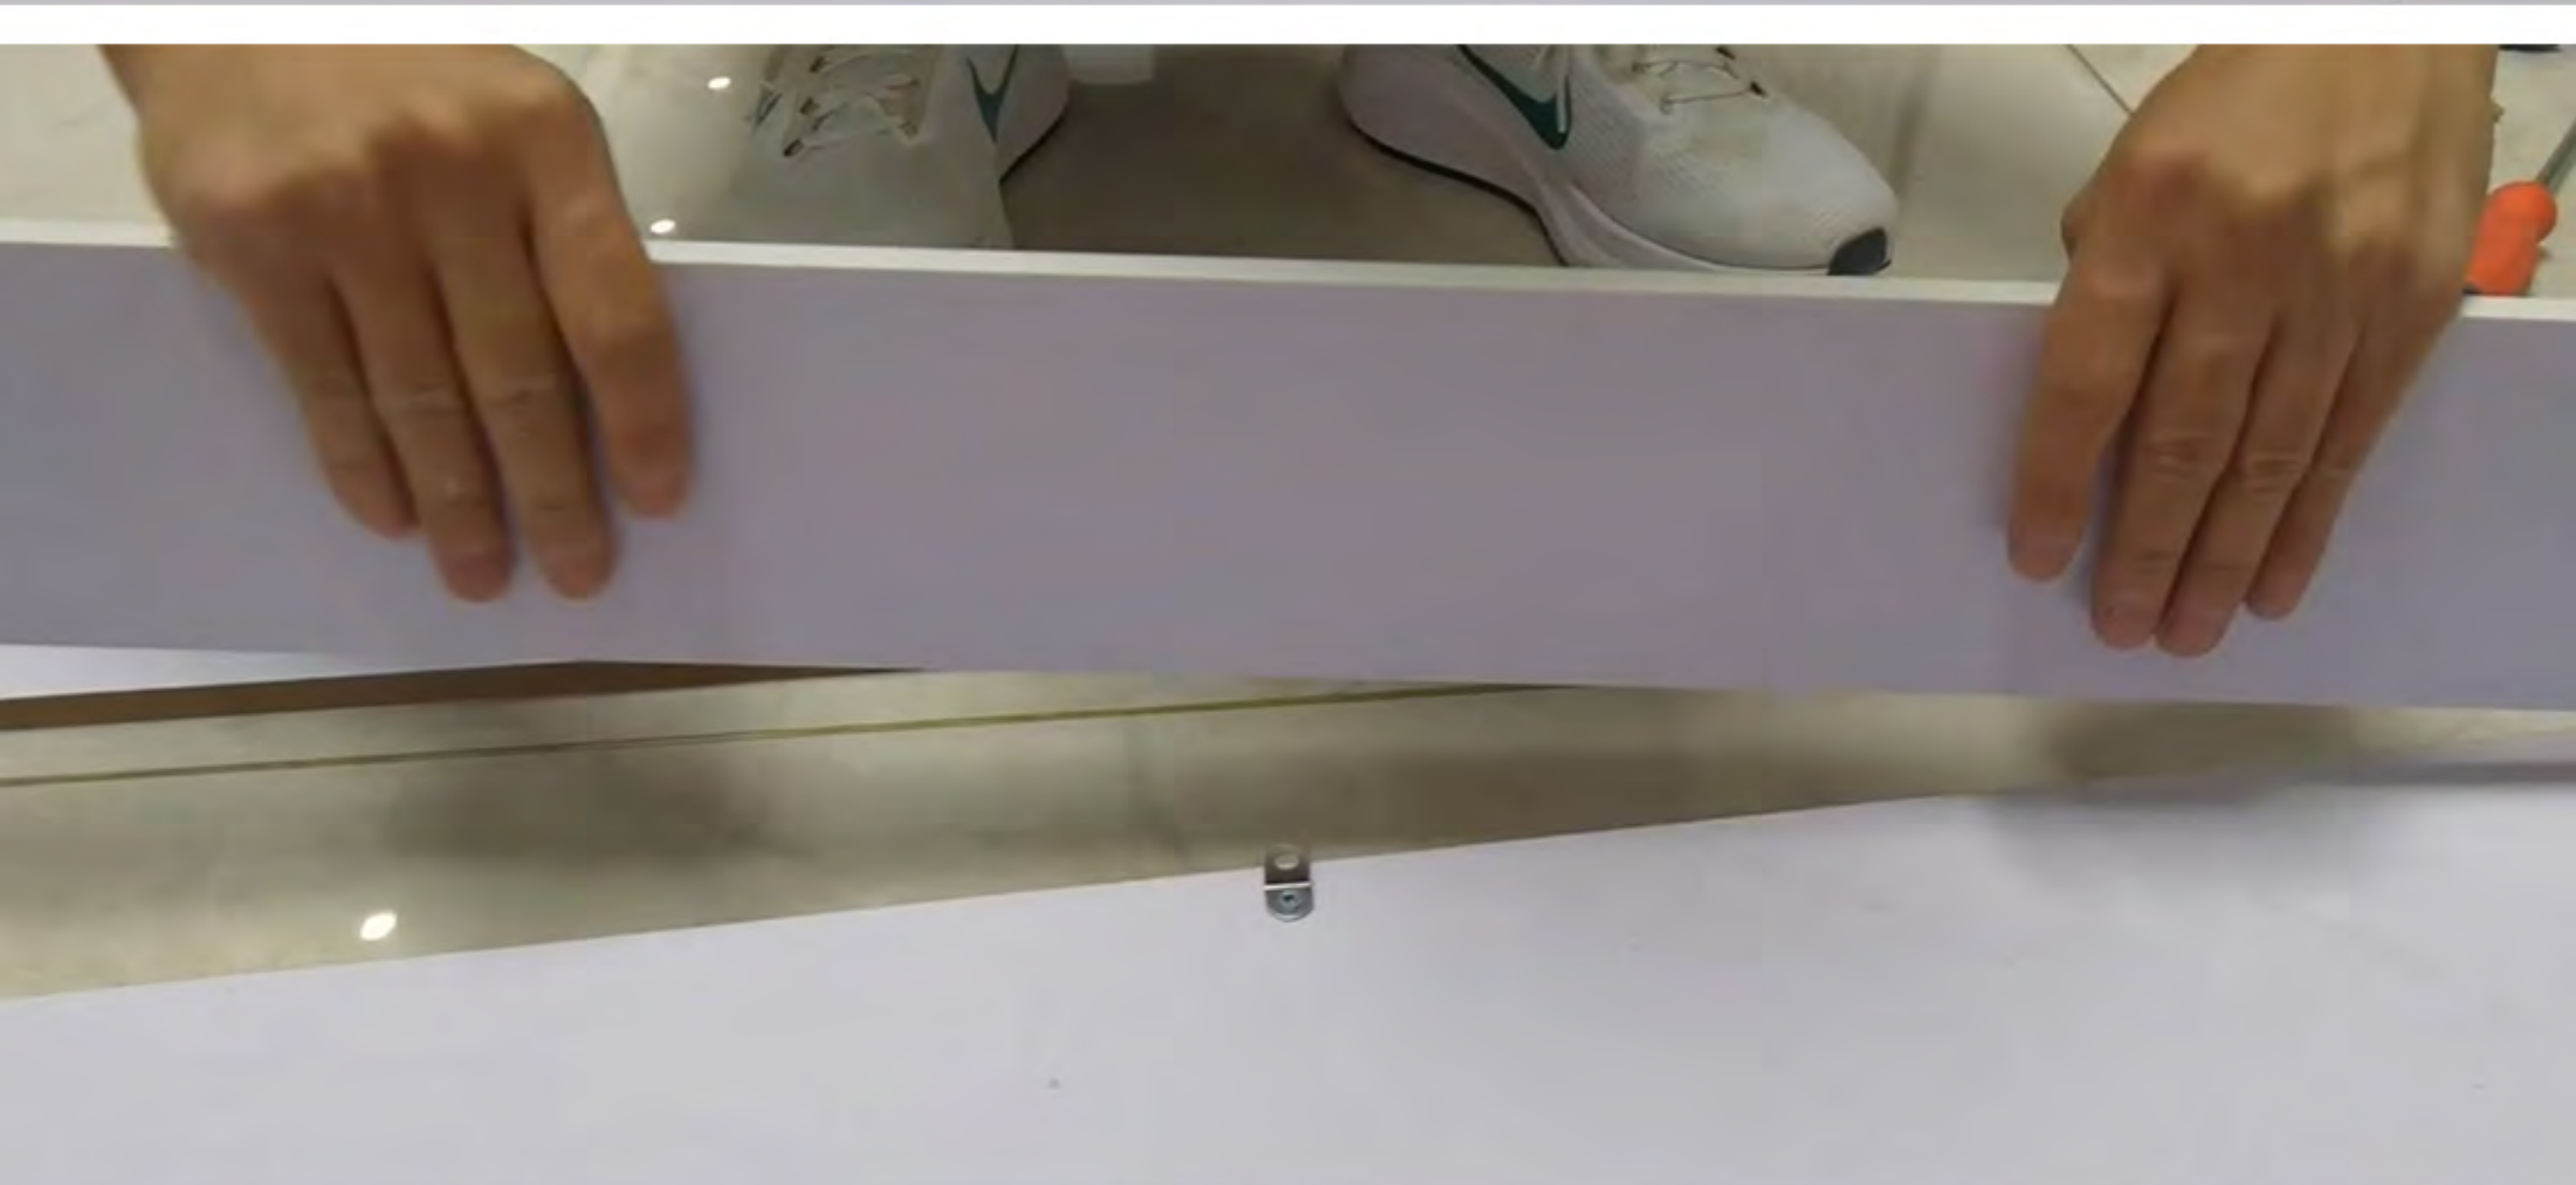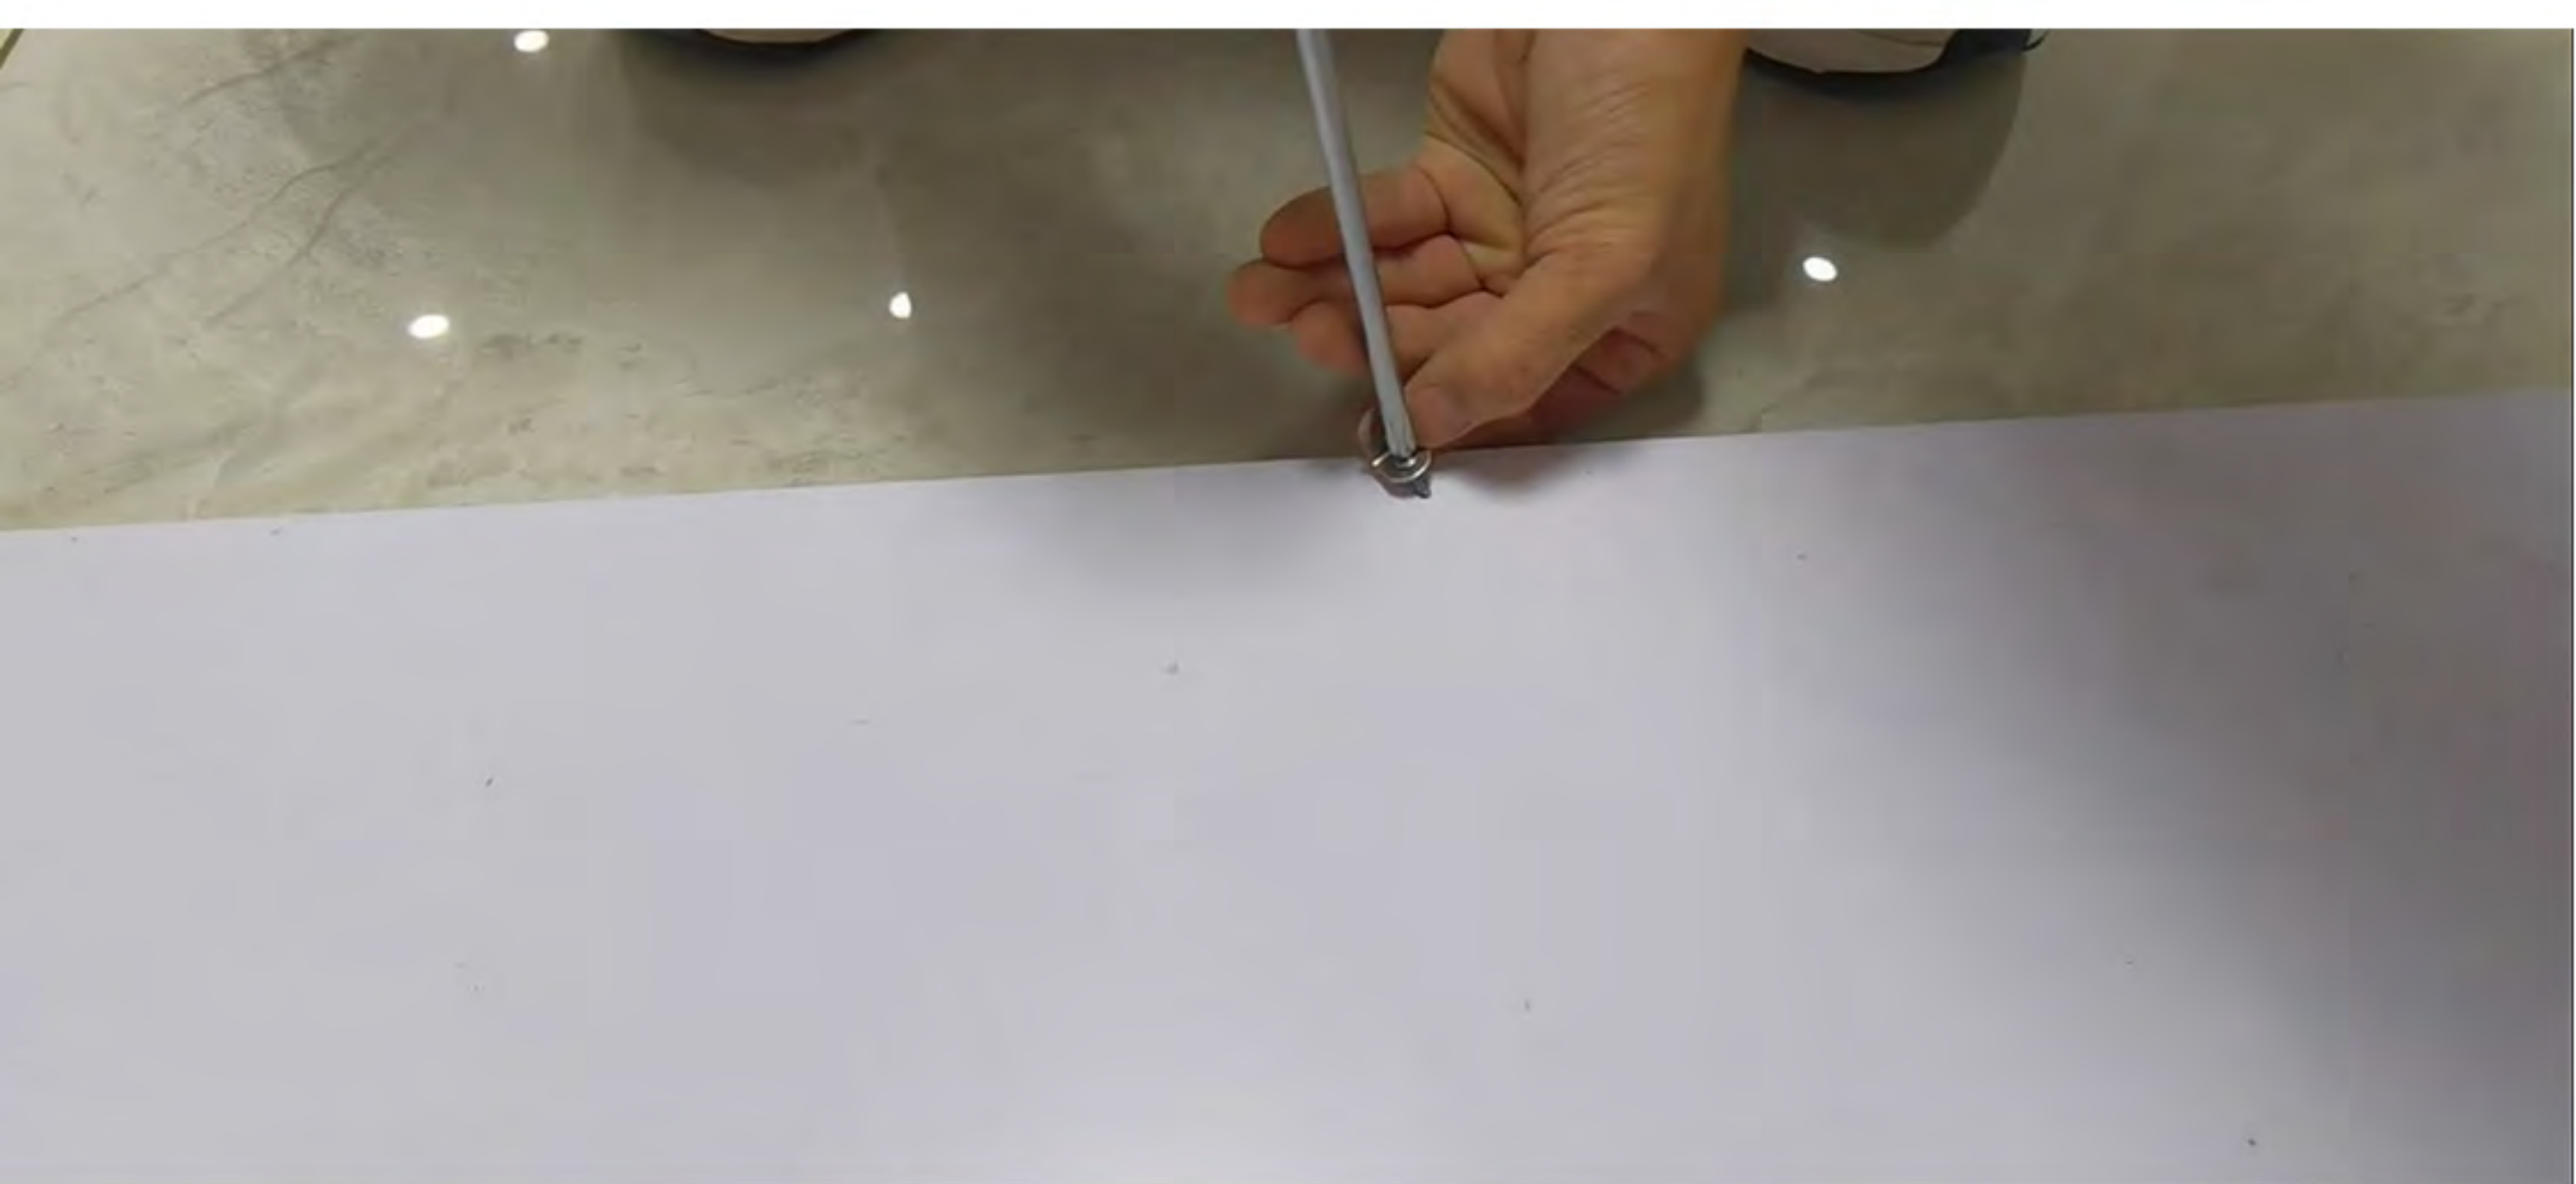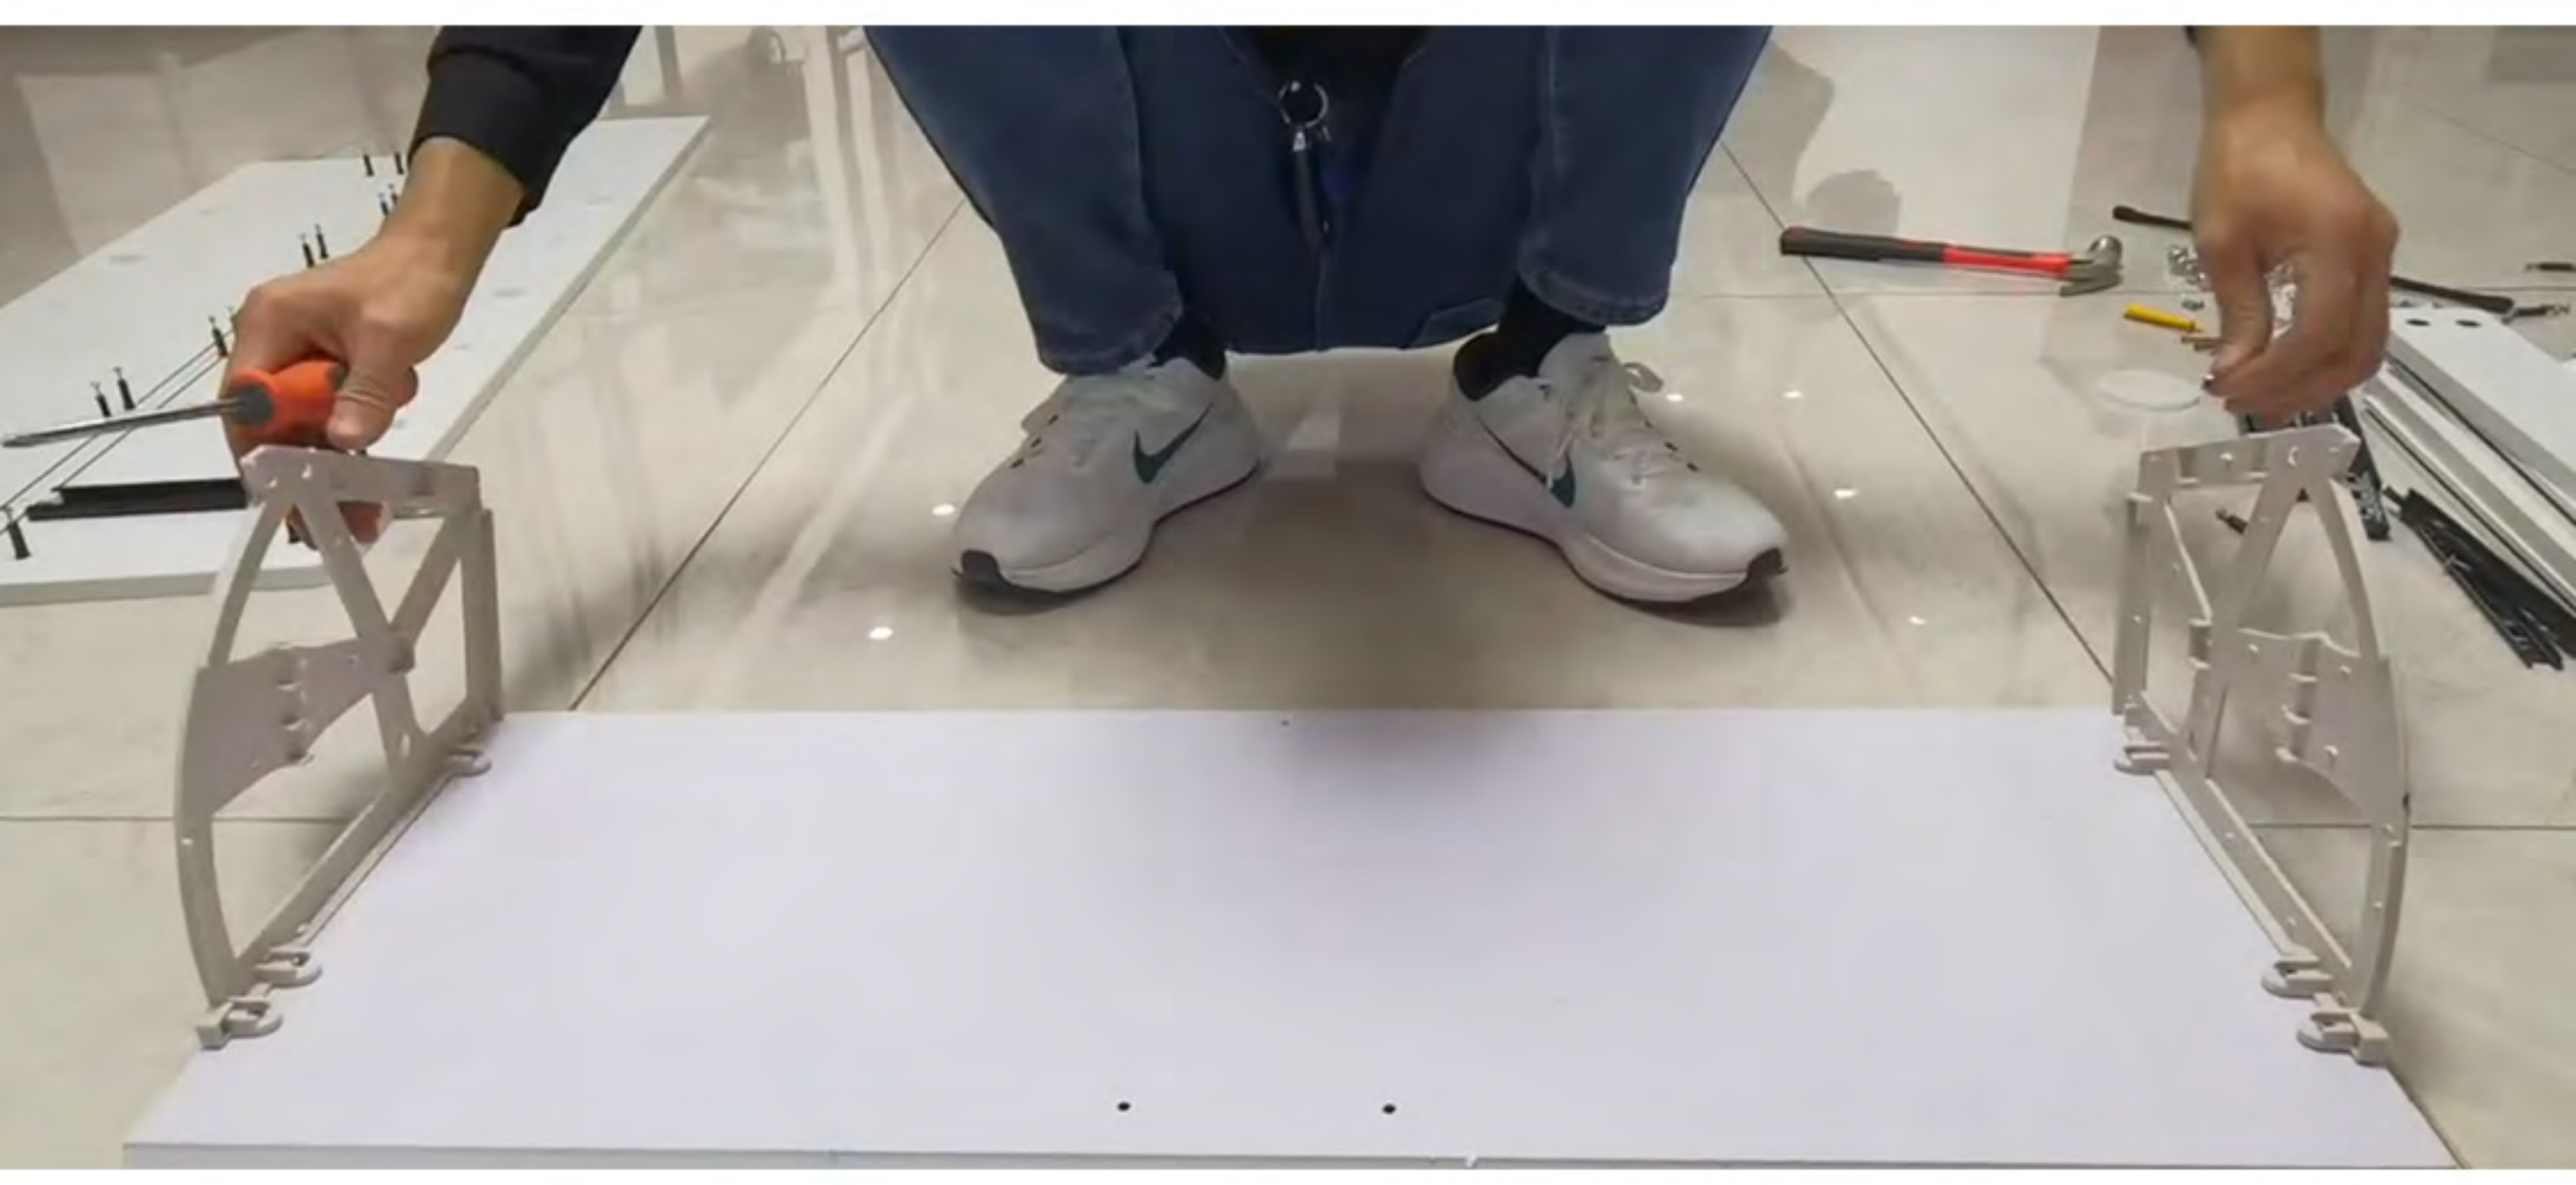





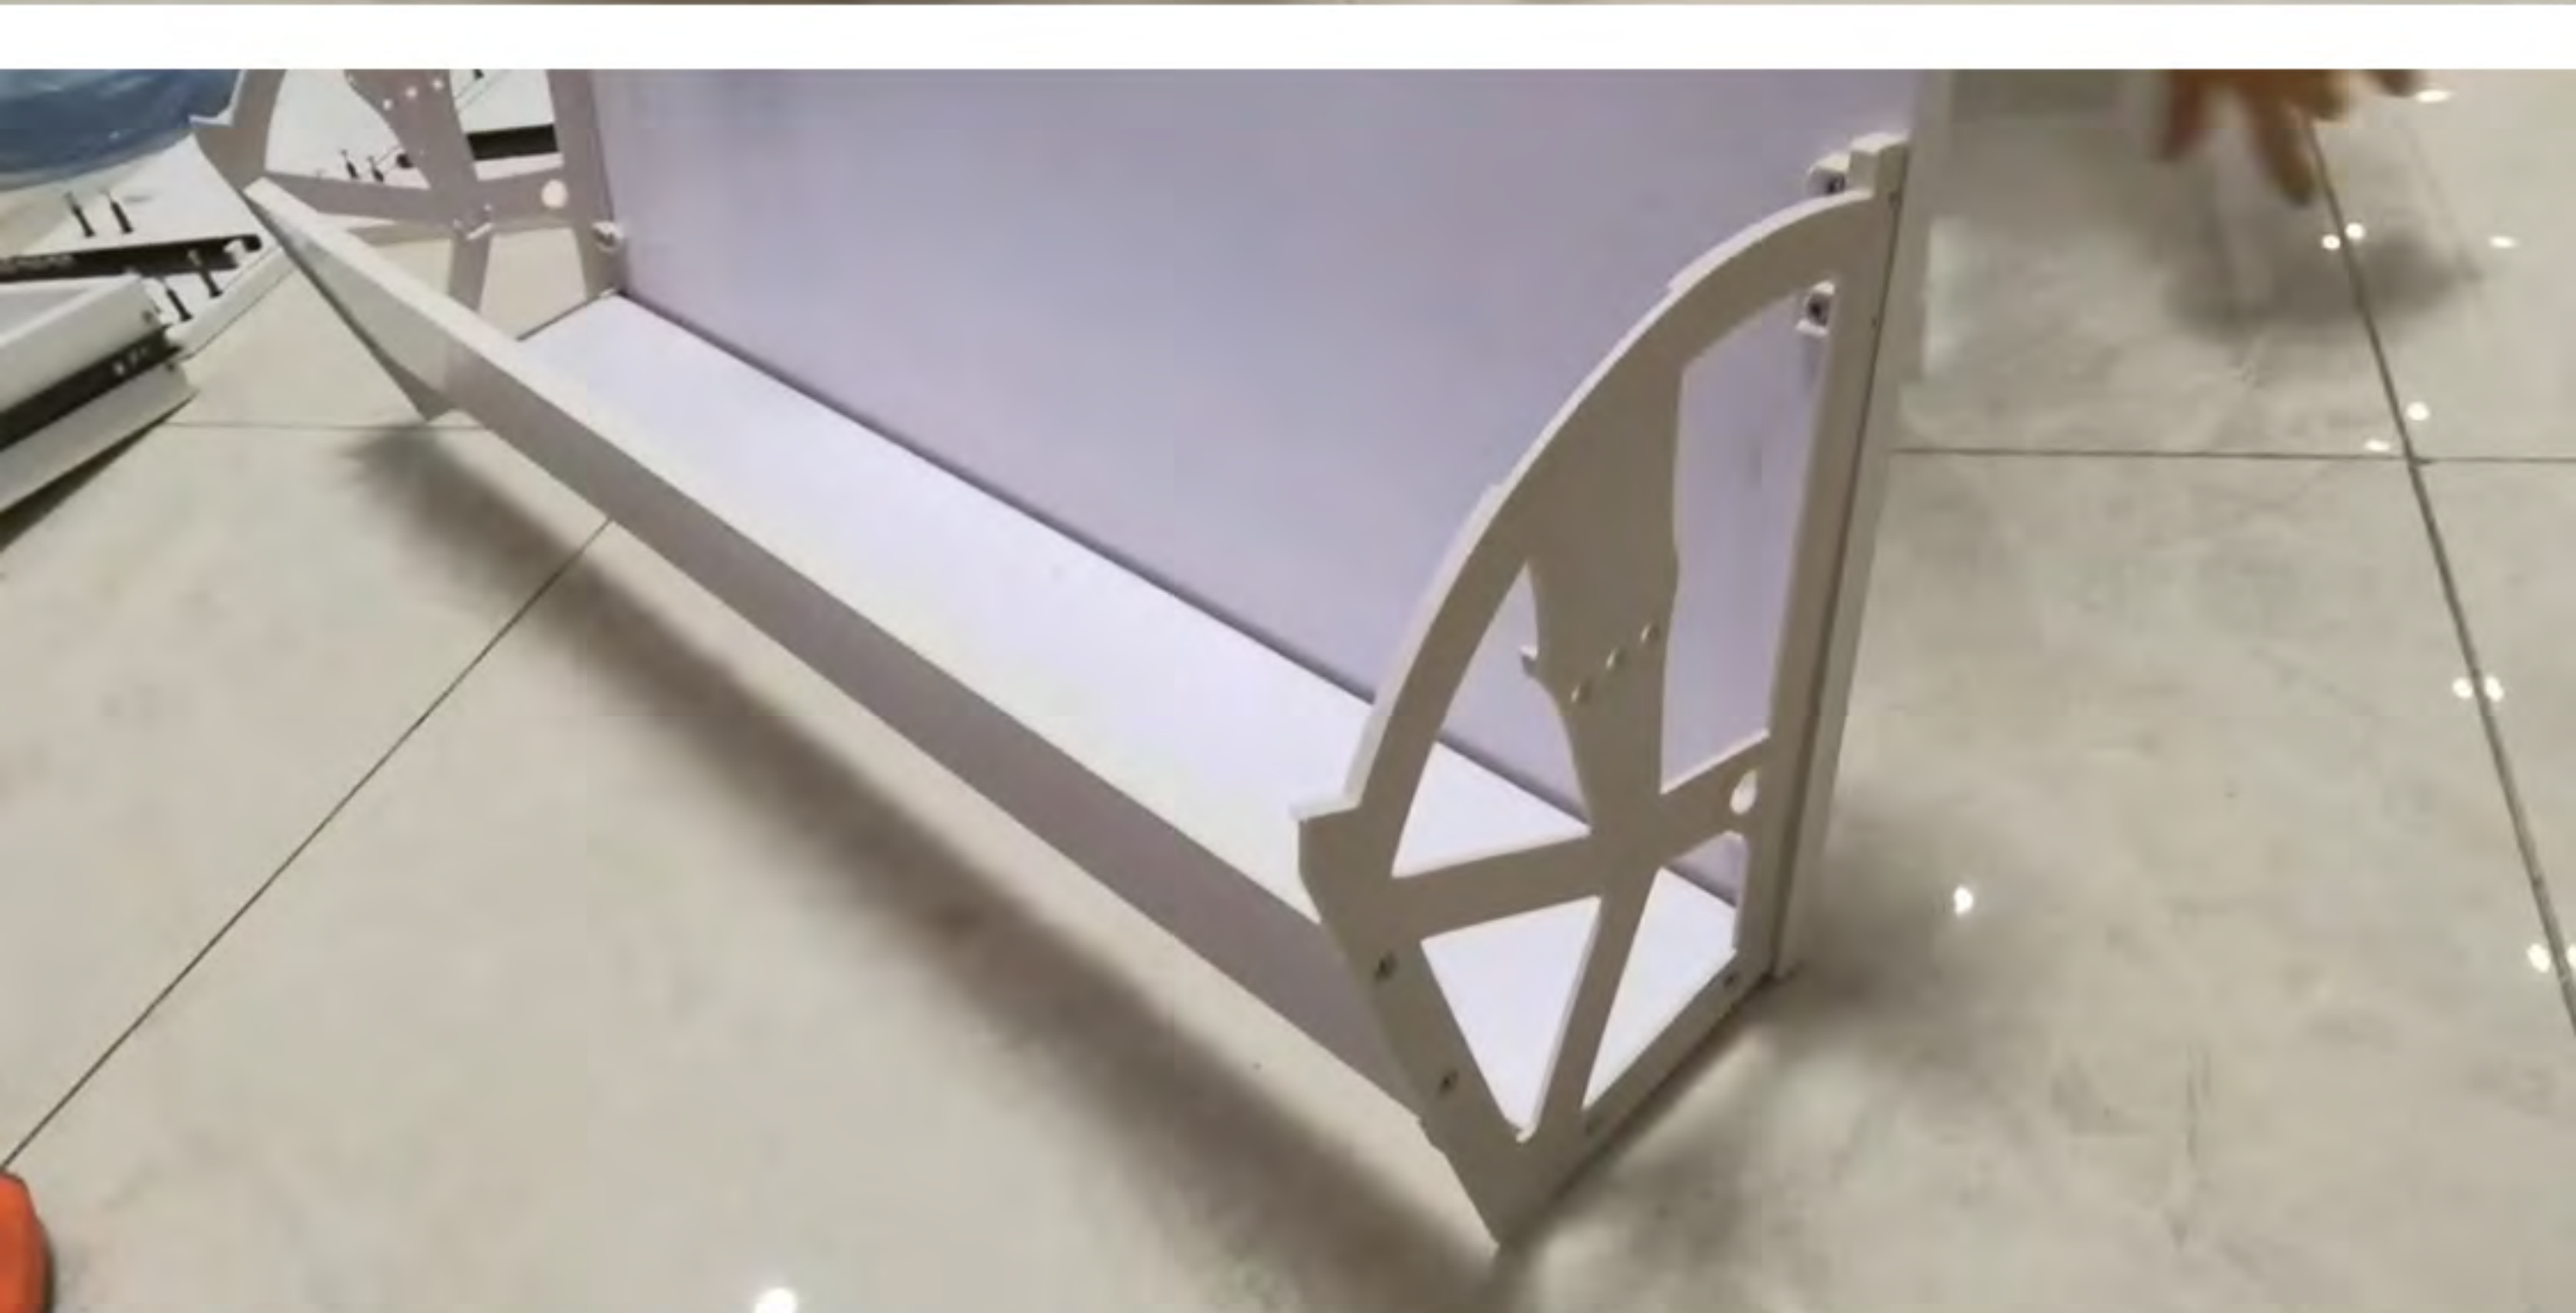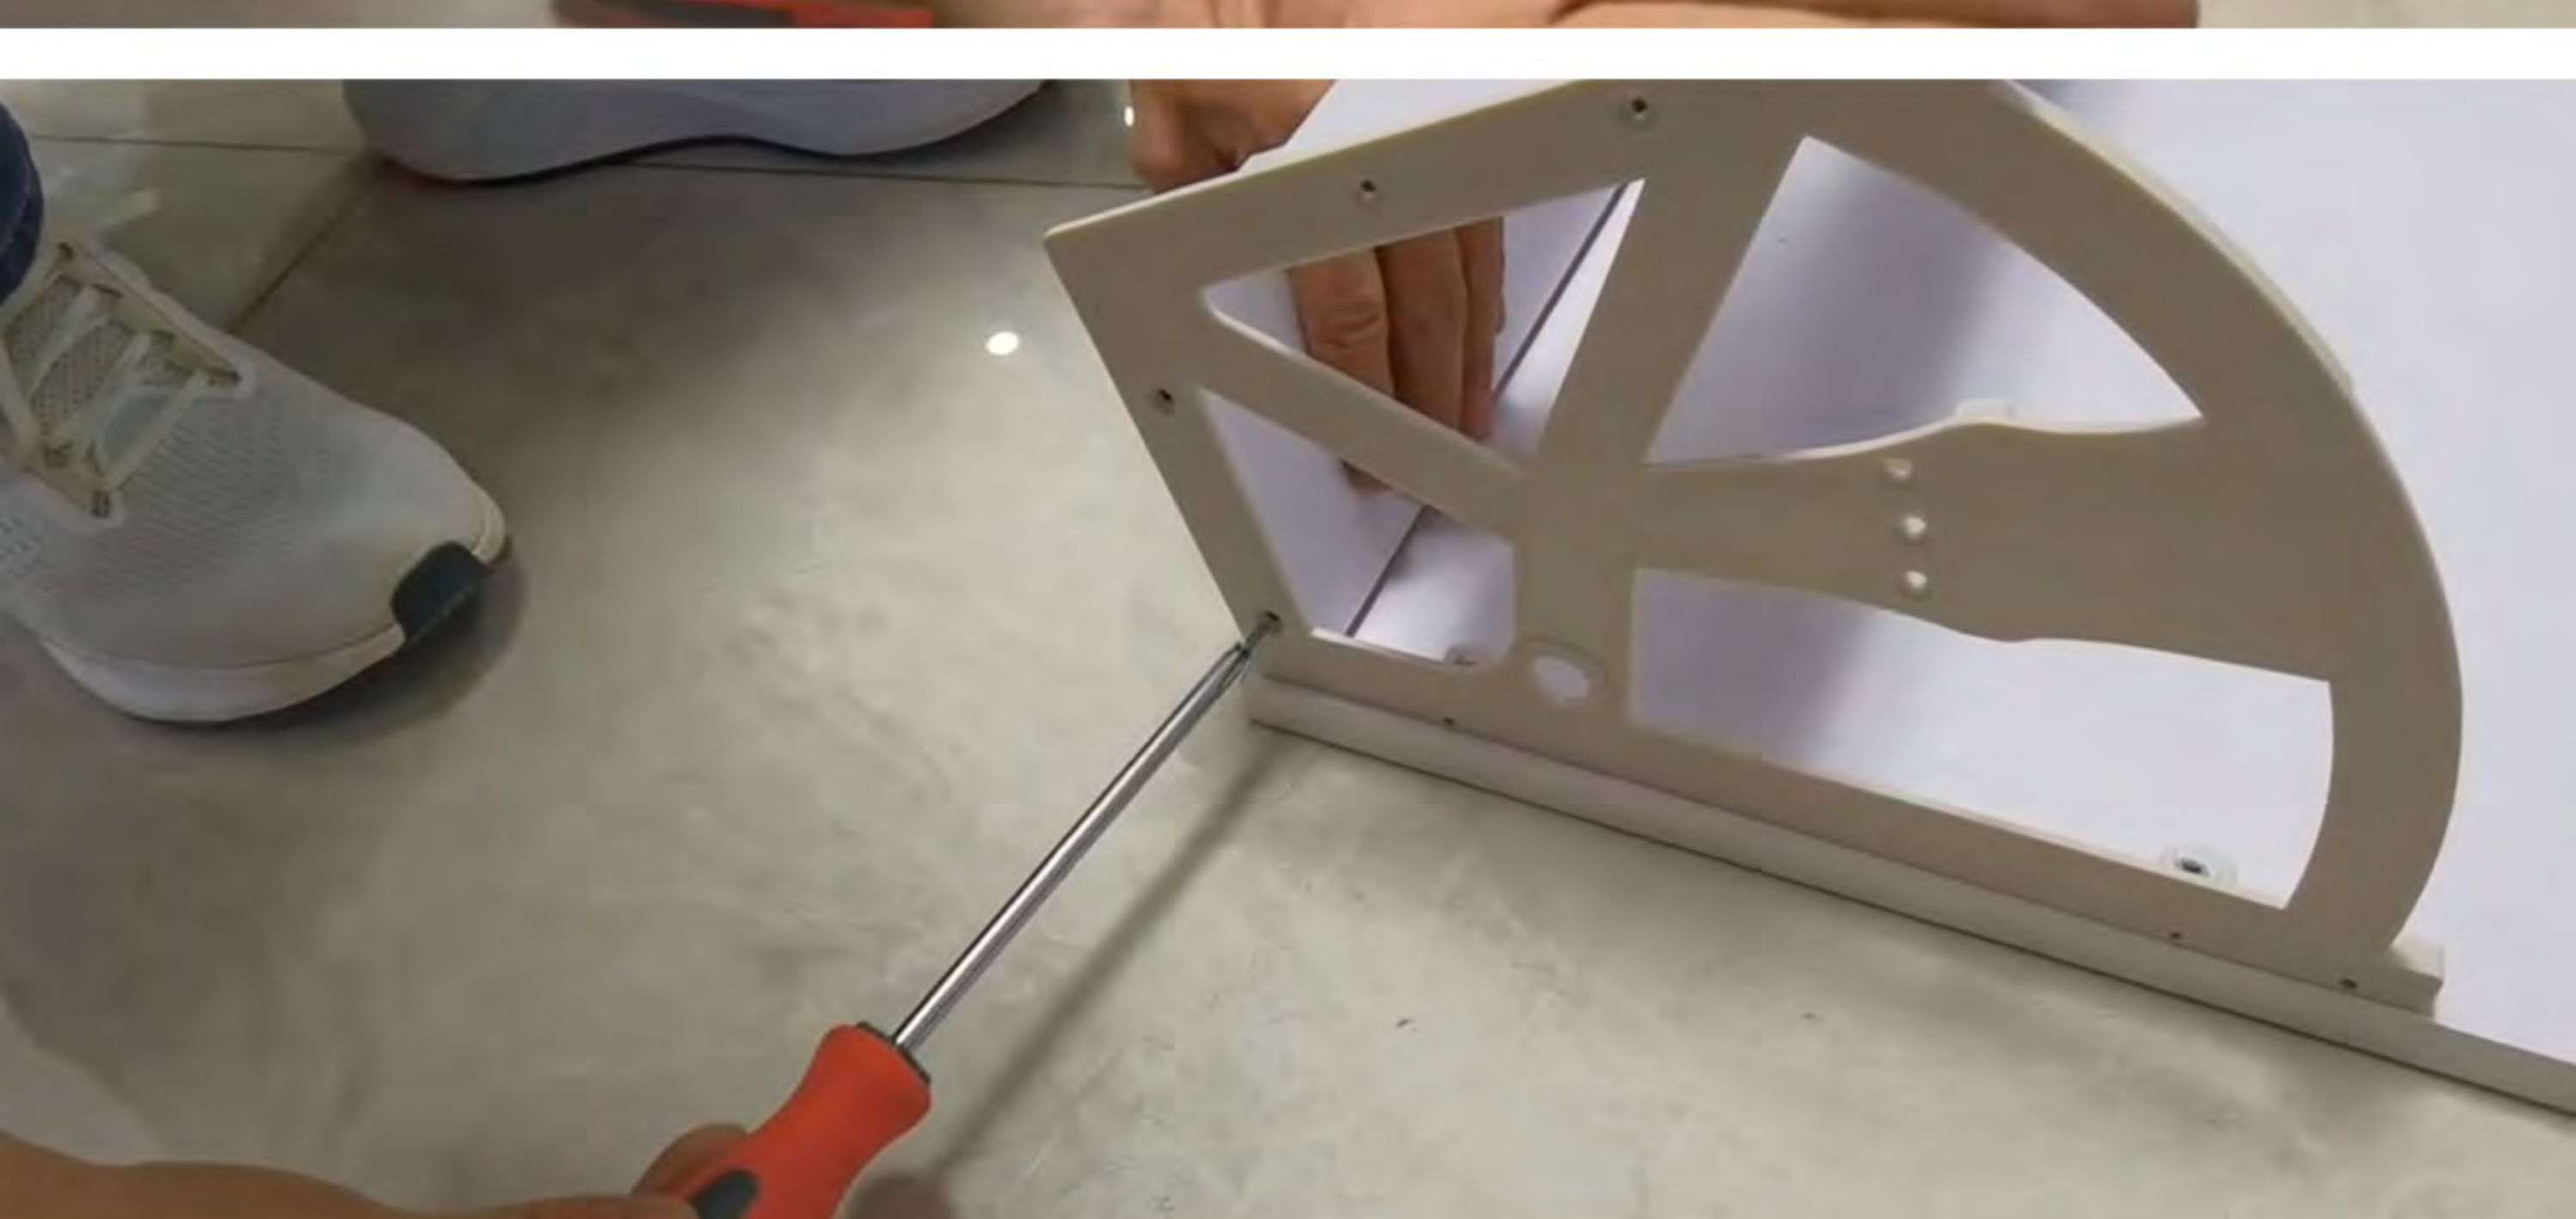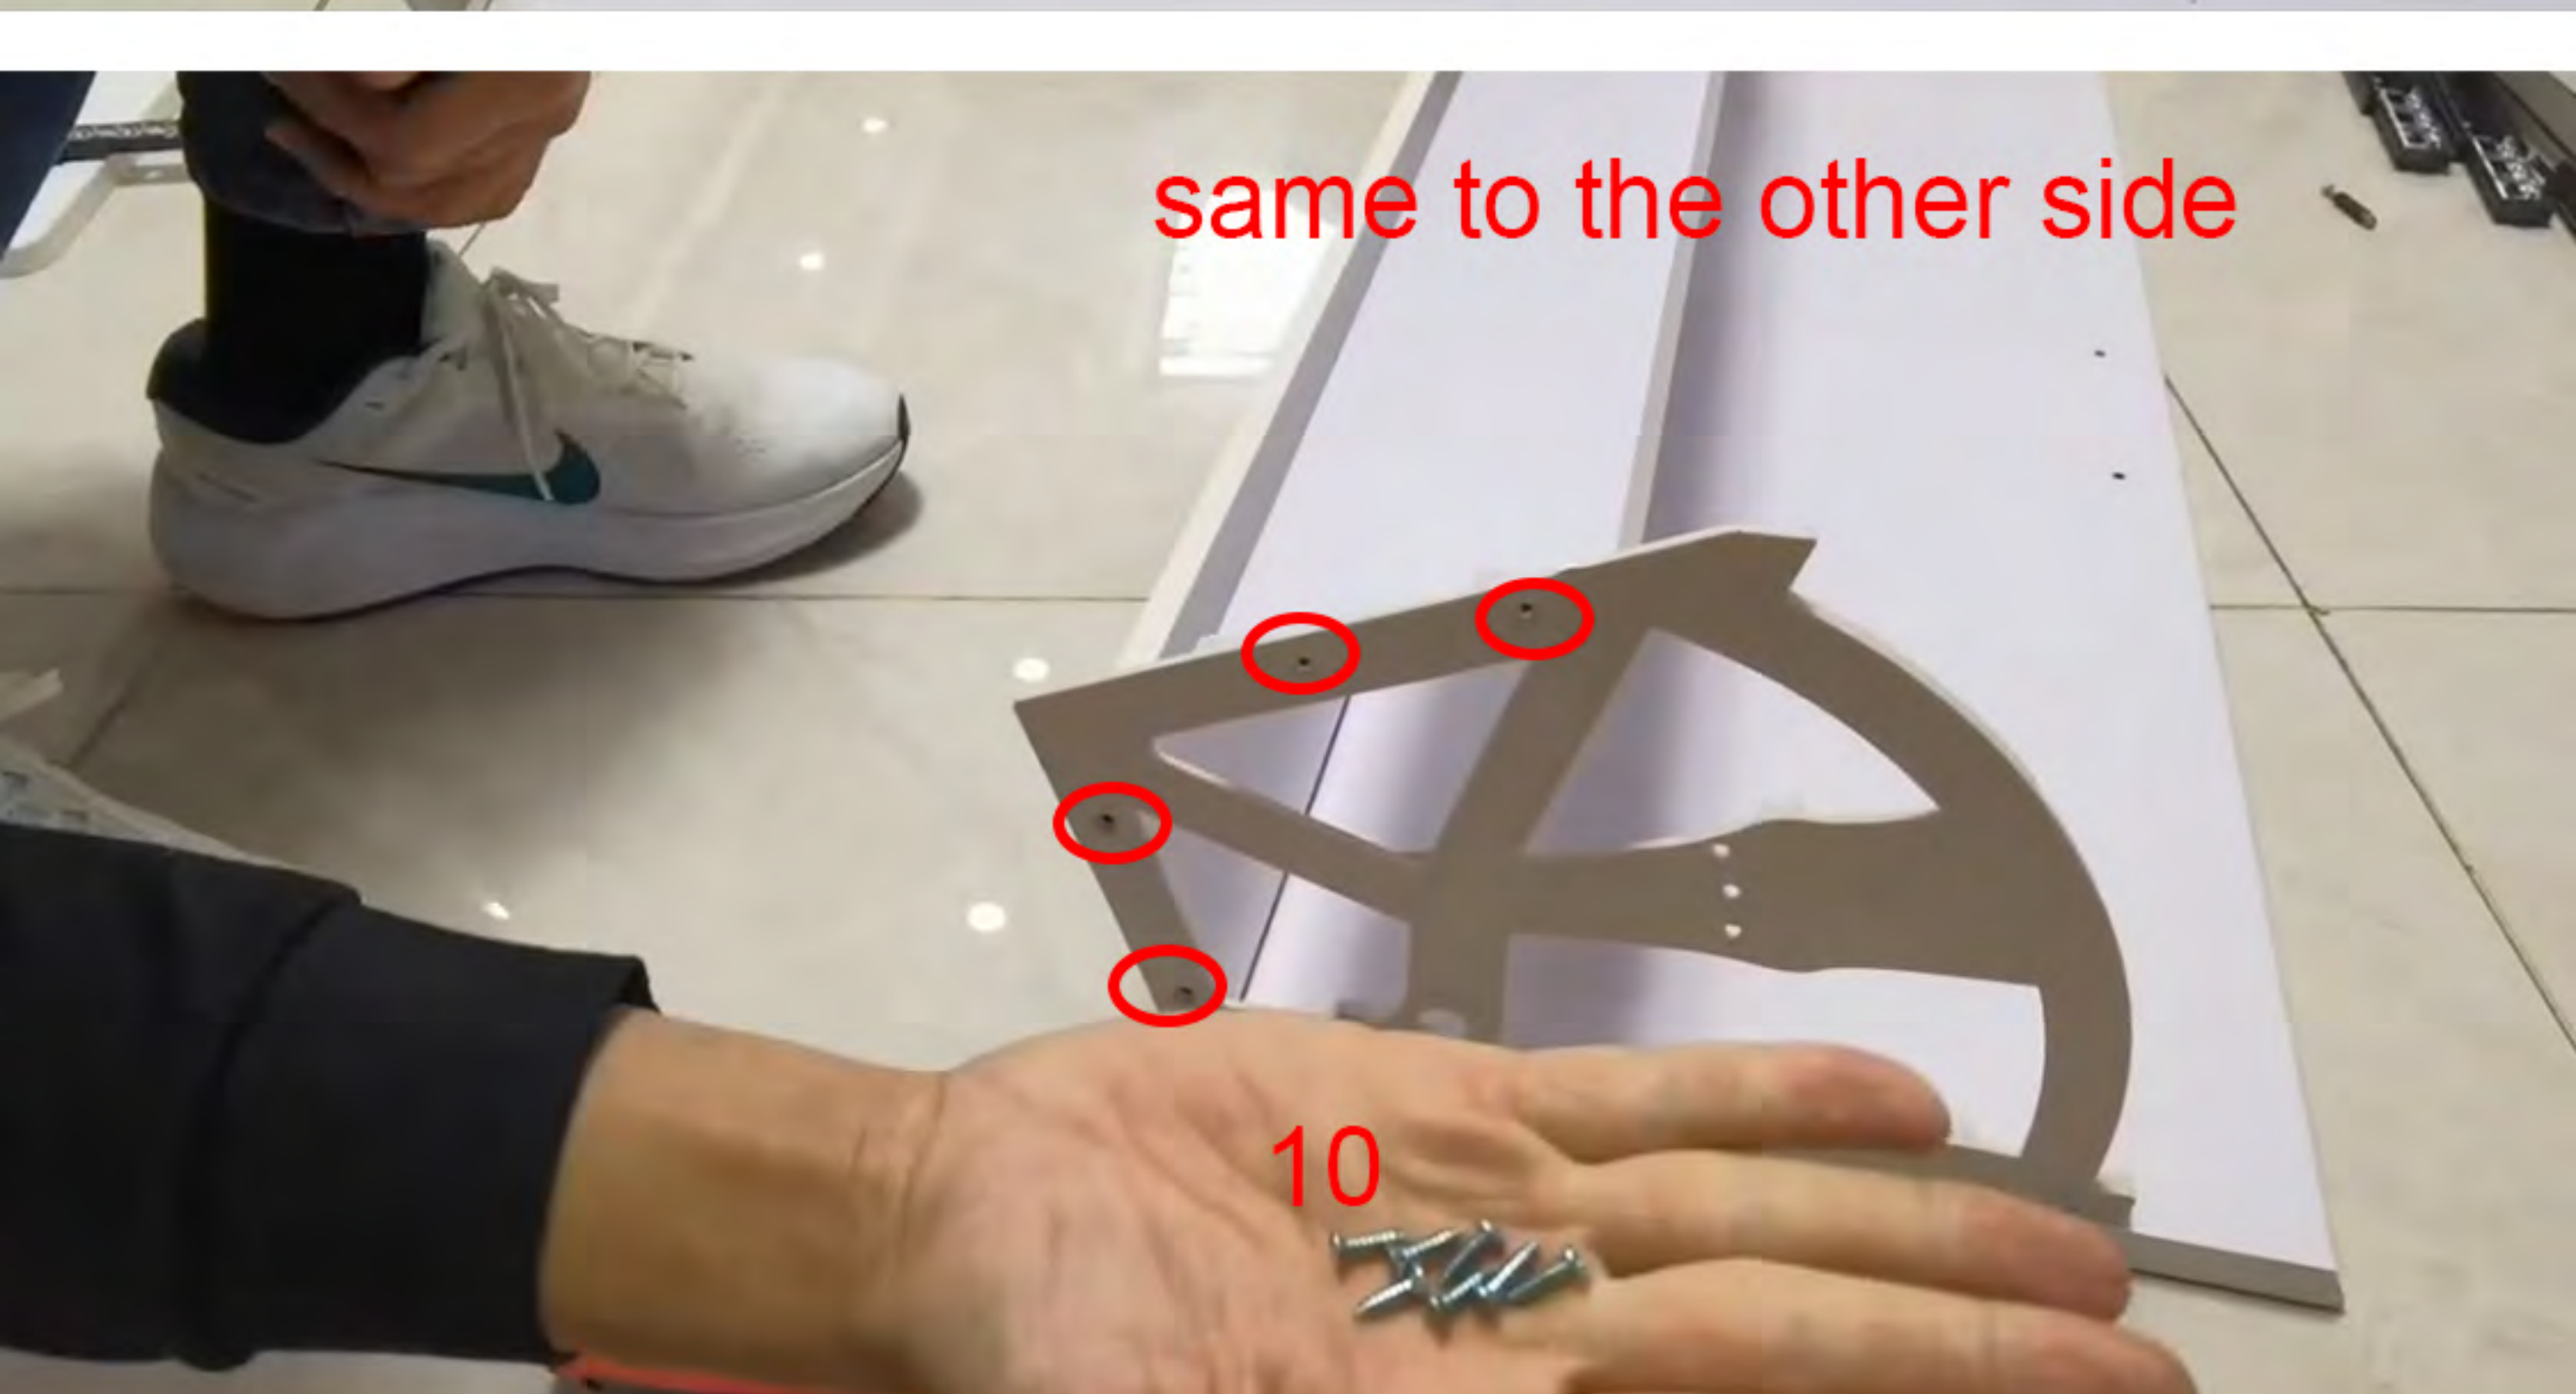




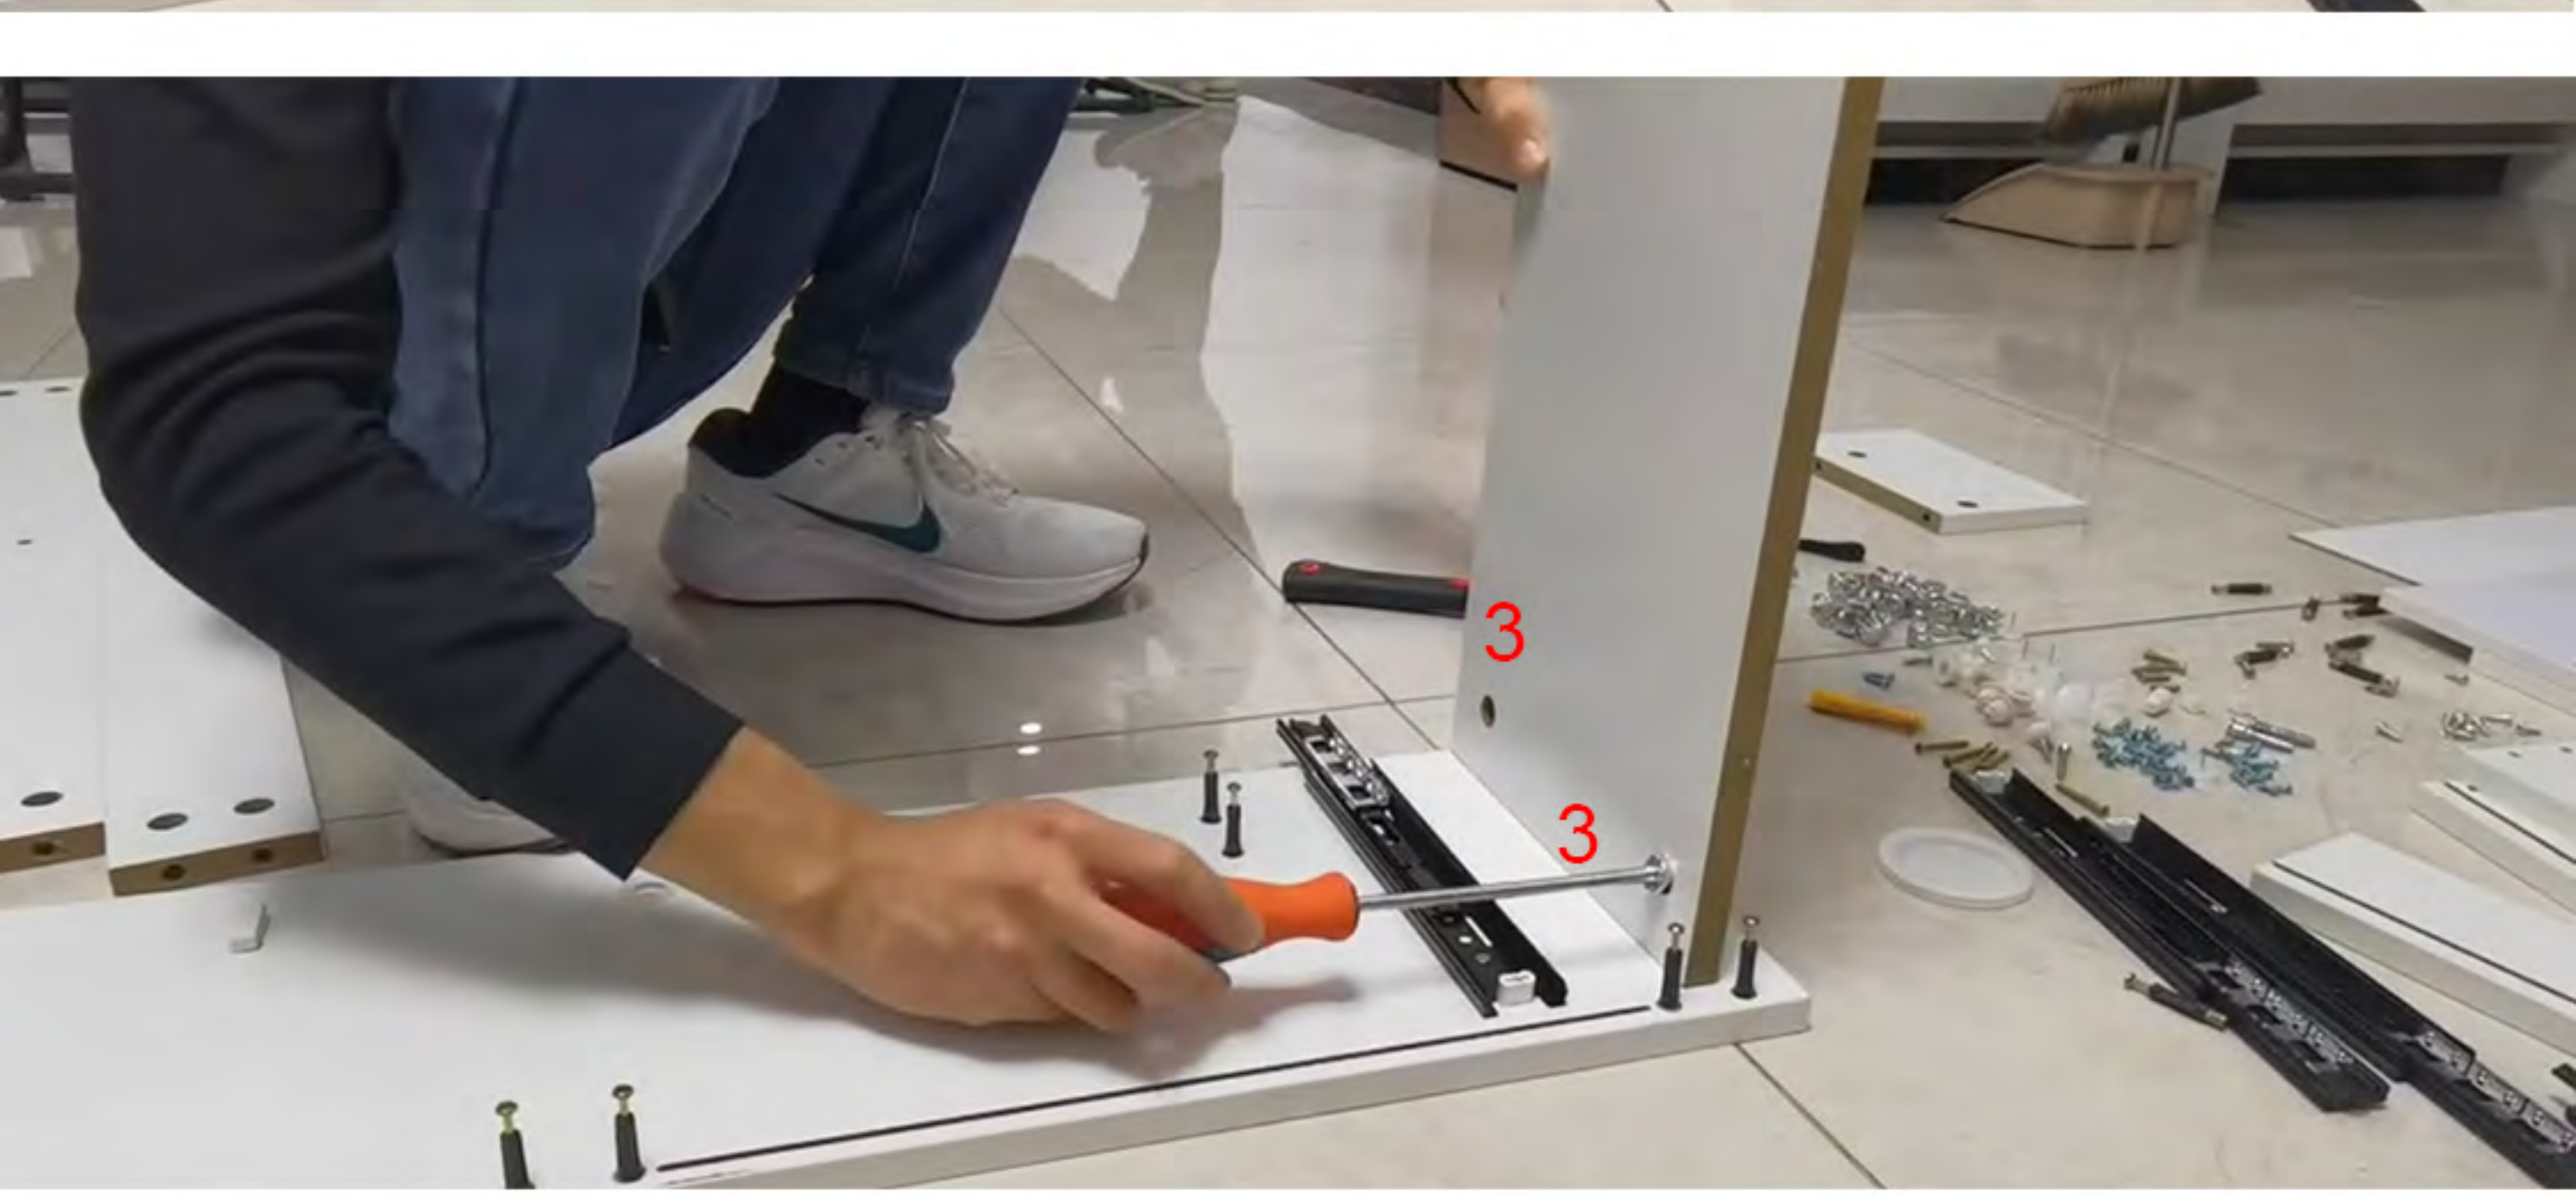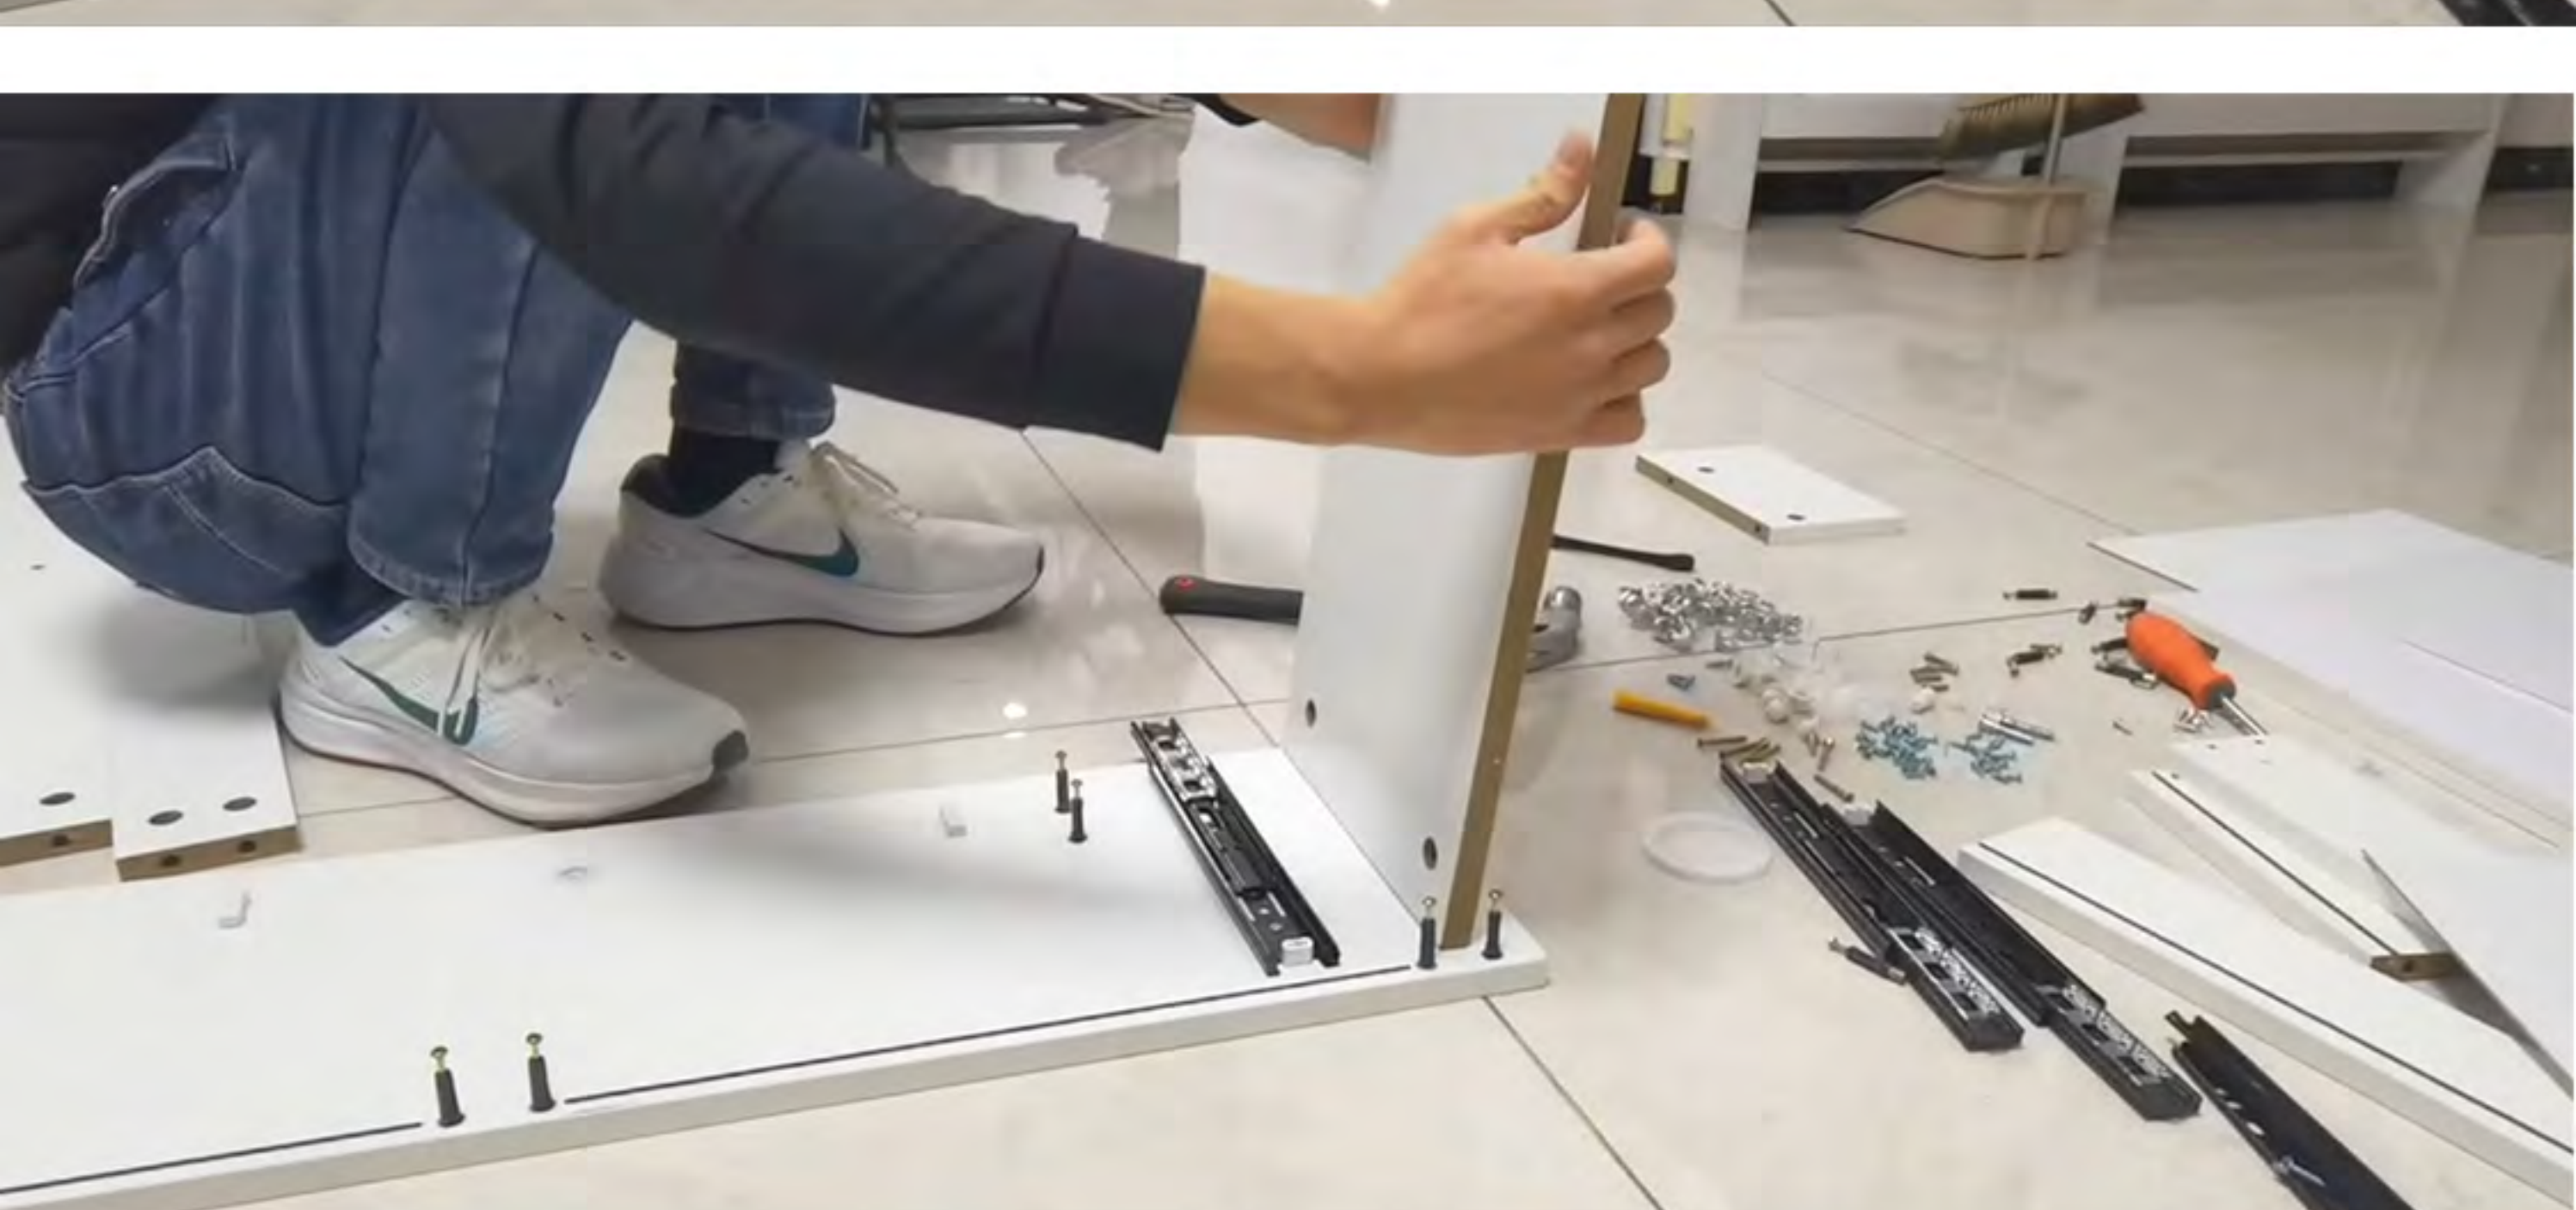



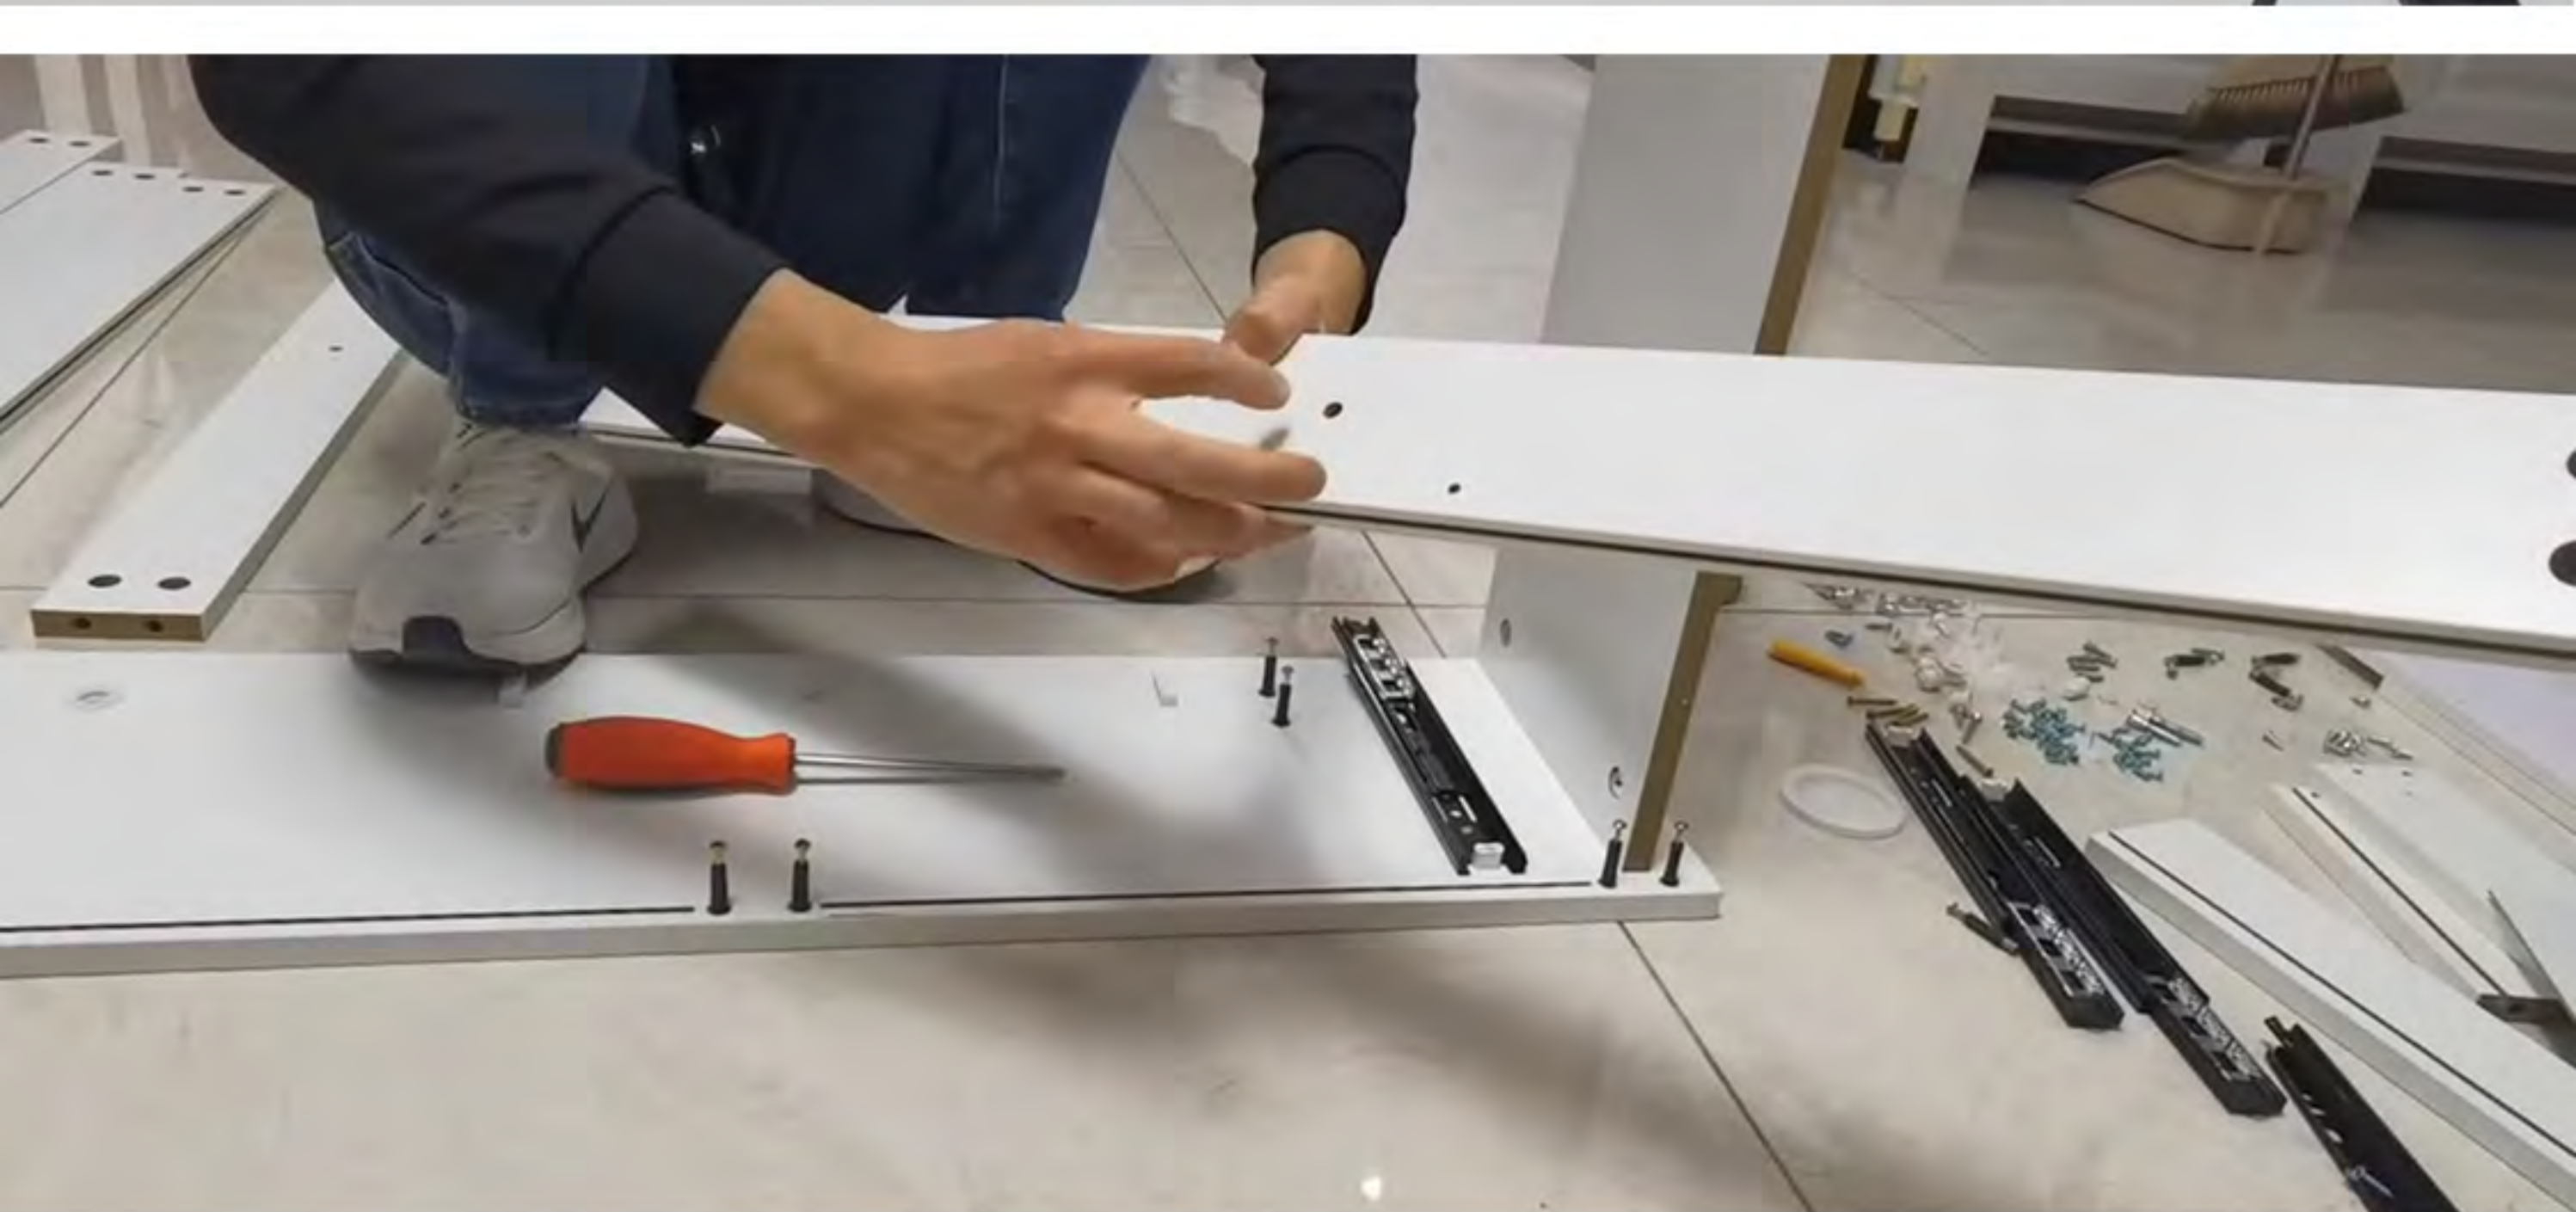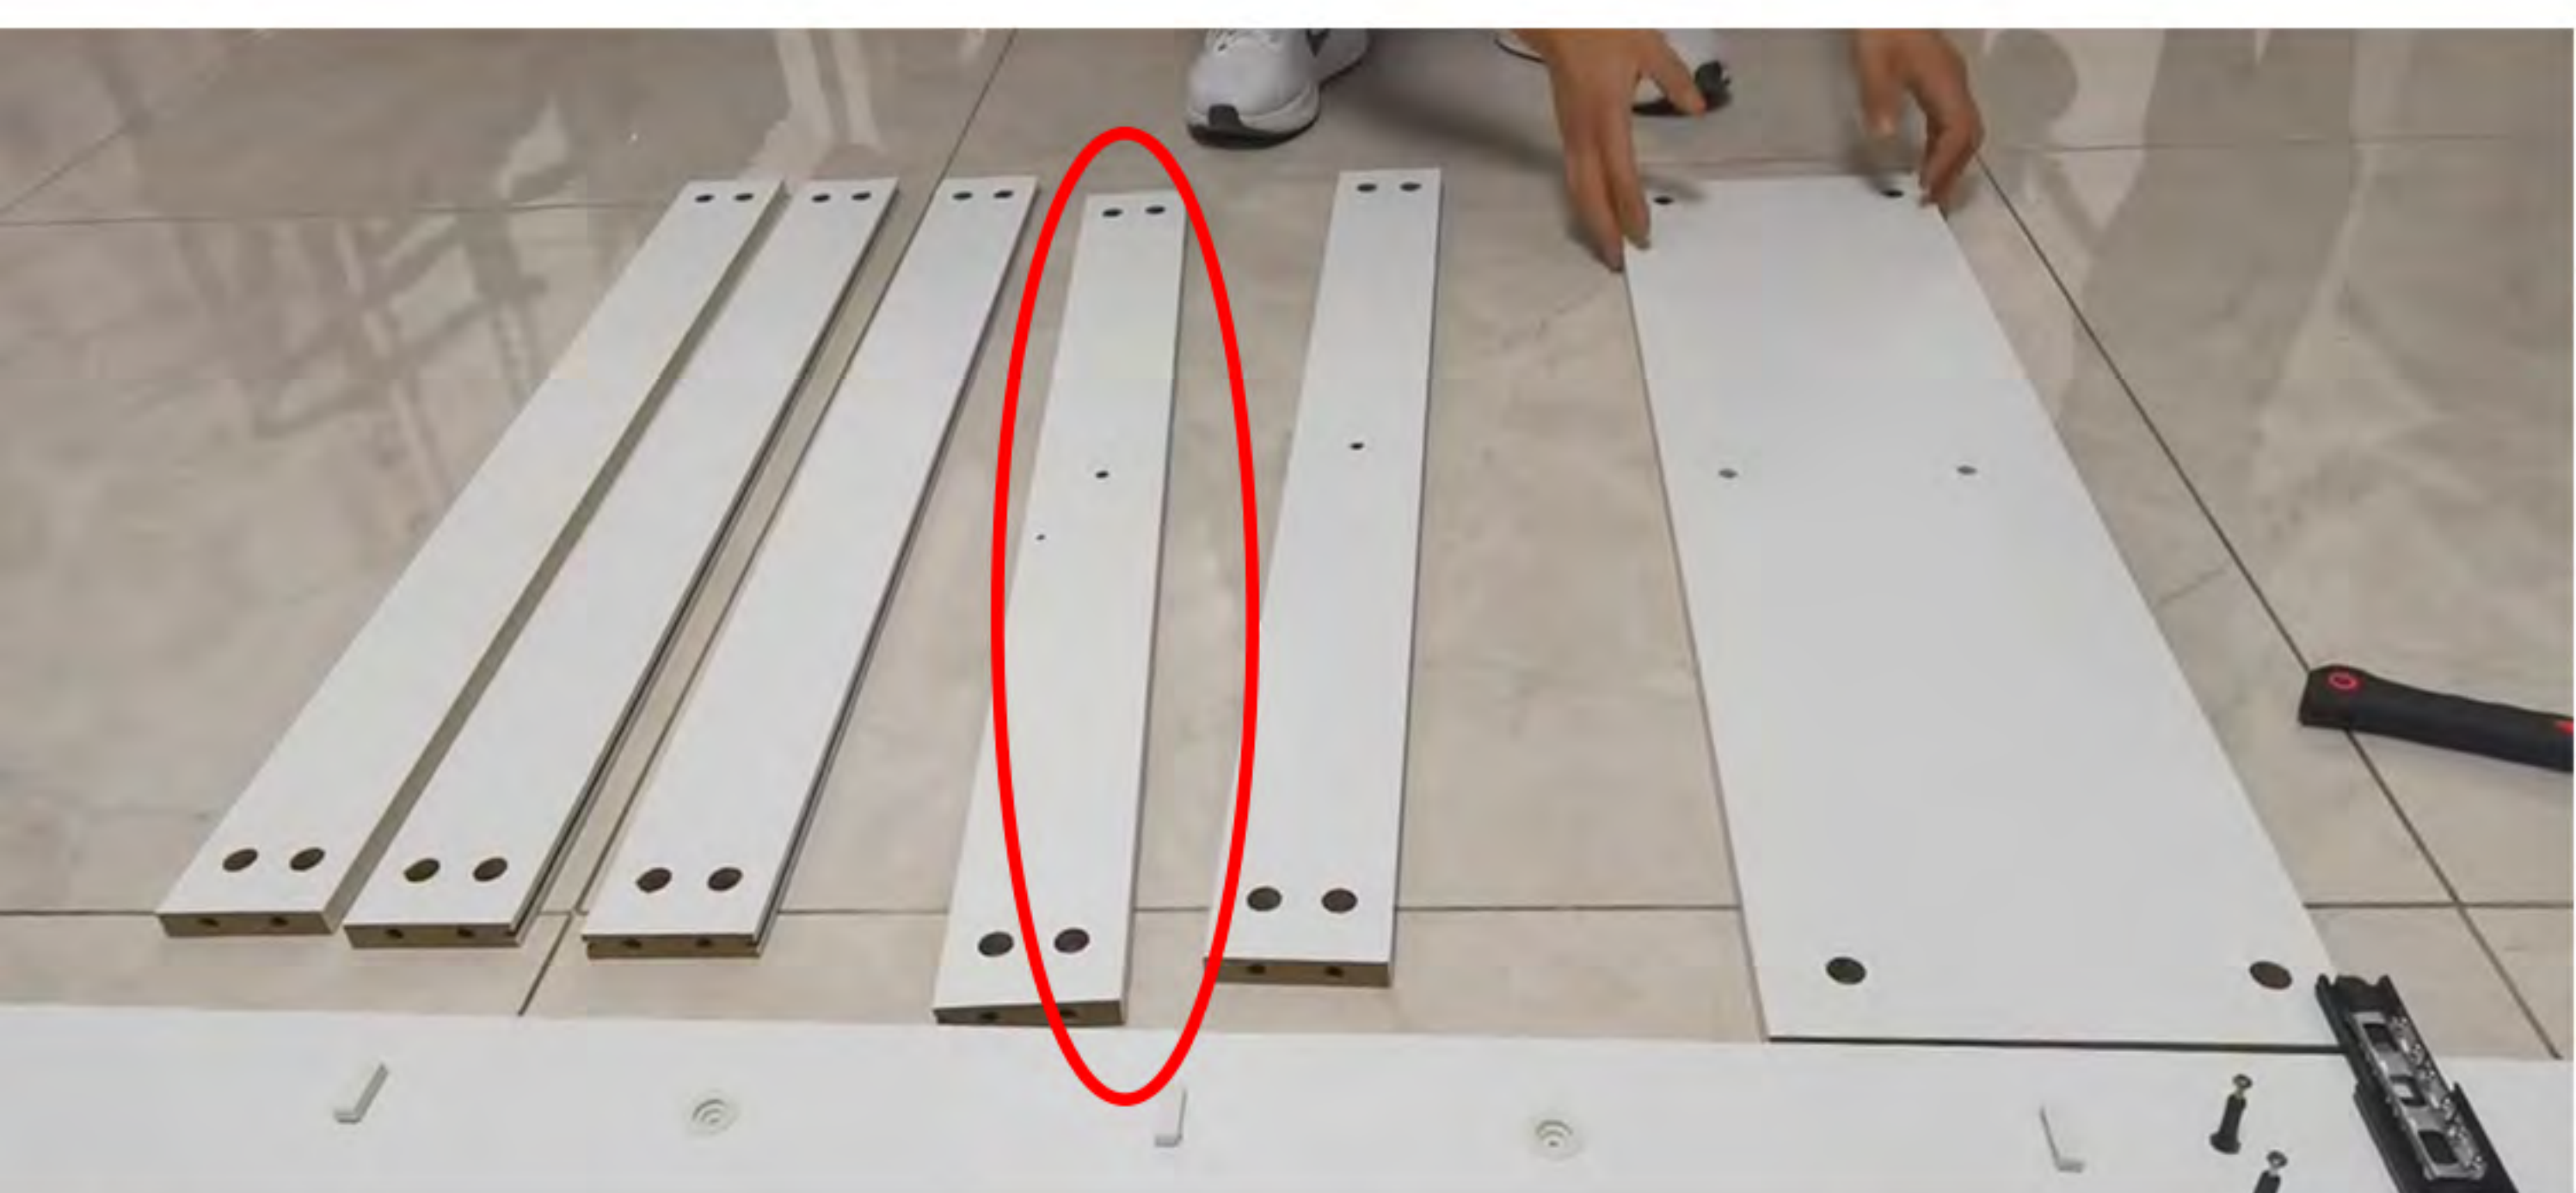



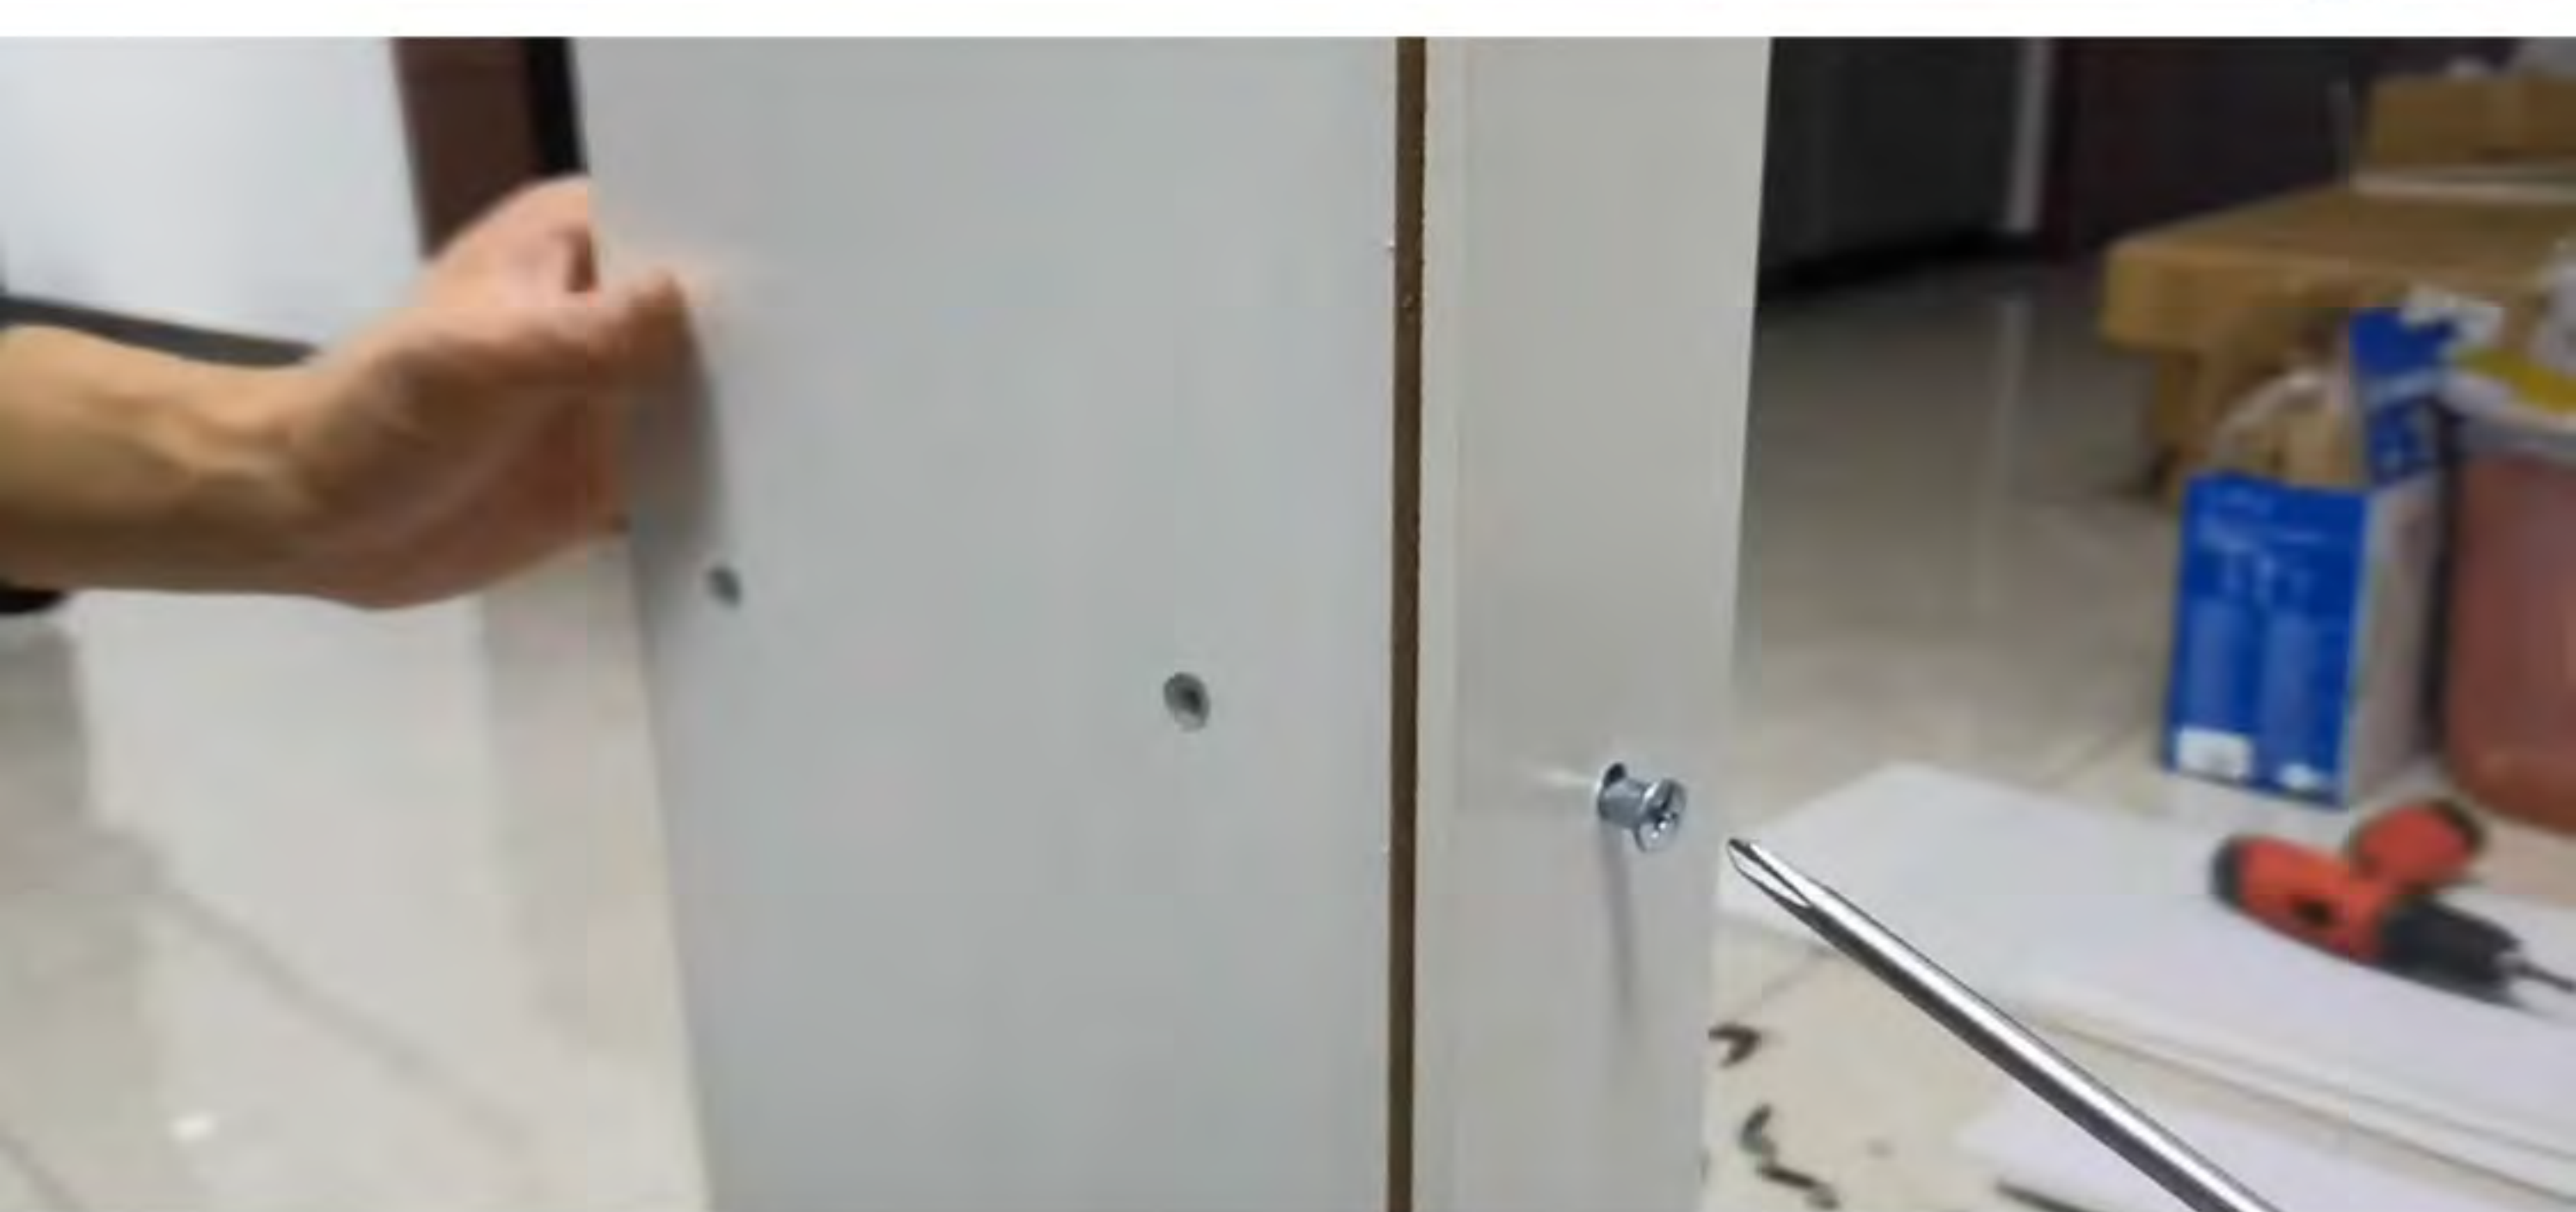

Align all the holes, including those on the side panels.






This long board has grooves on both sides






Note that this long board only has grooves on the right side.







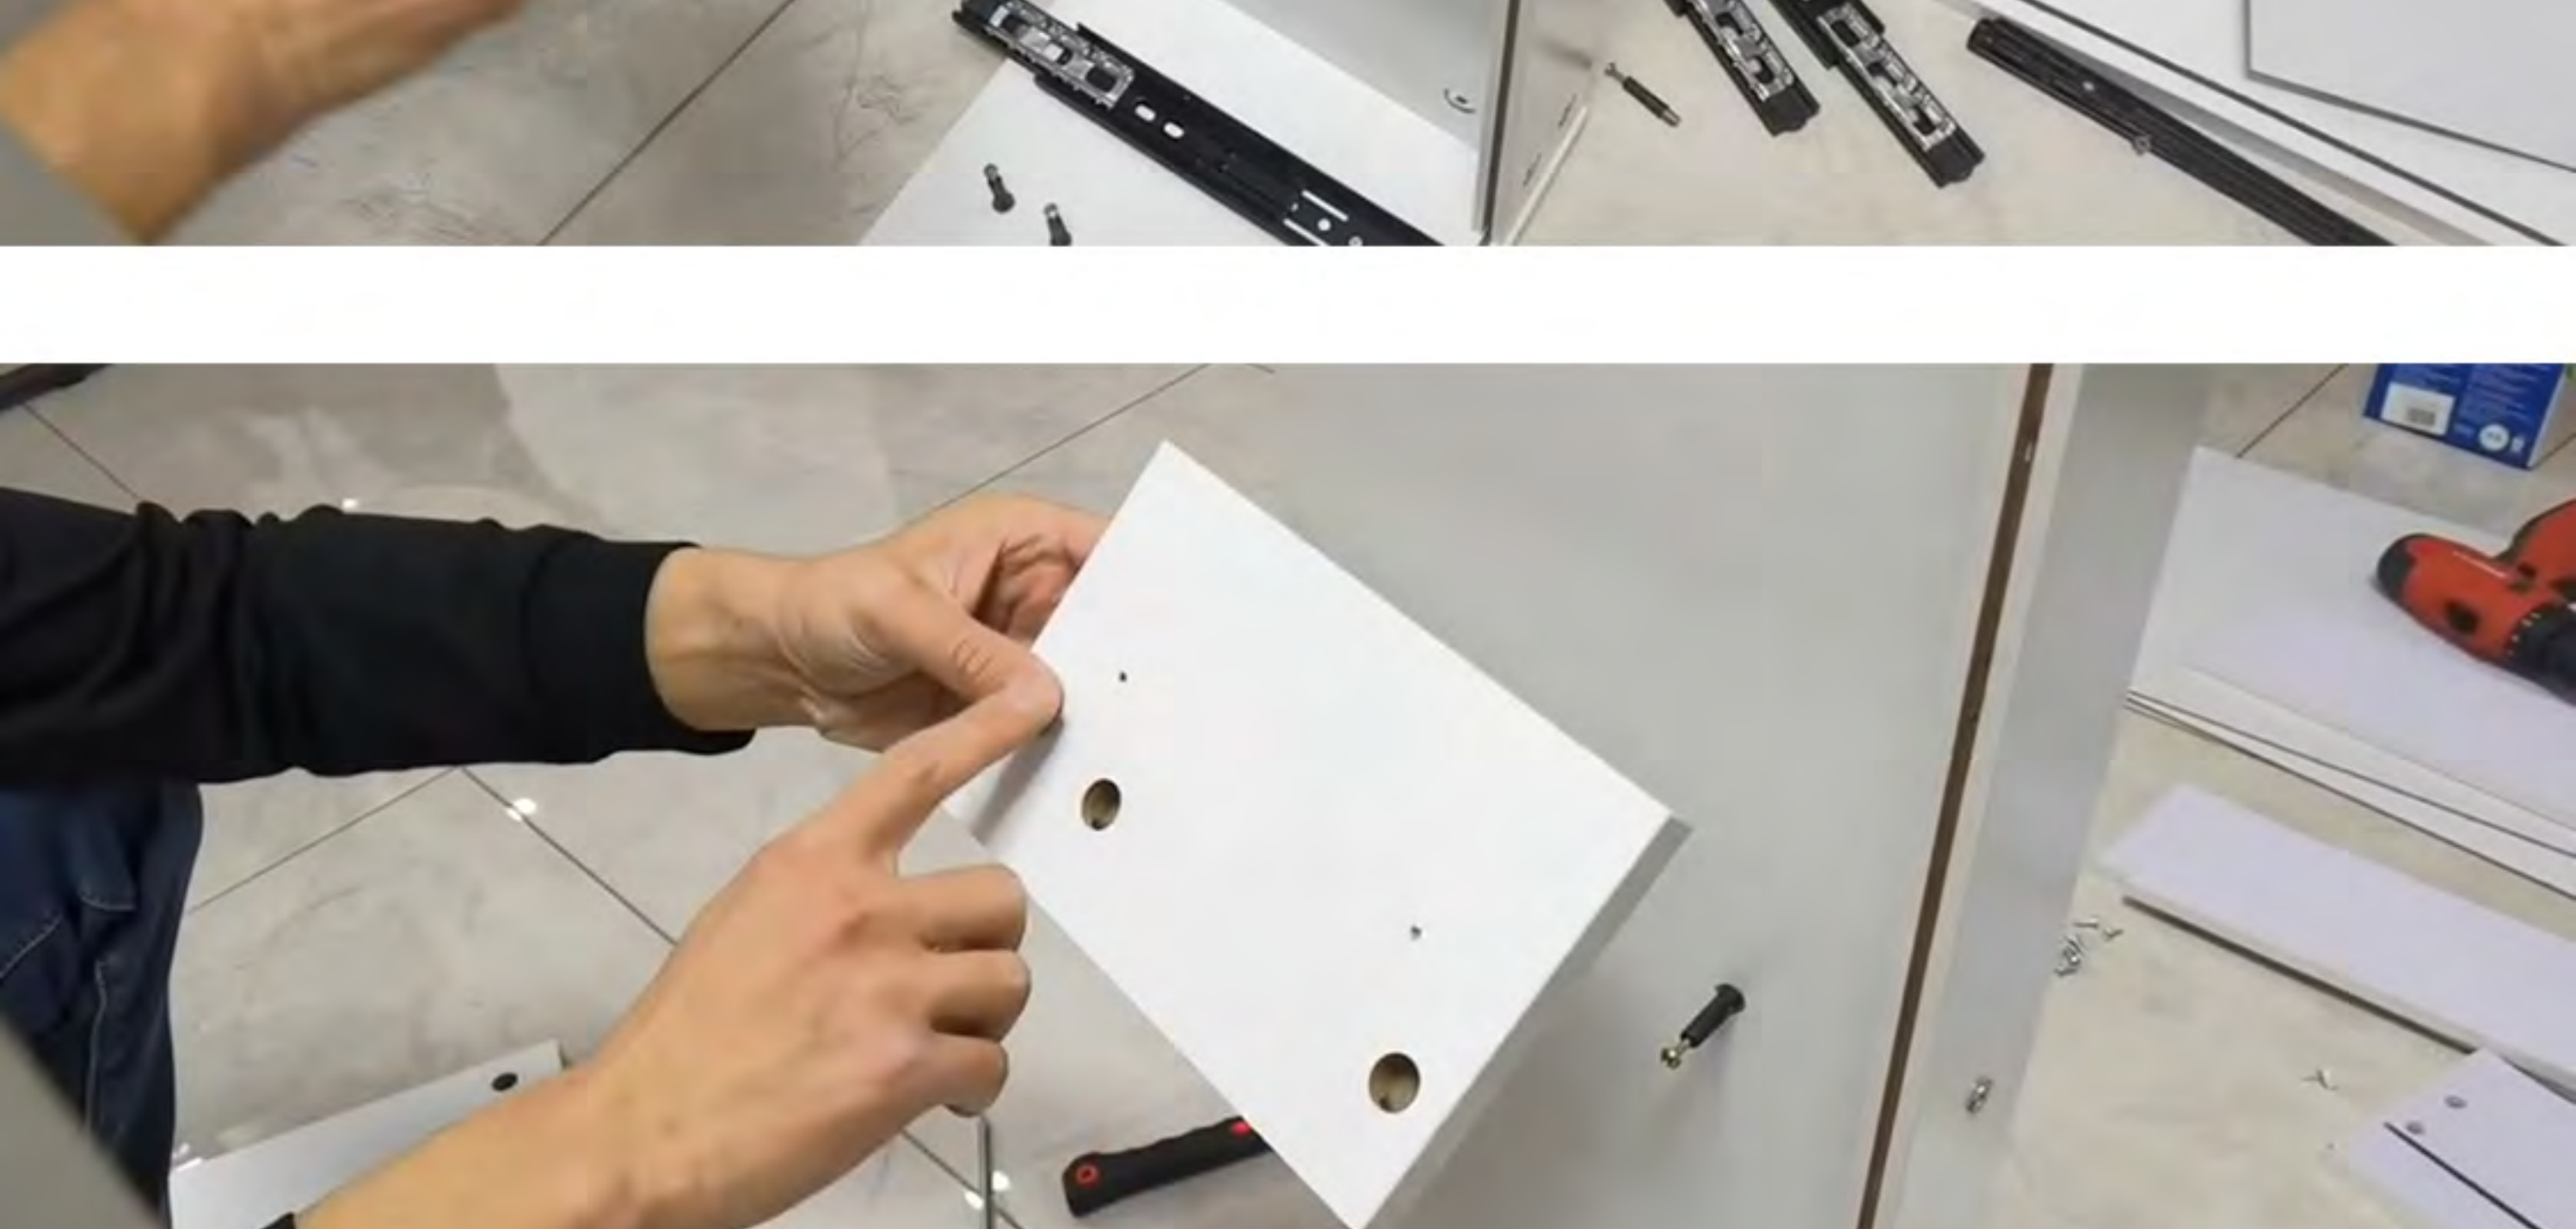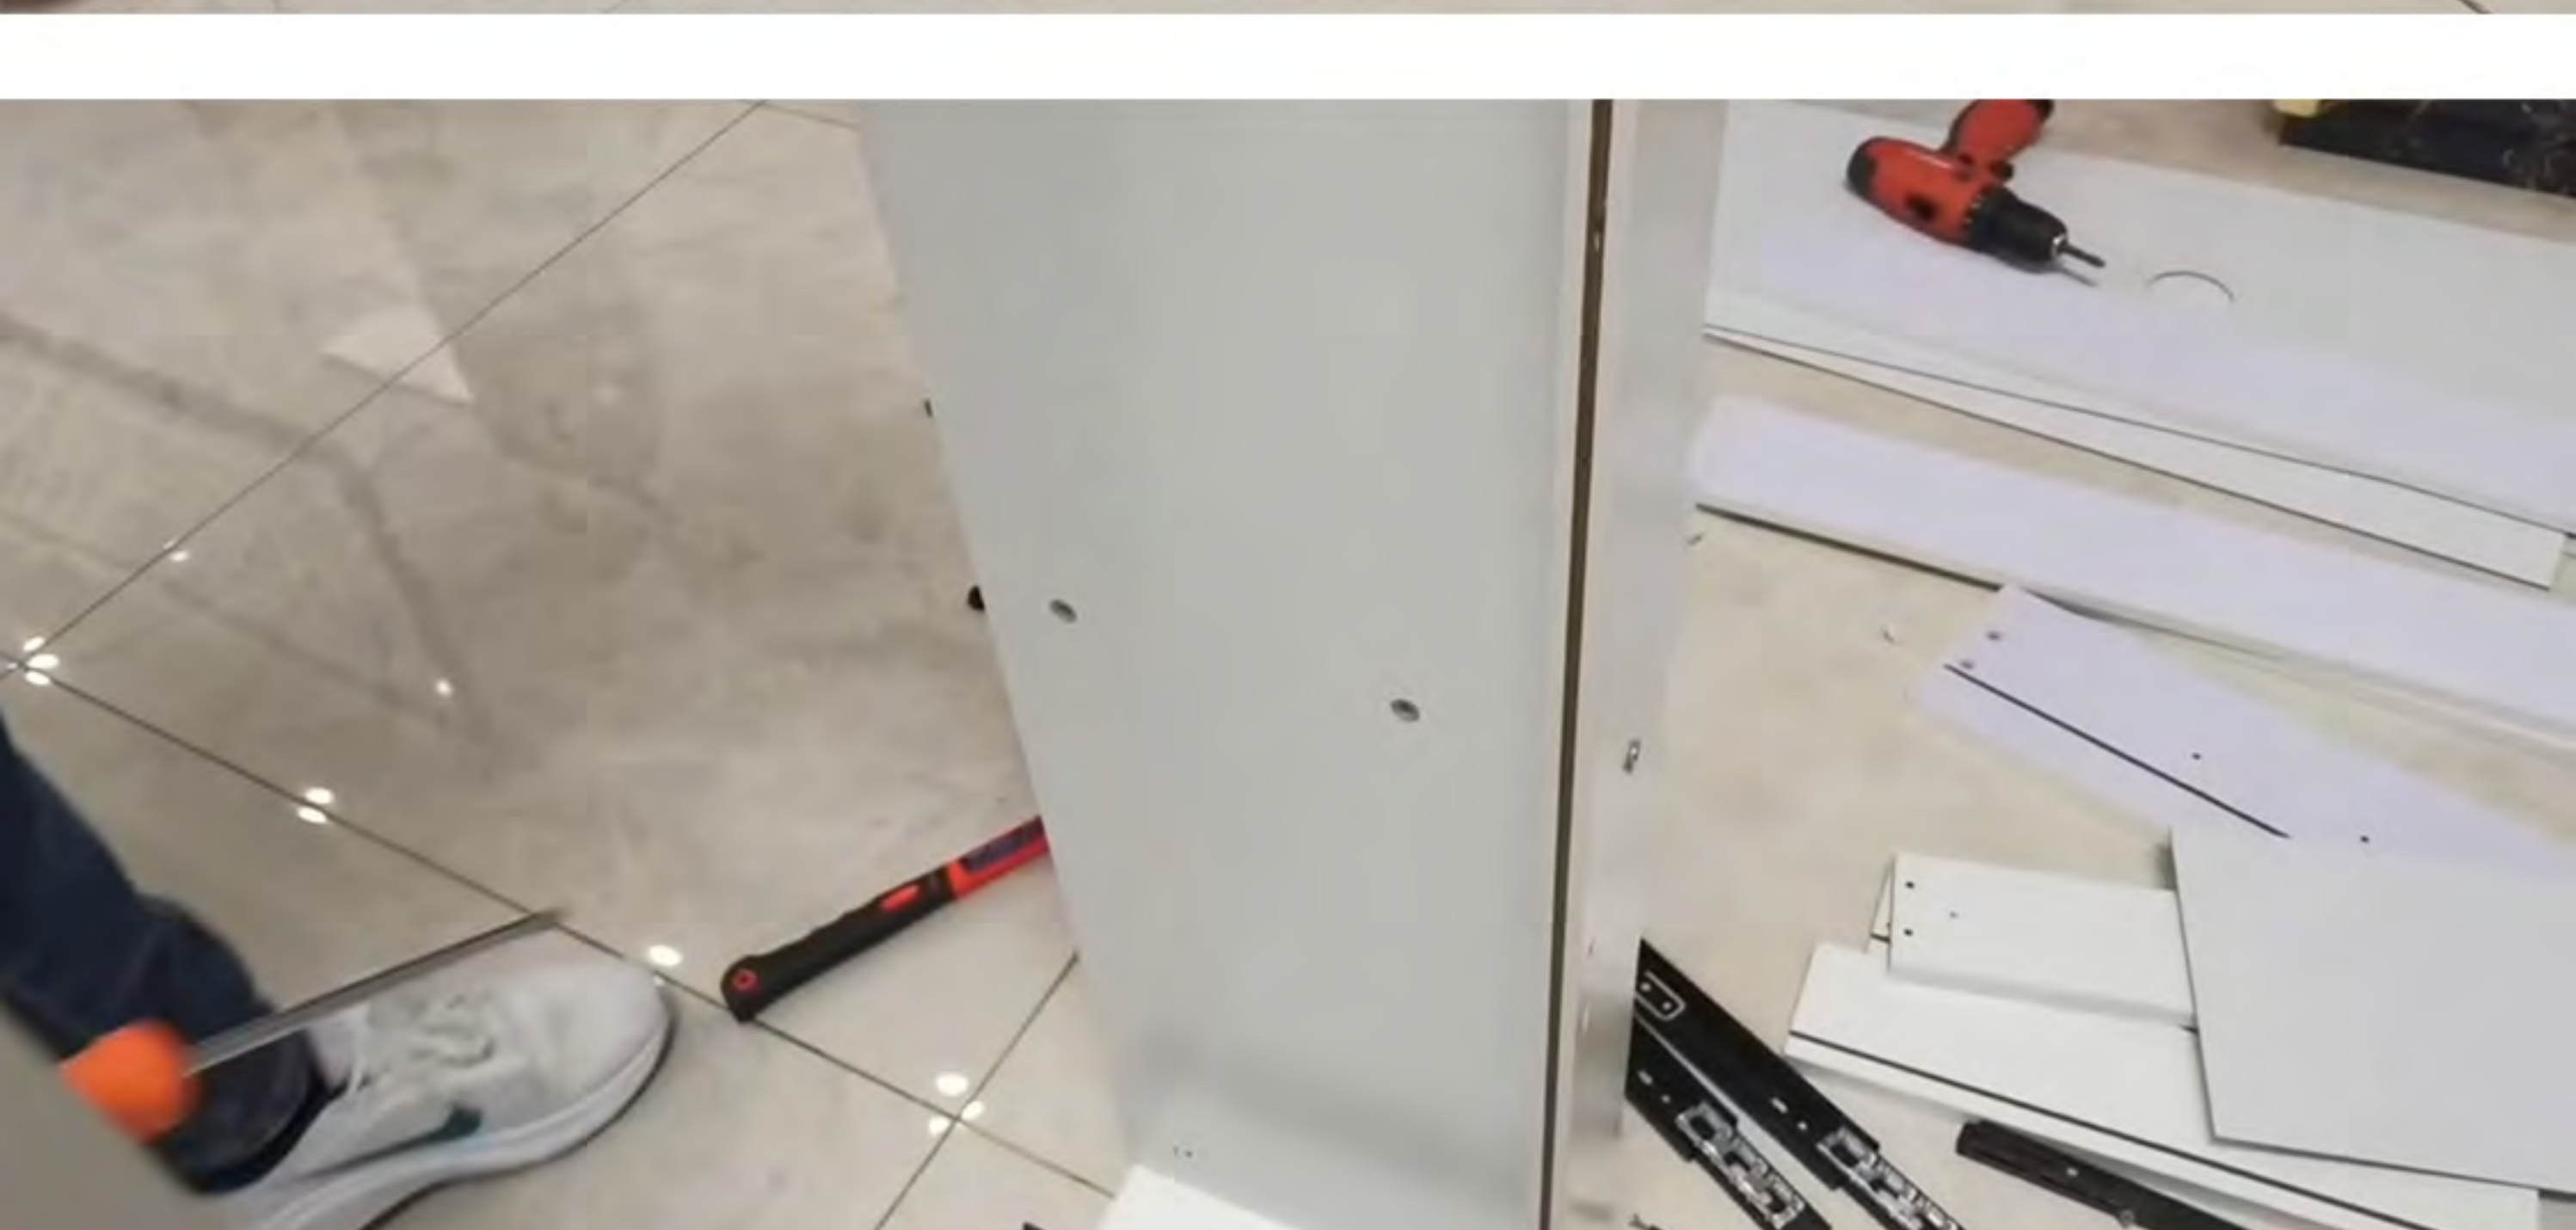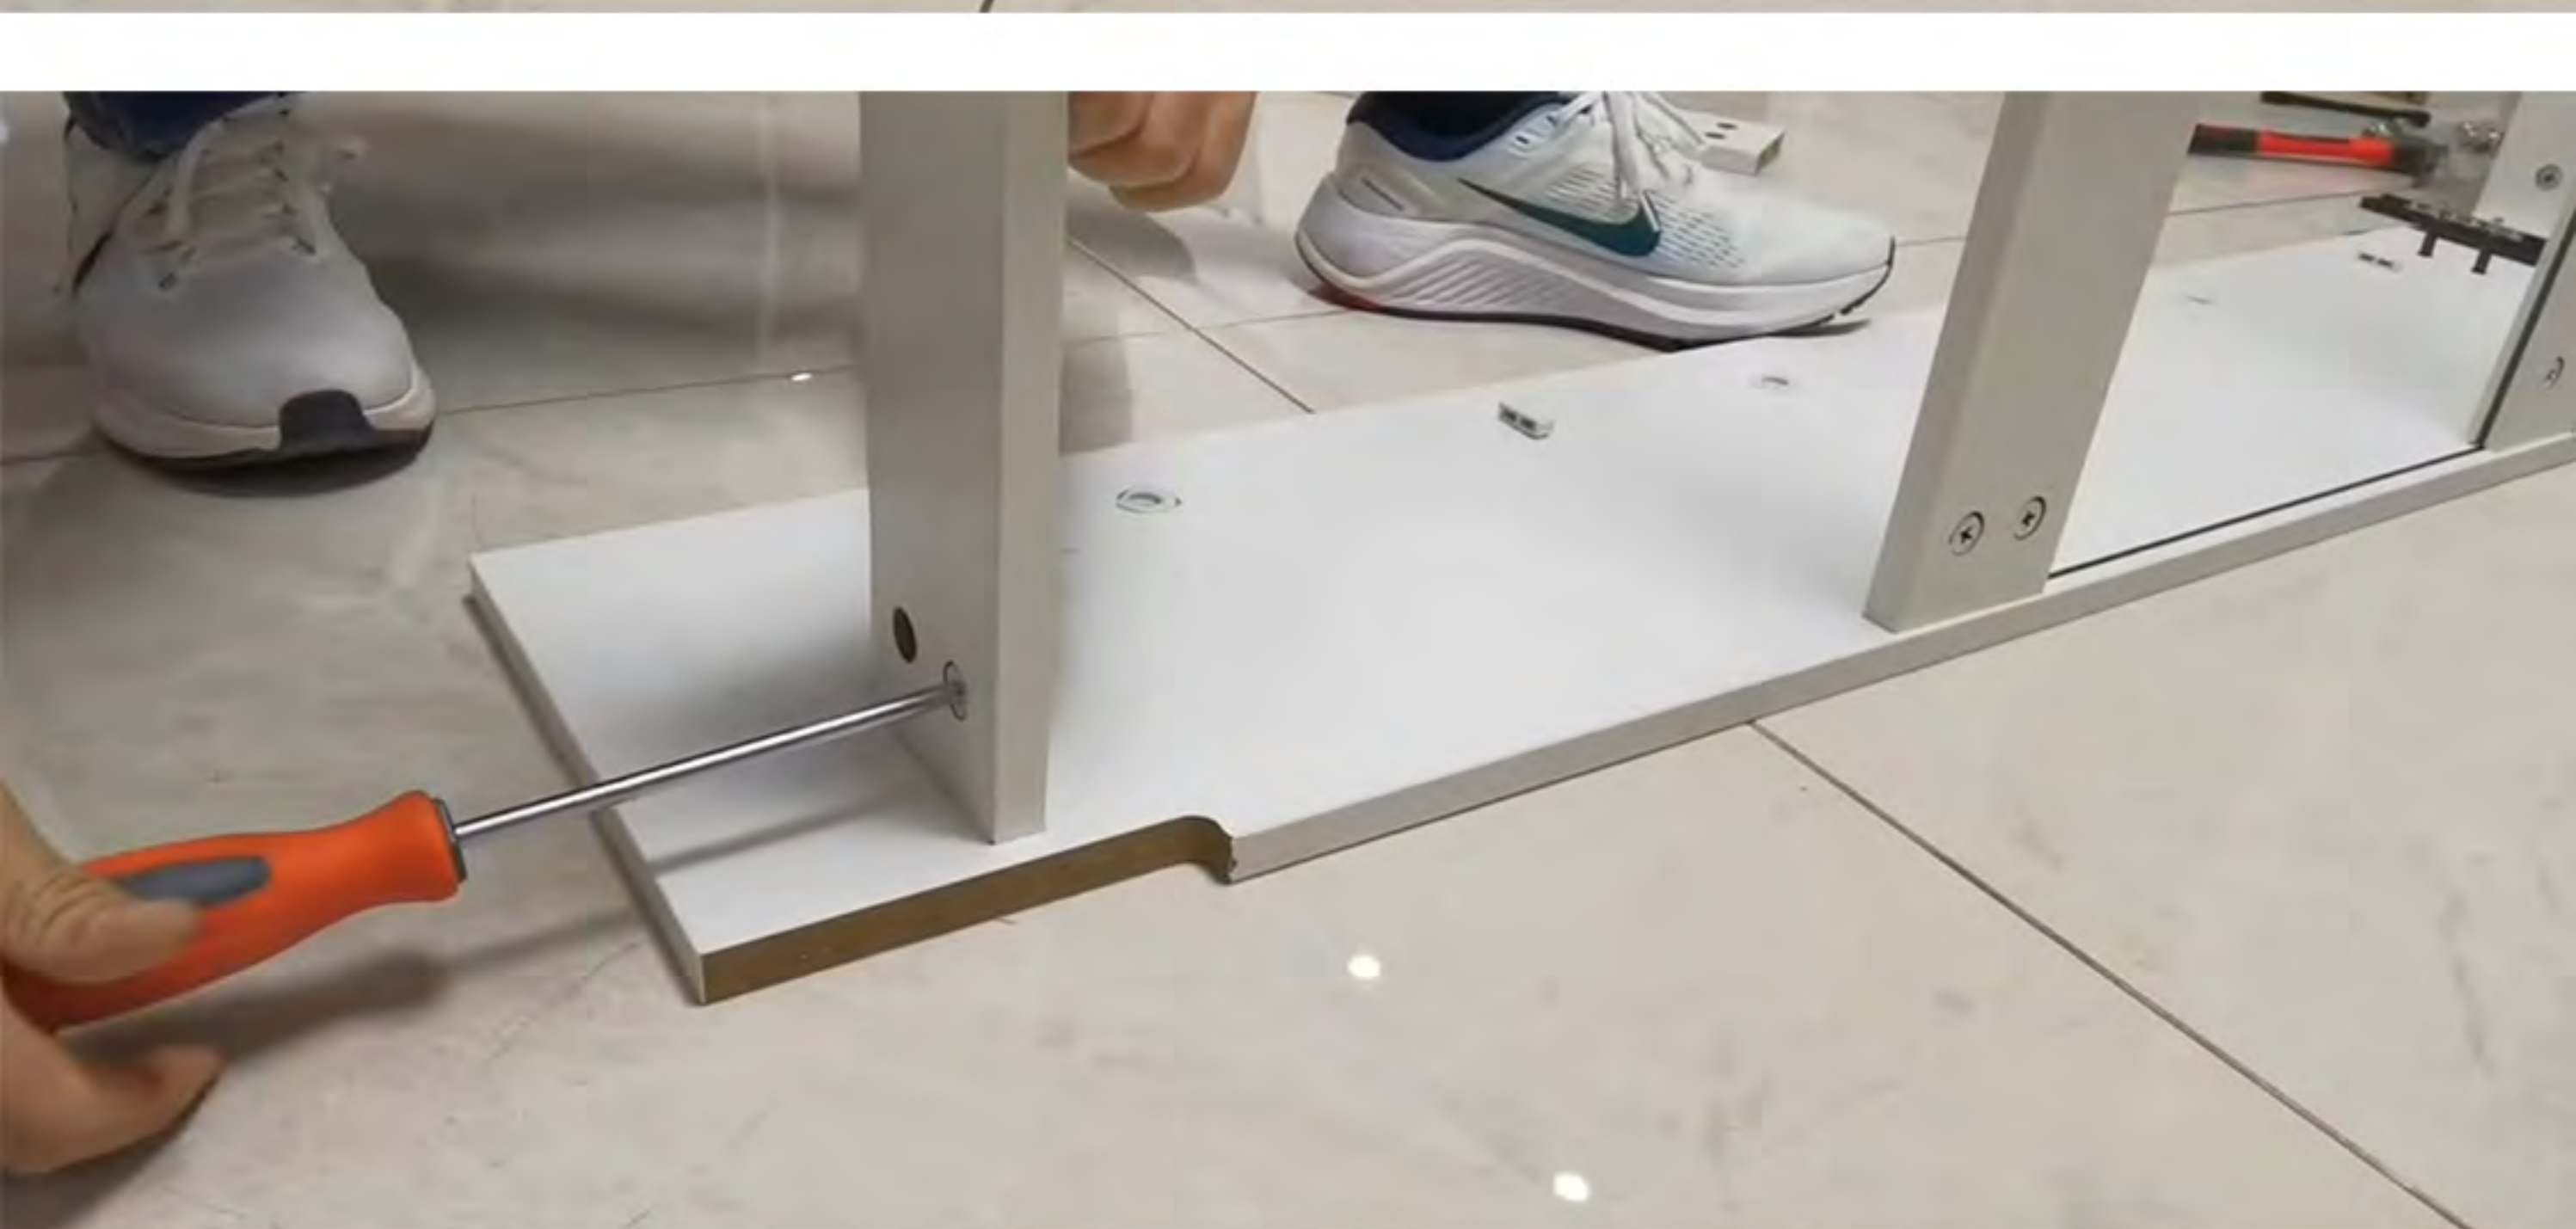




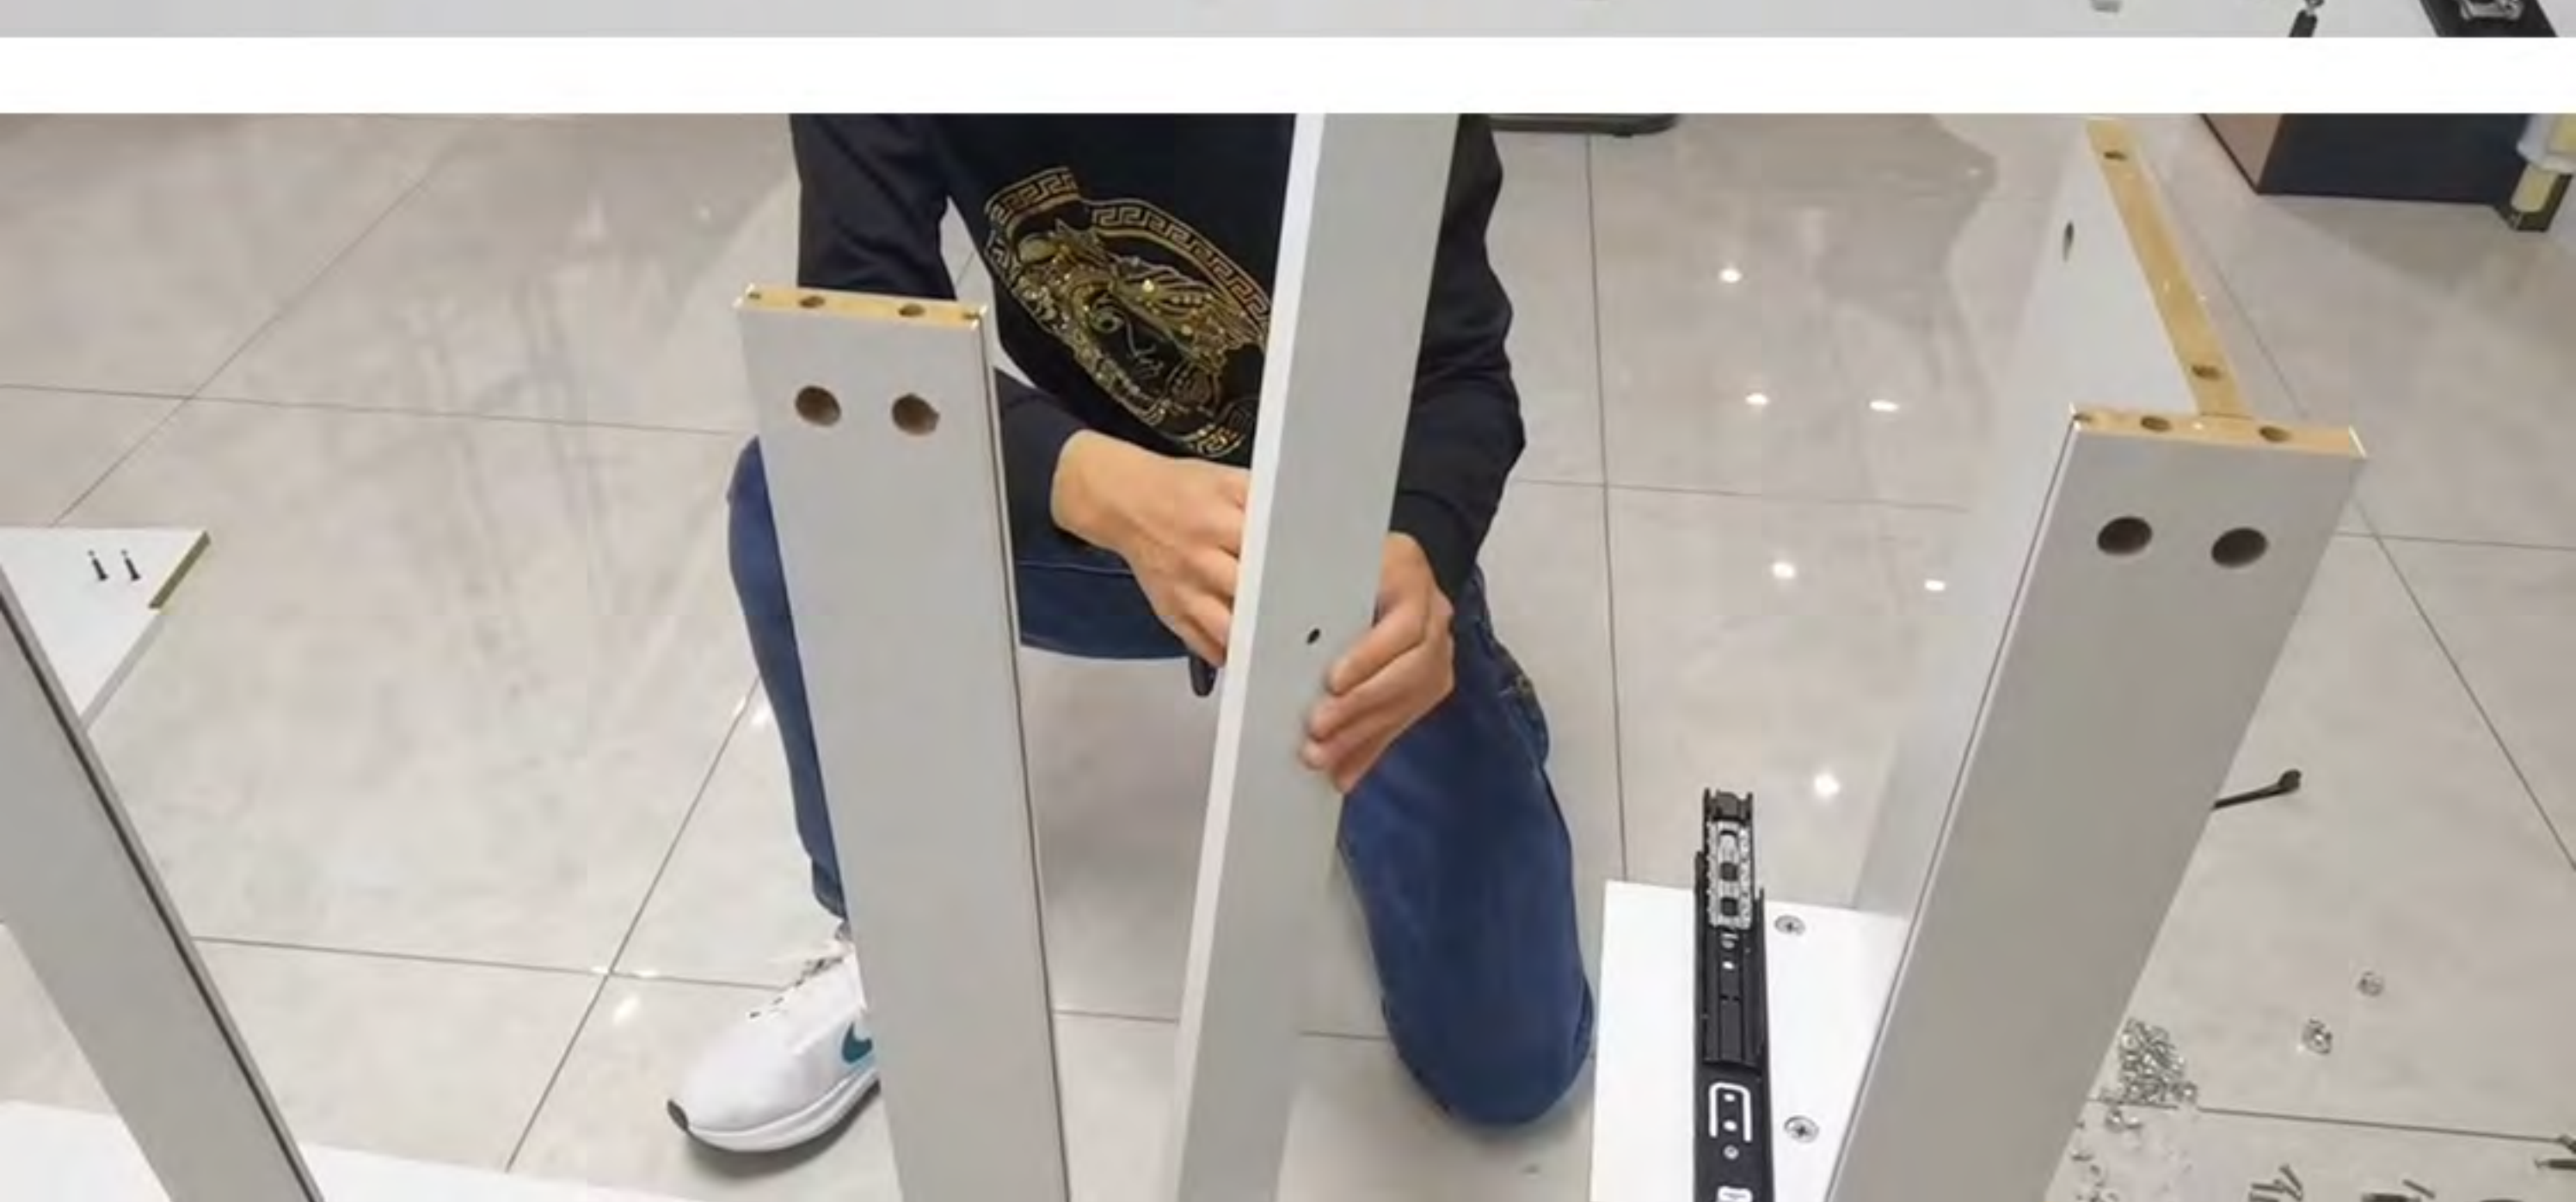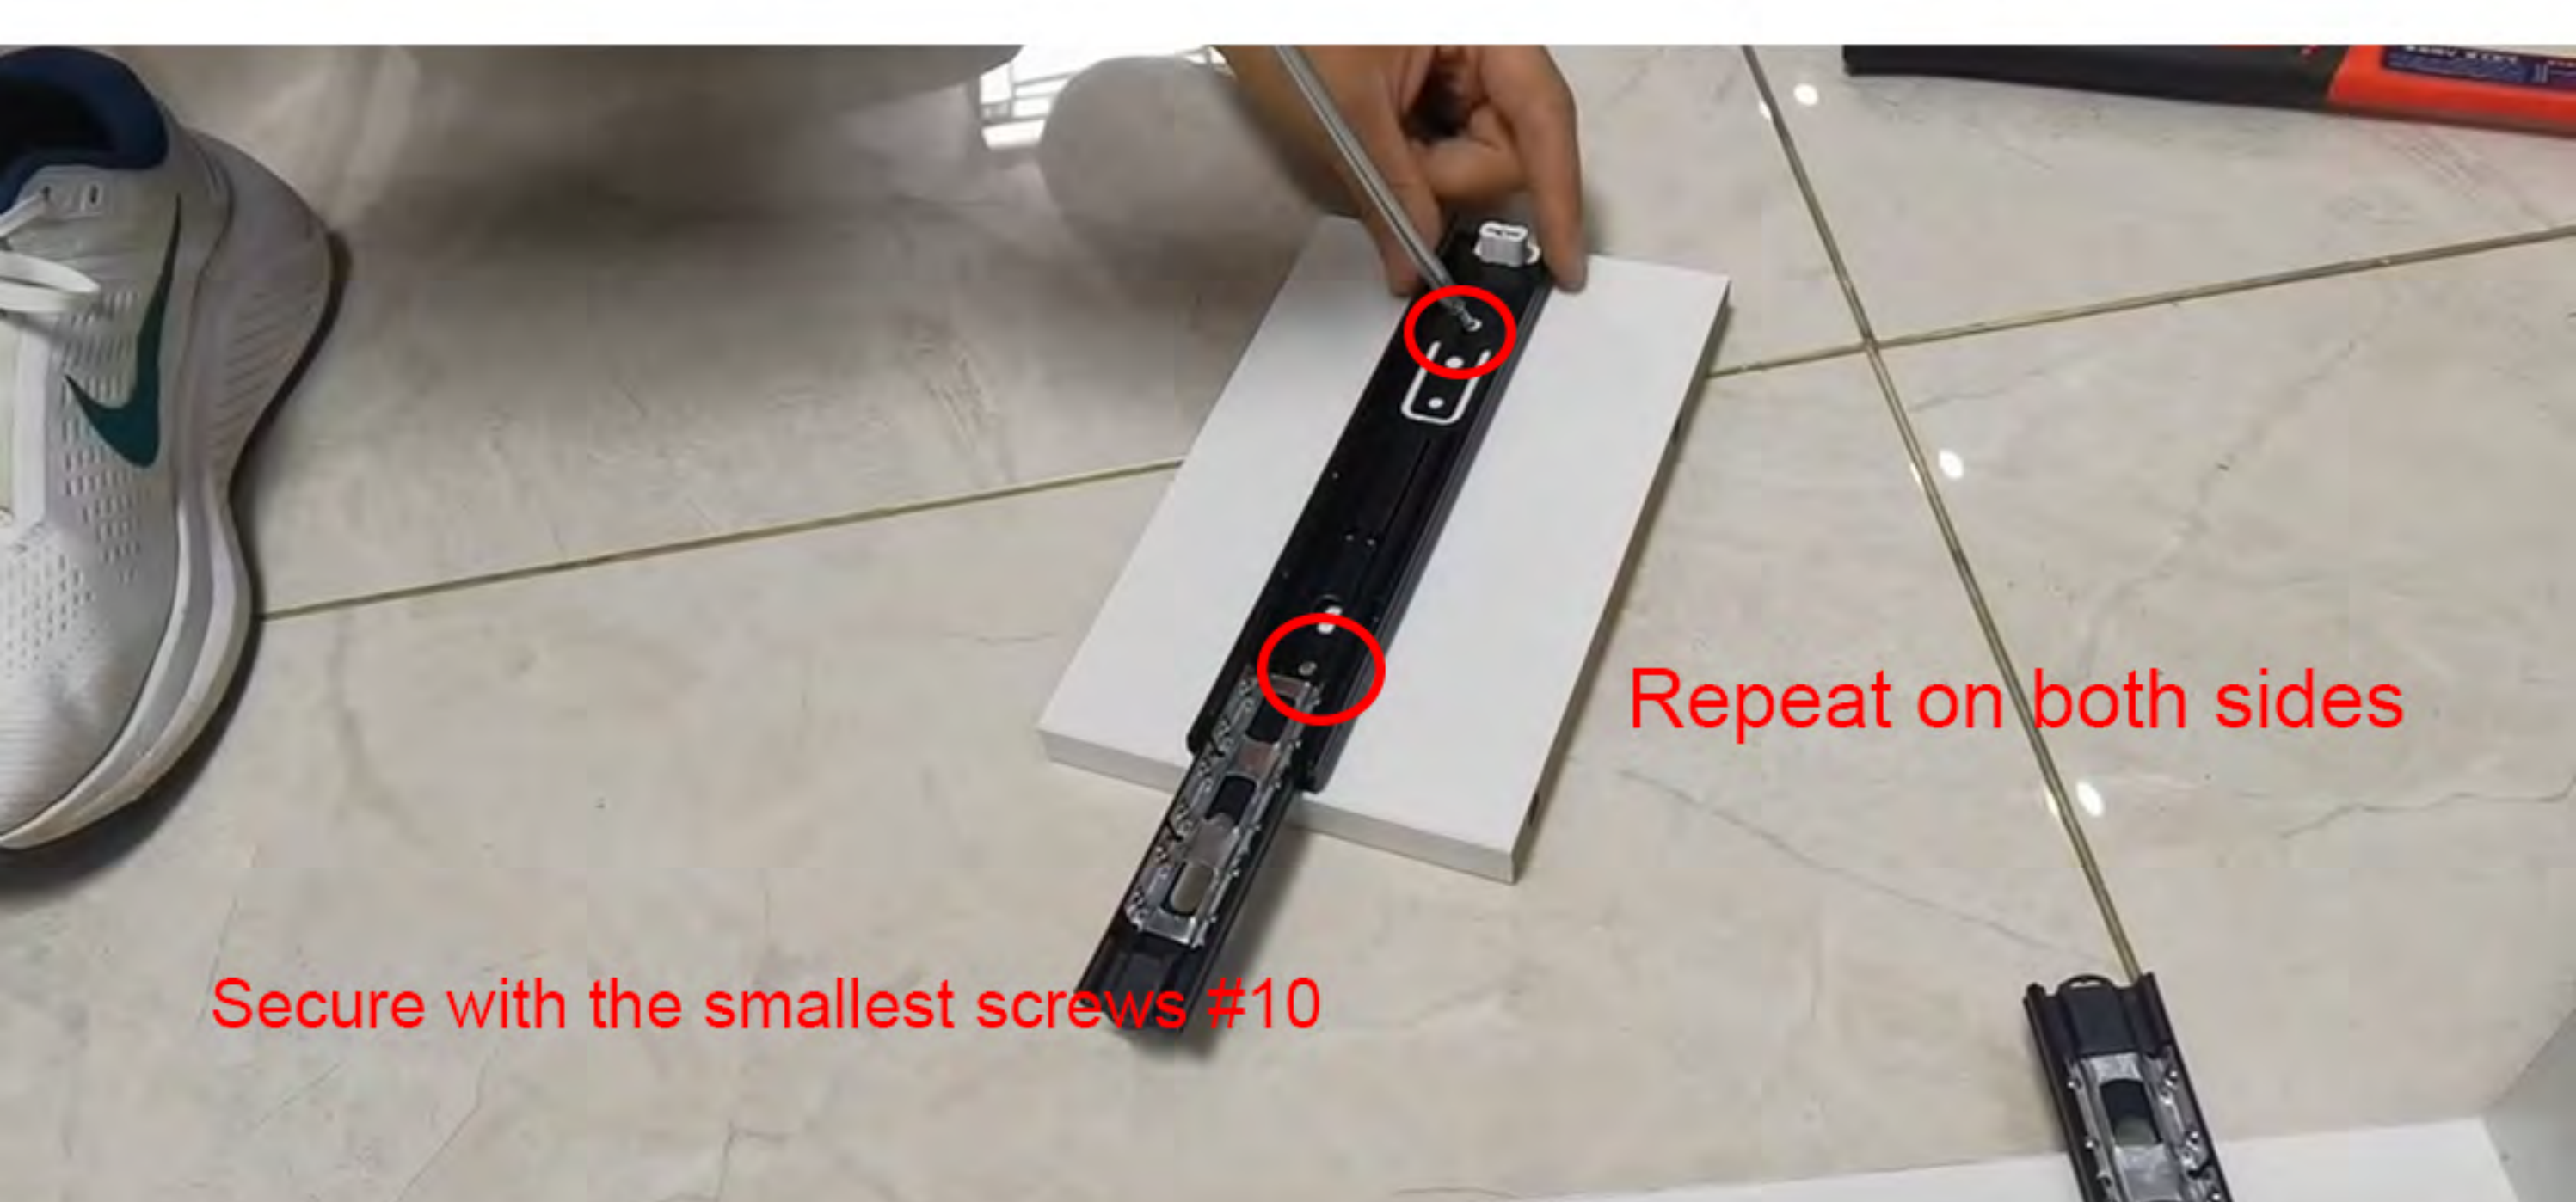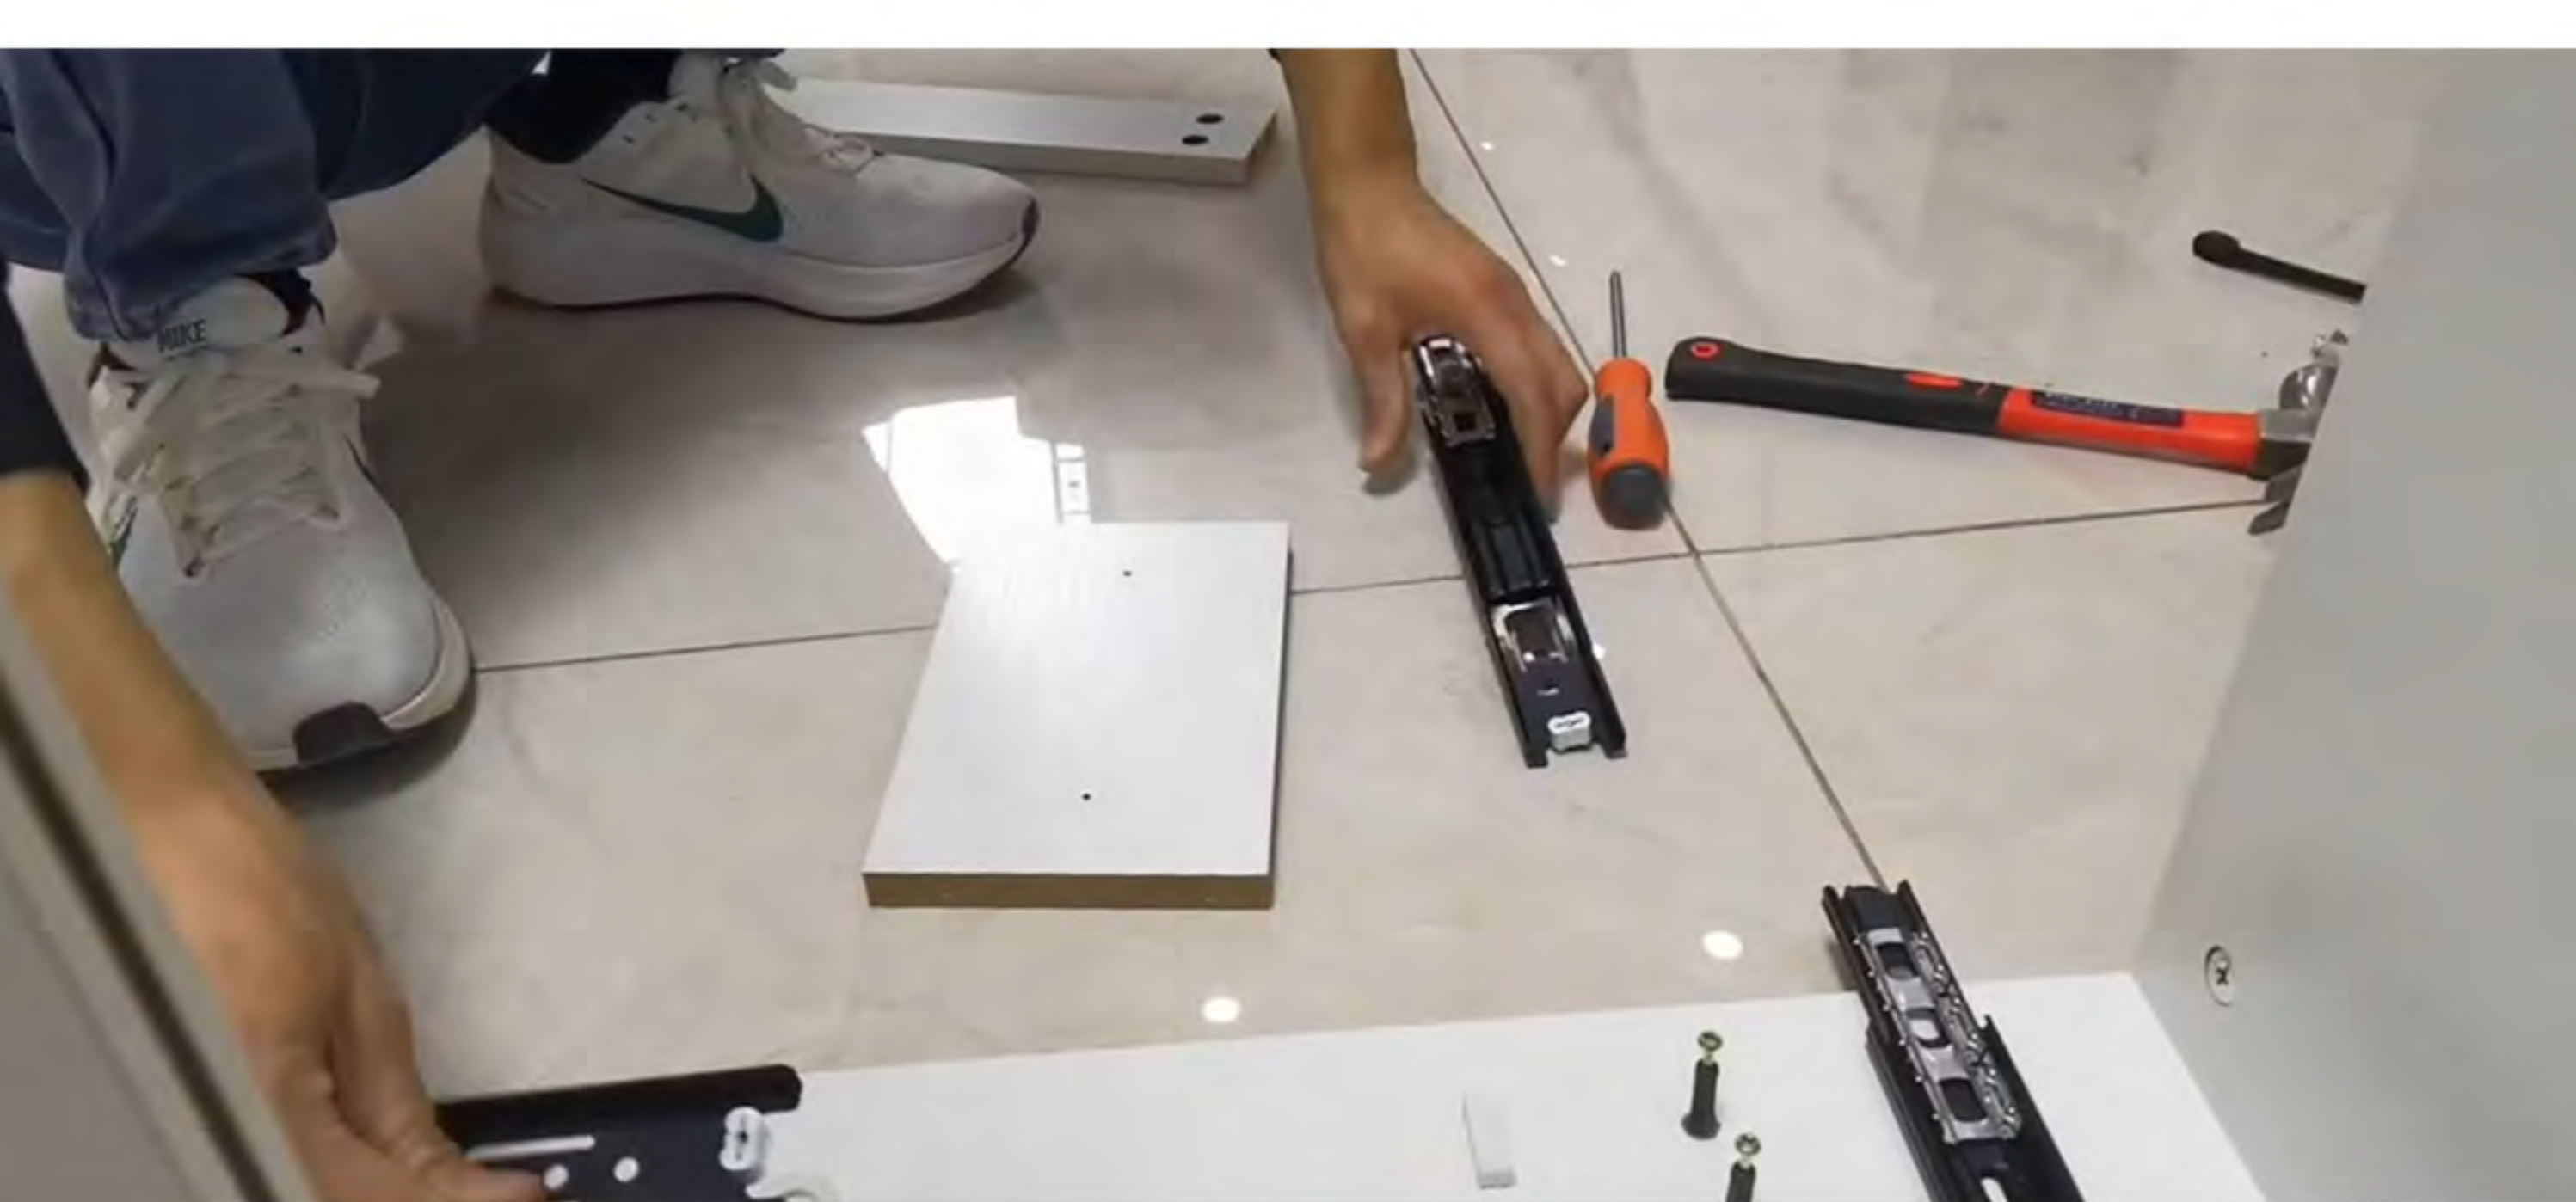




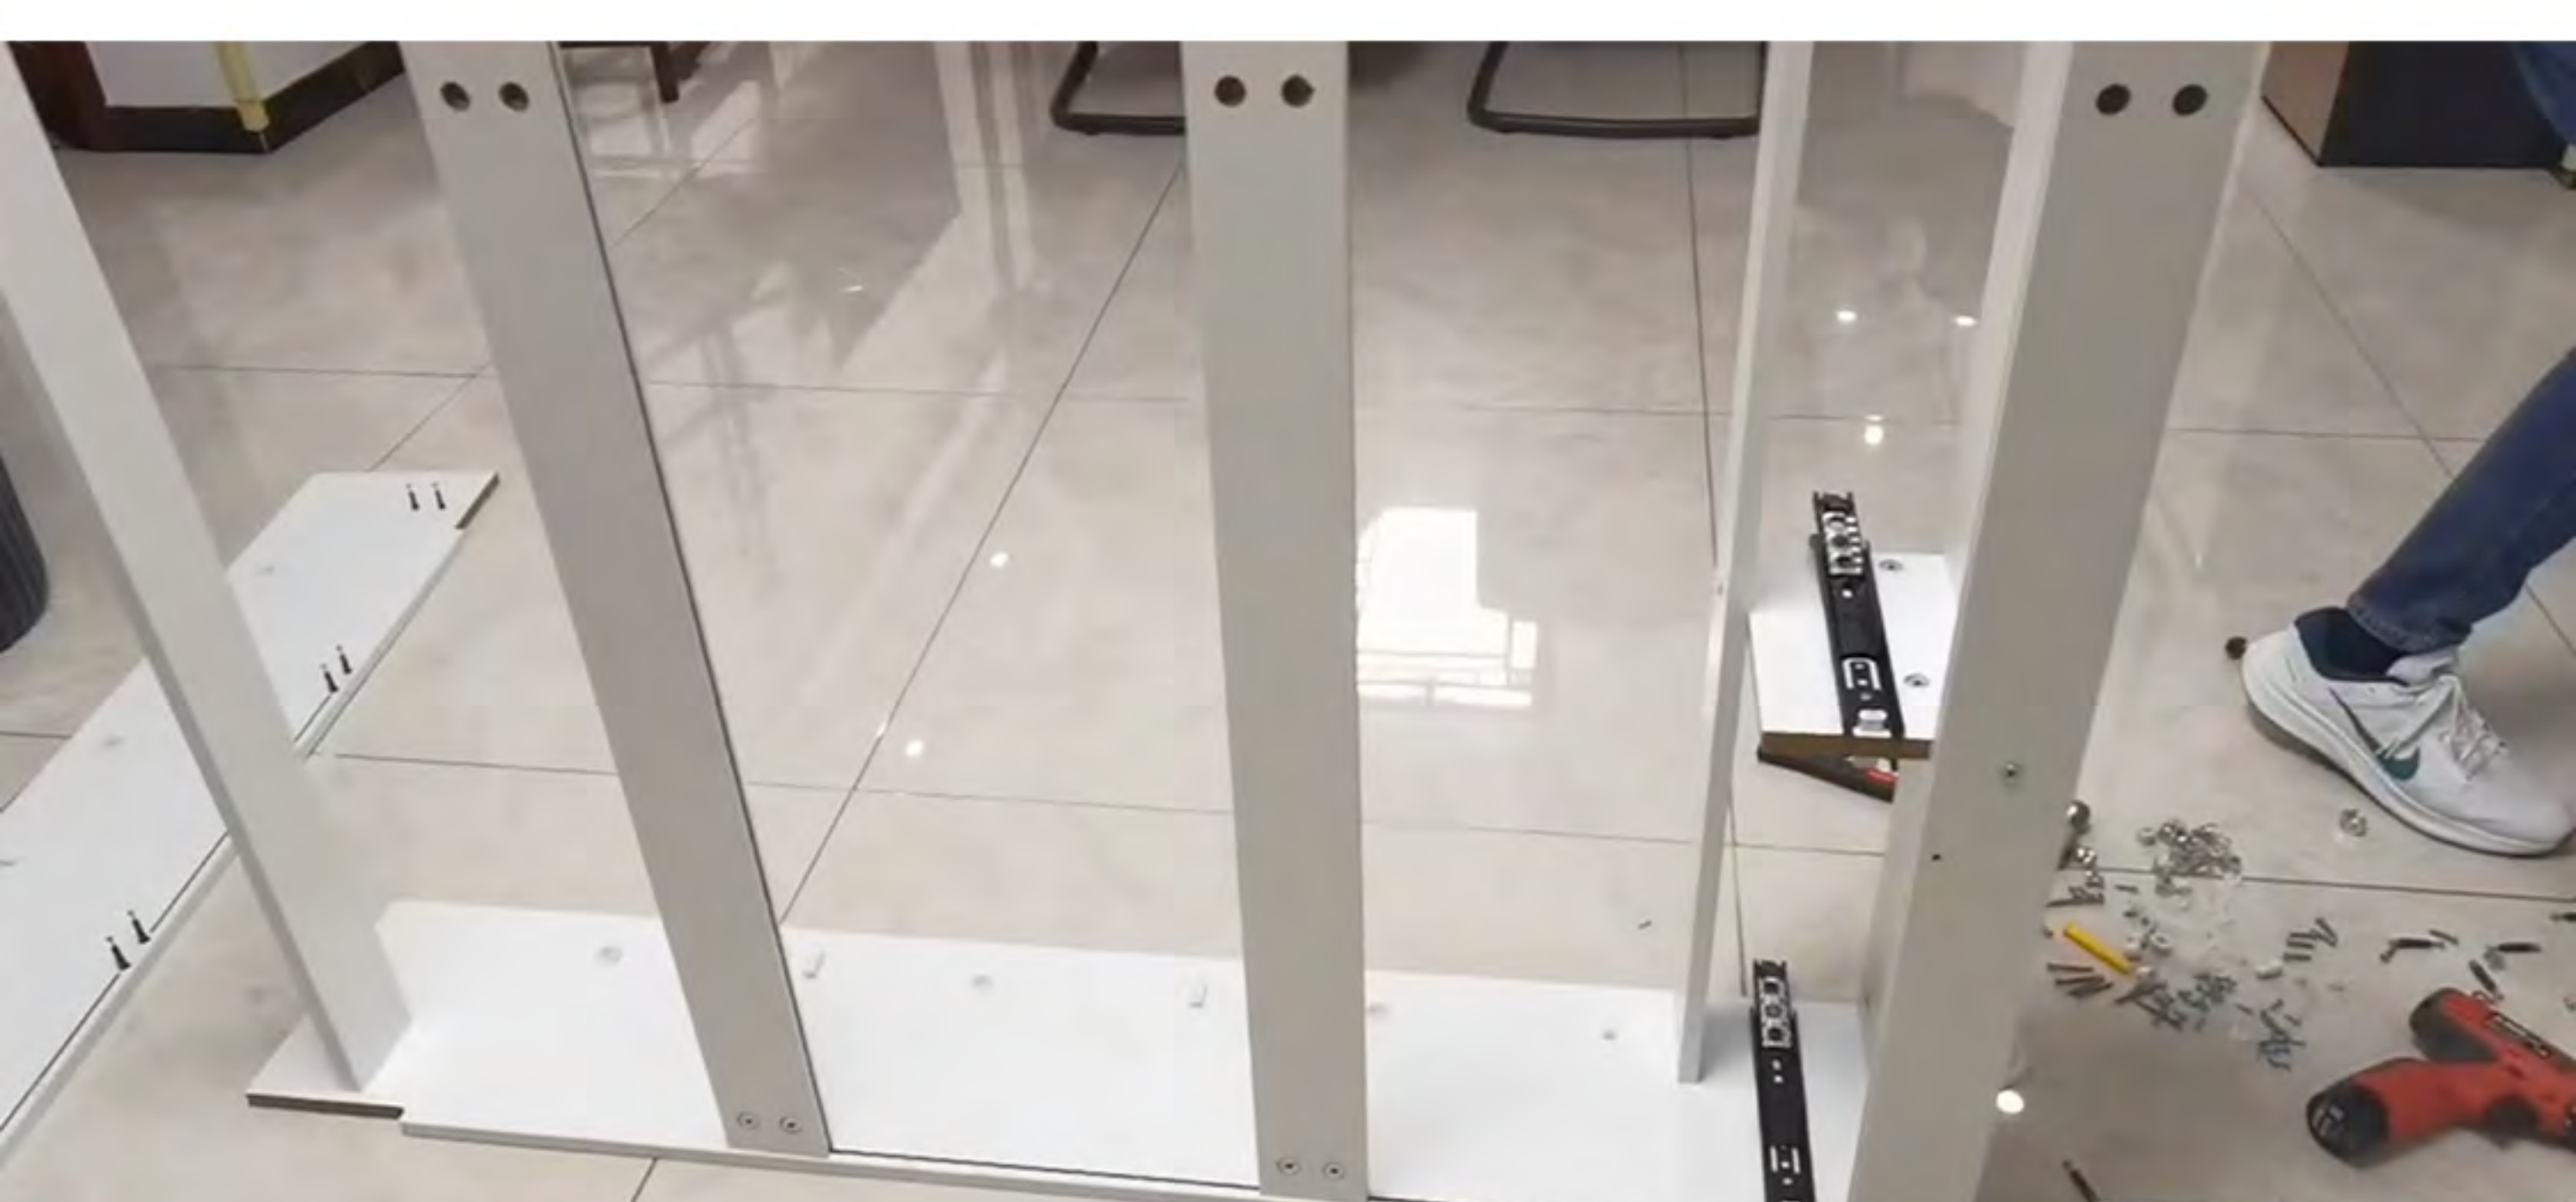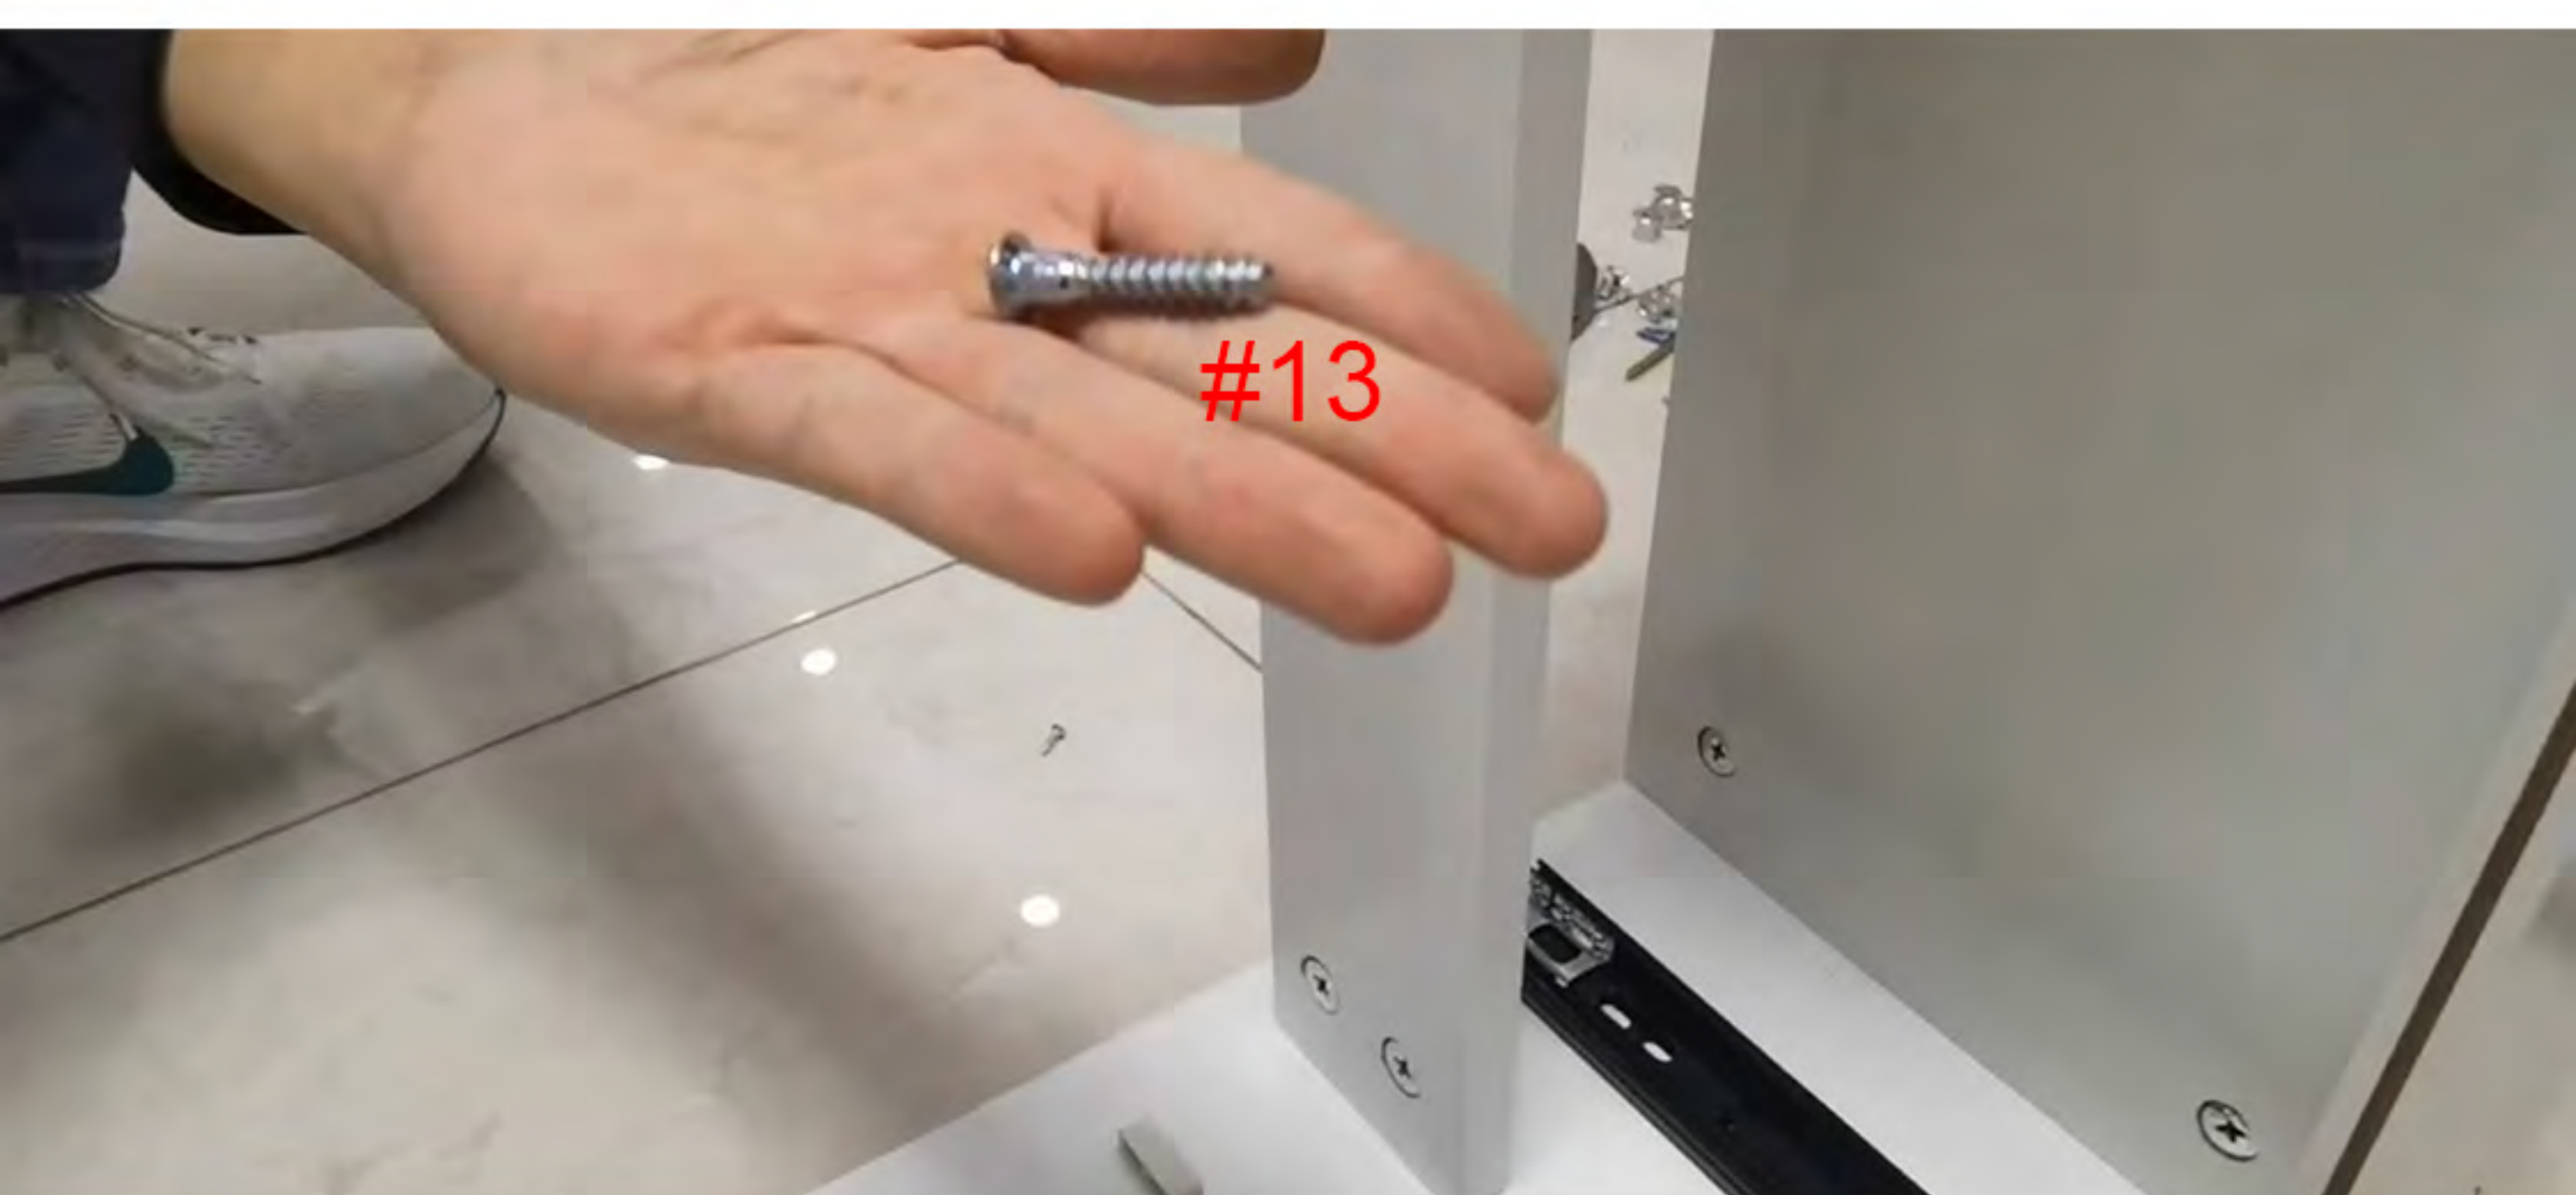




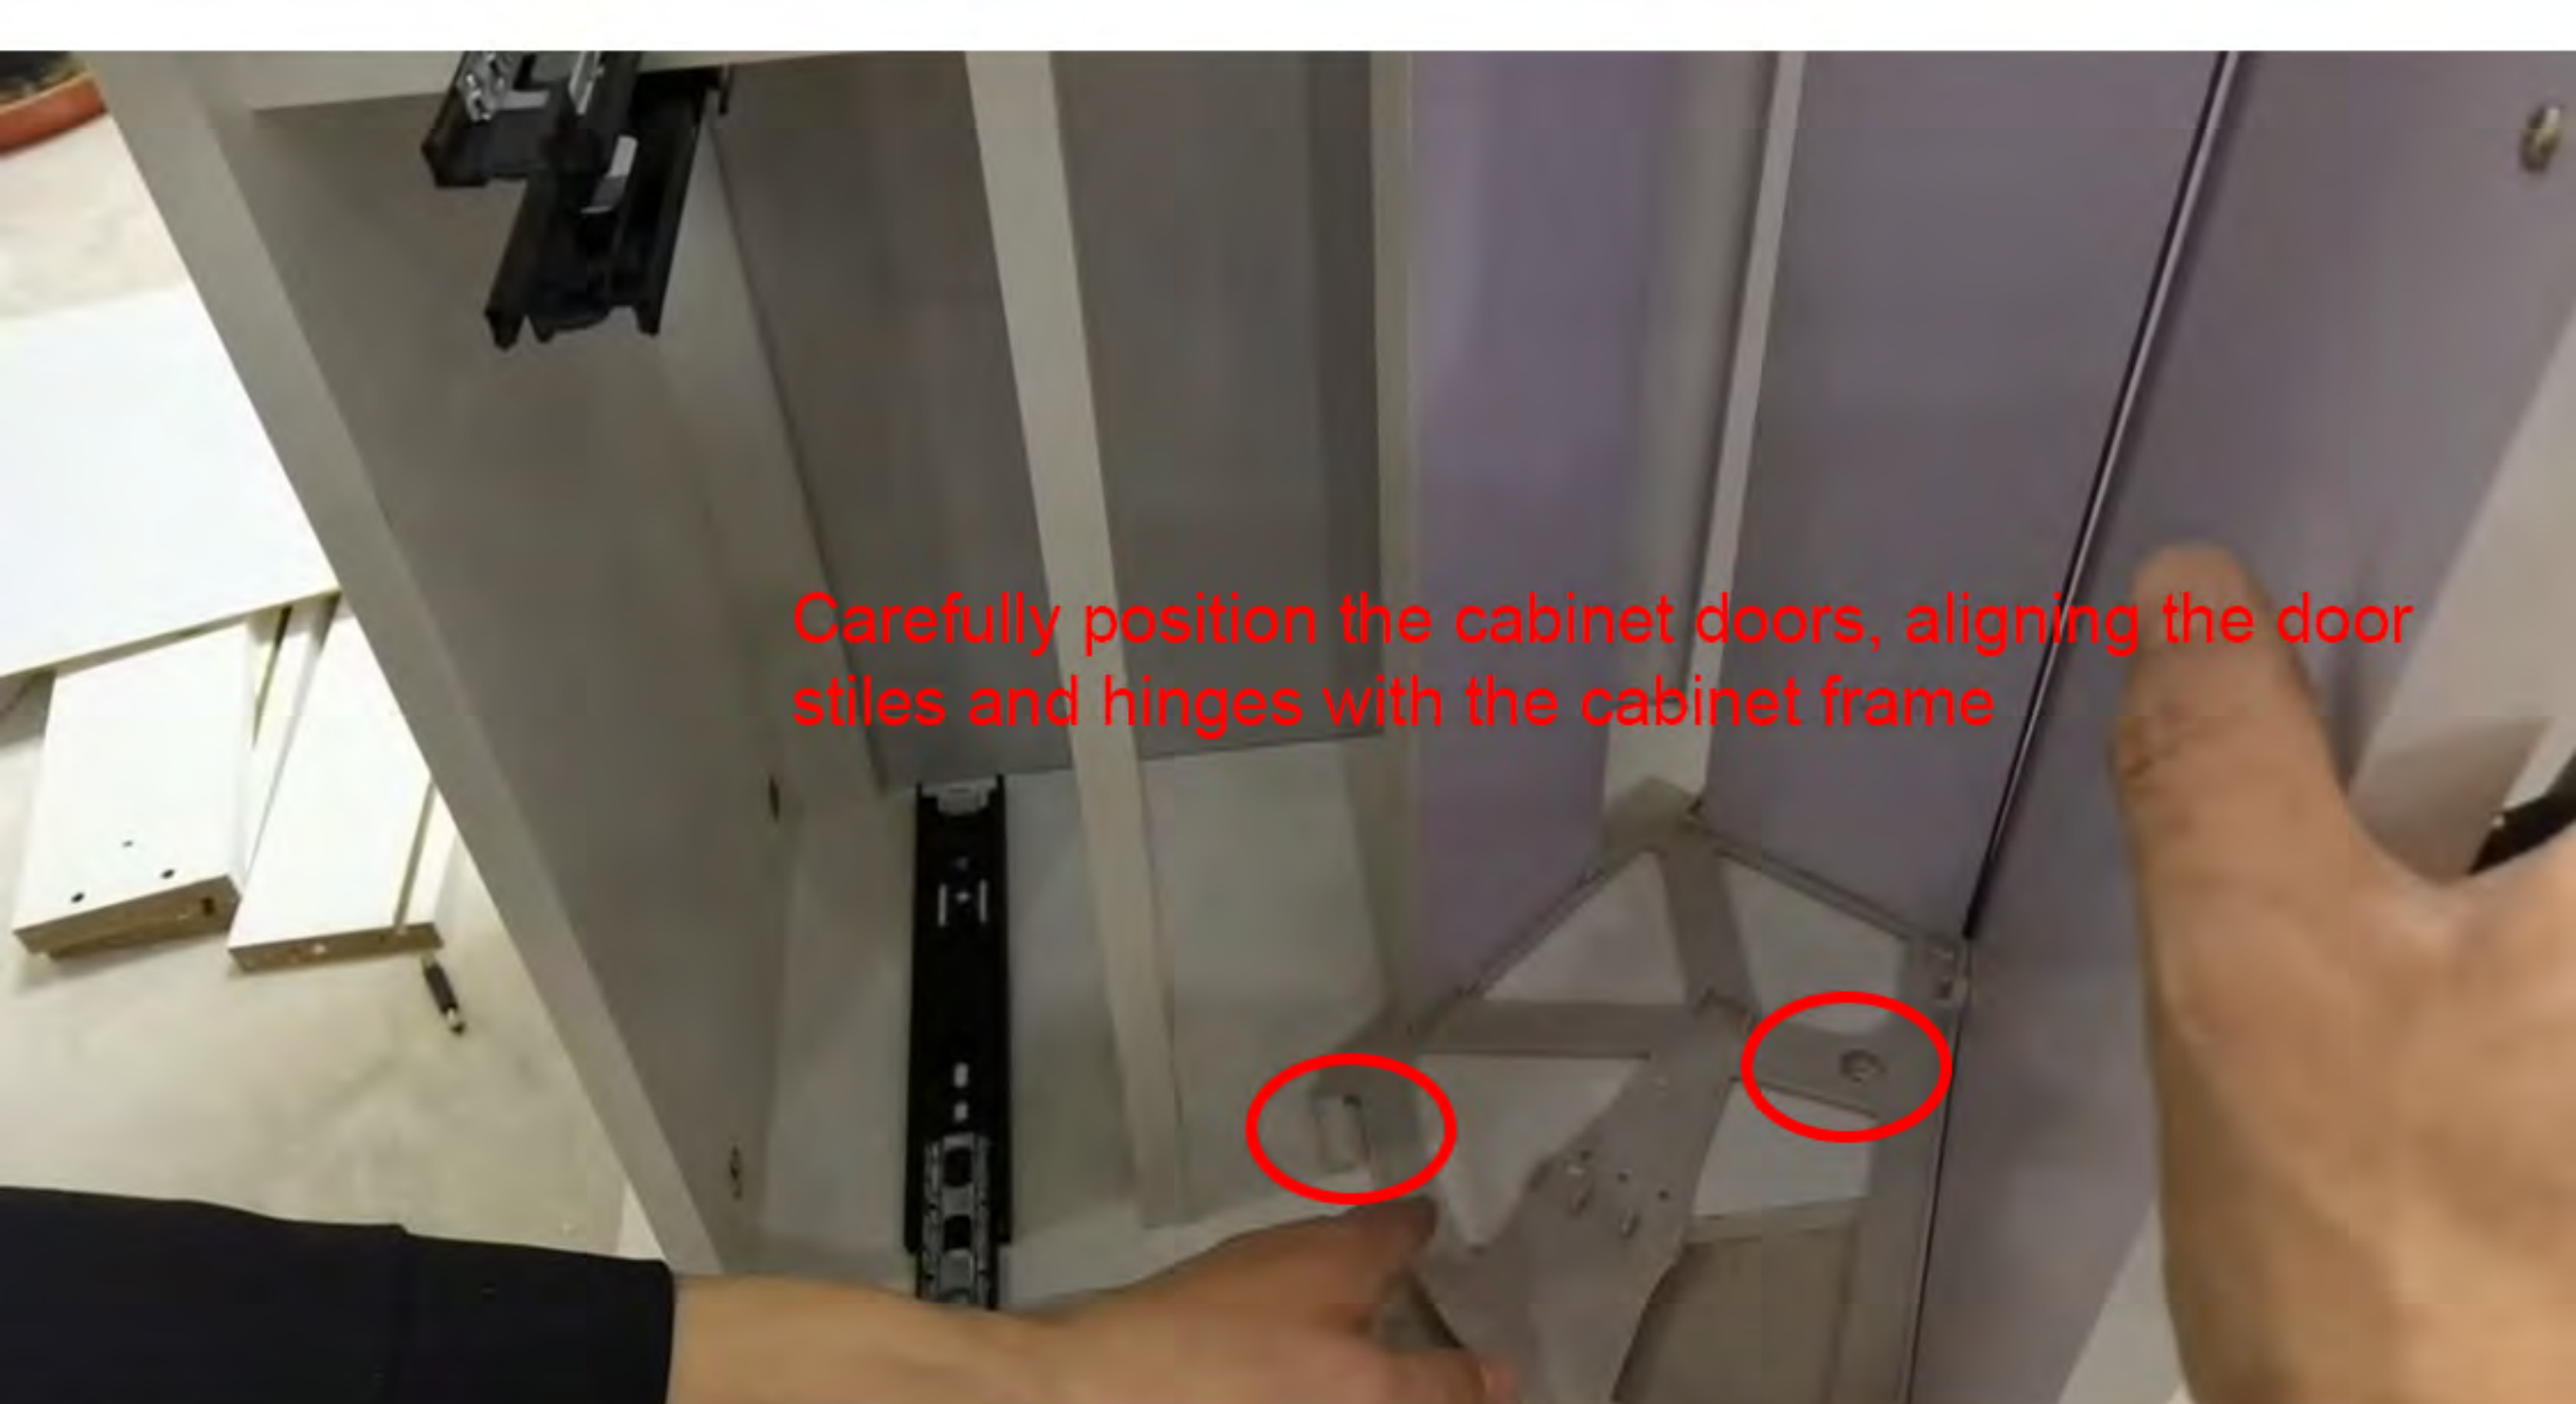




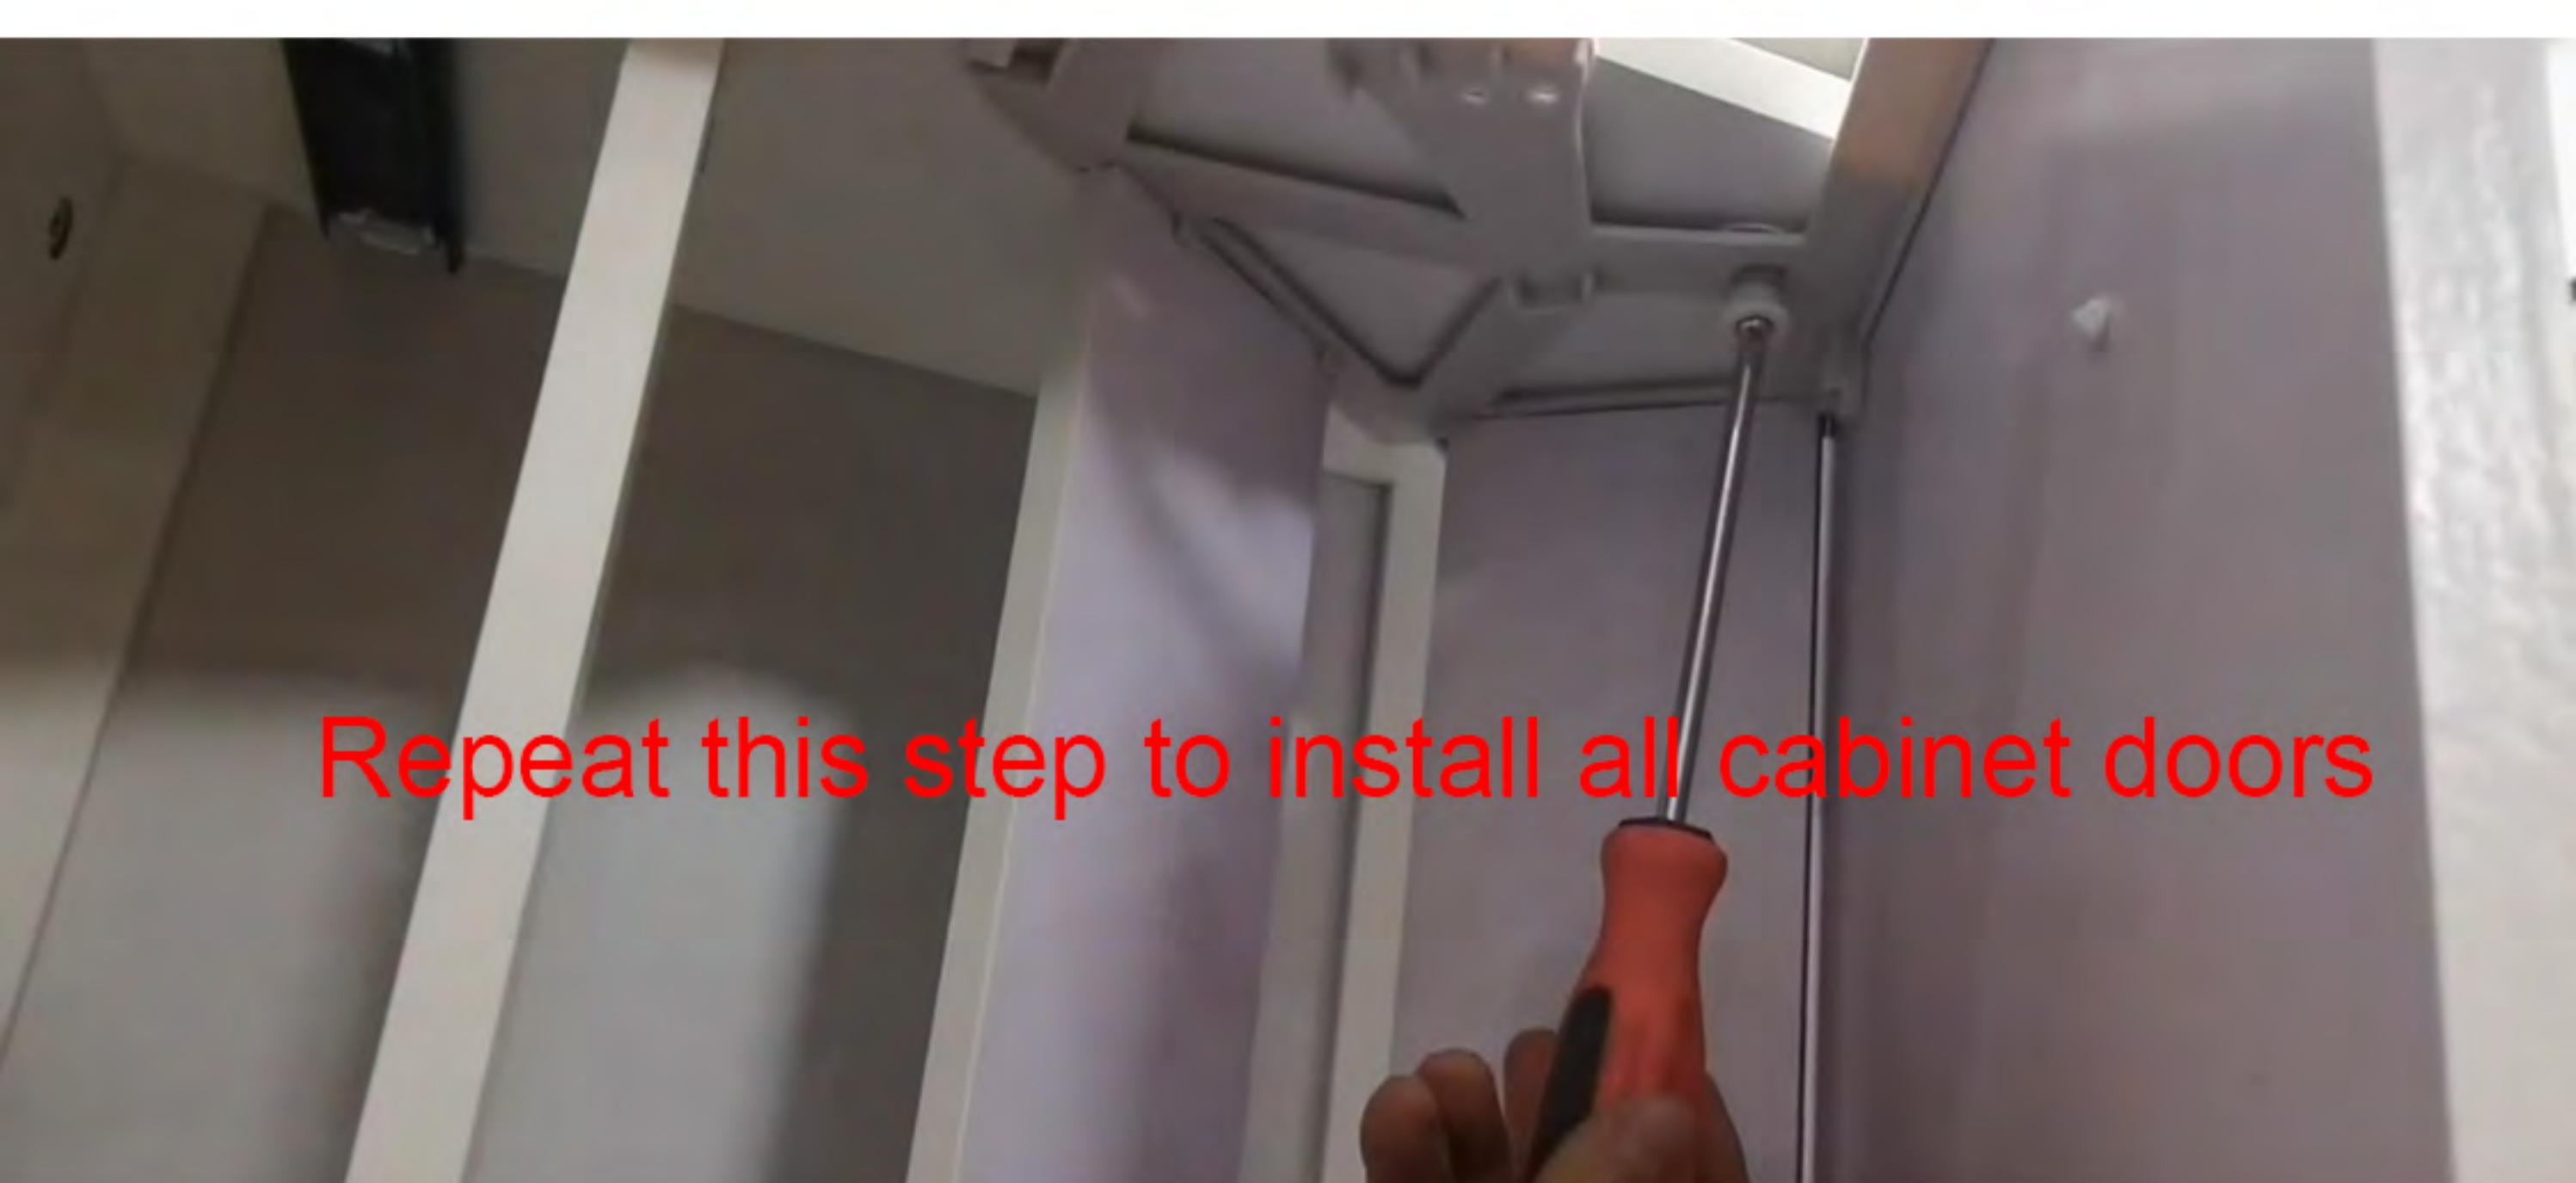


Repeat this step to install all cabinet doors

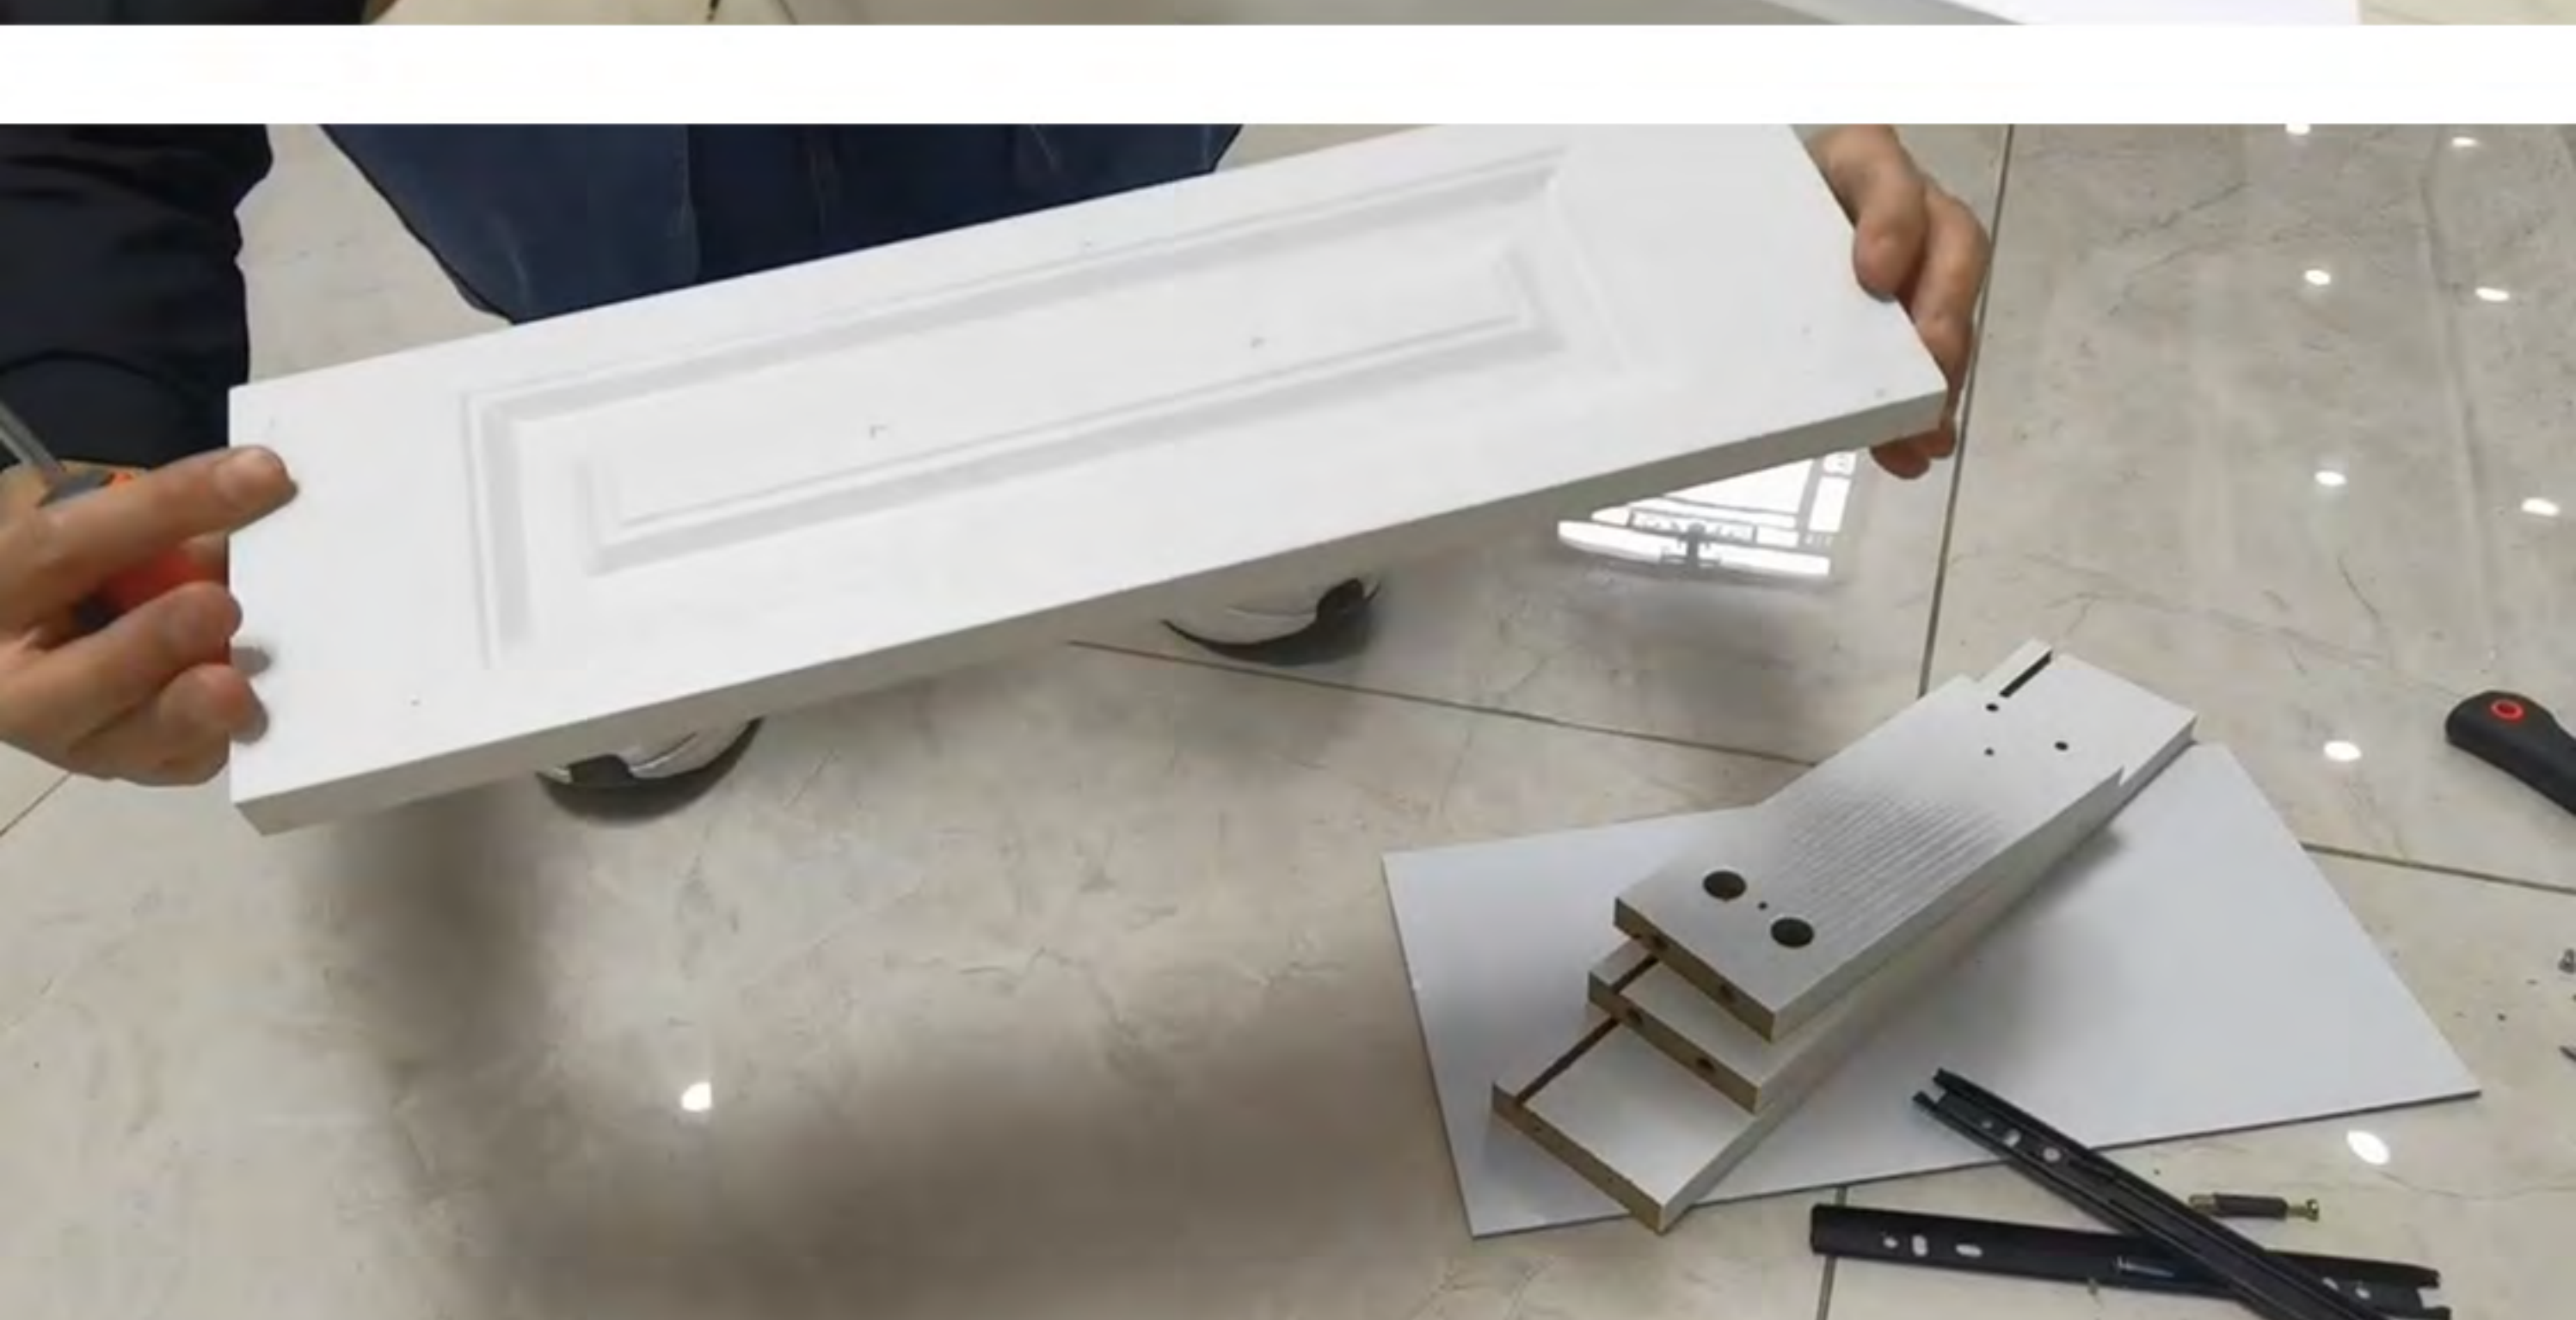



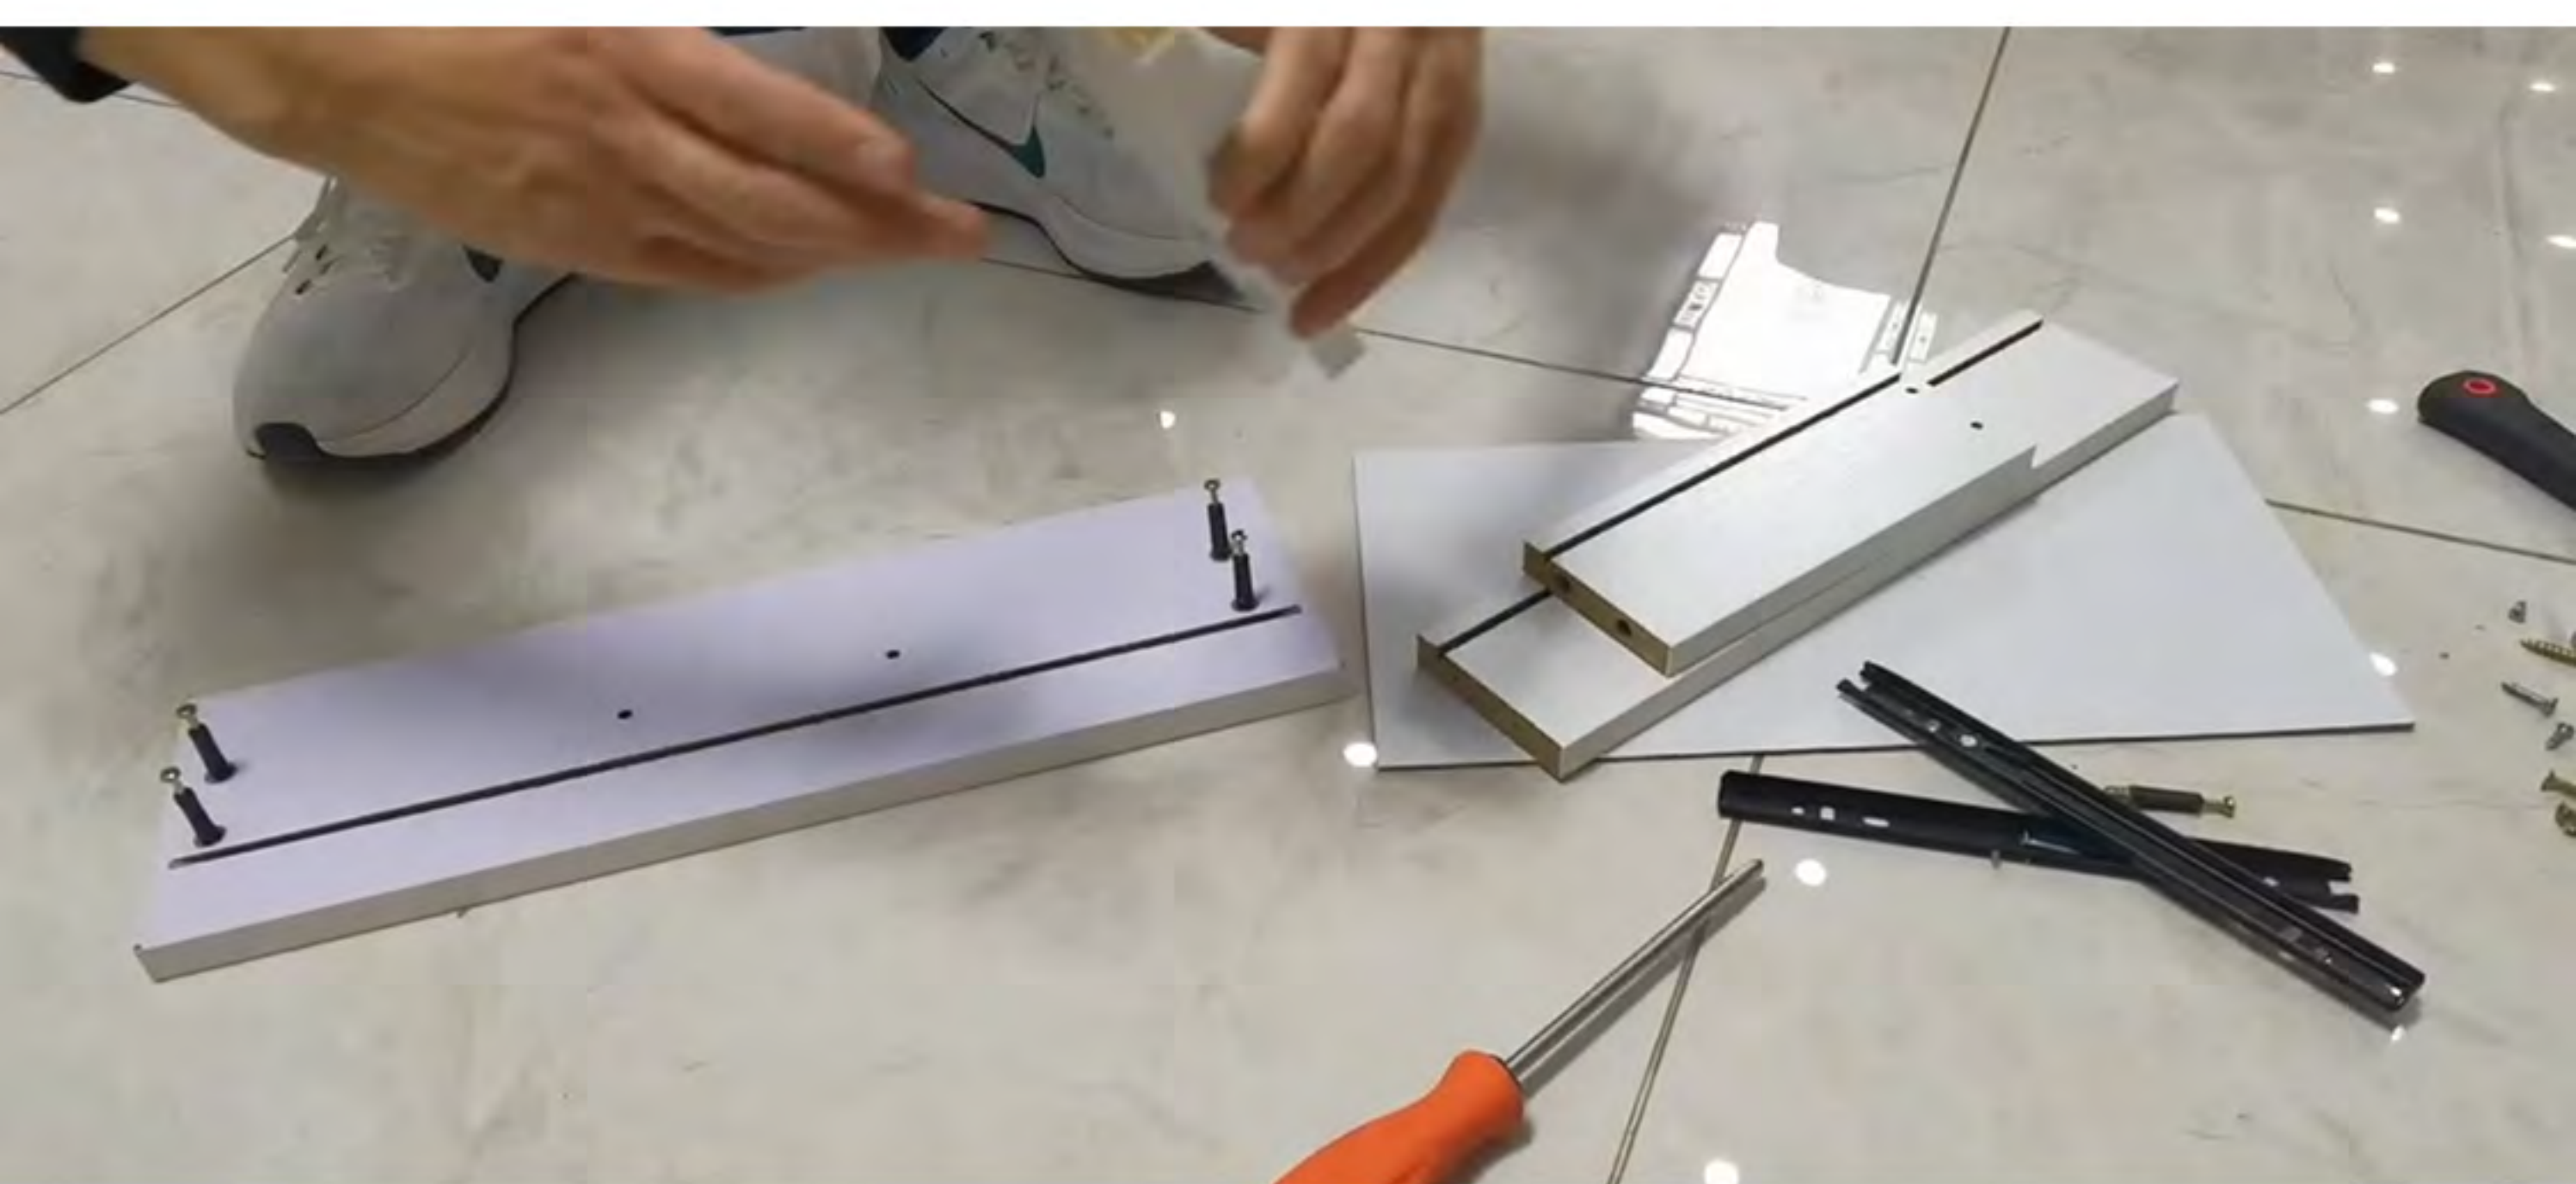



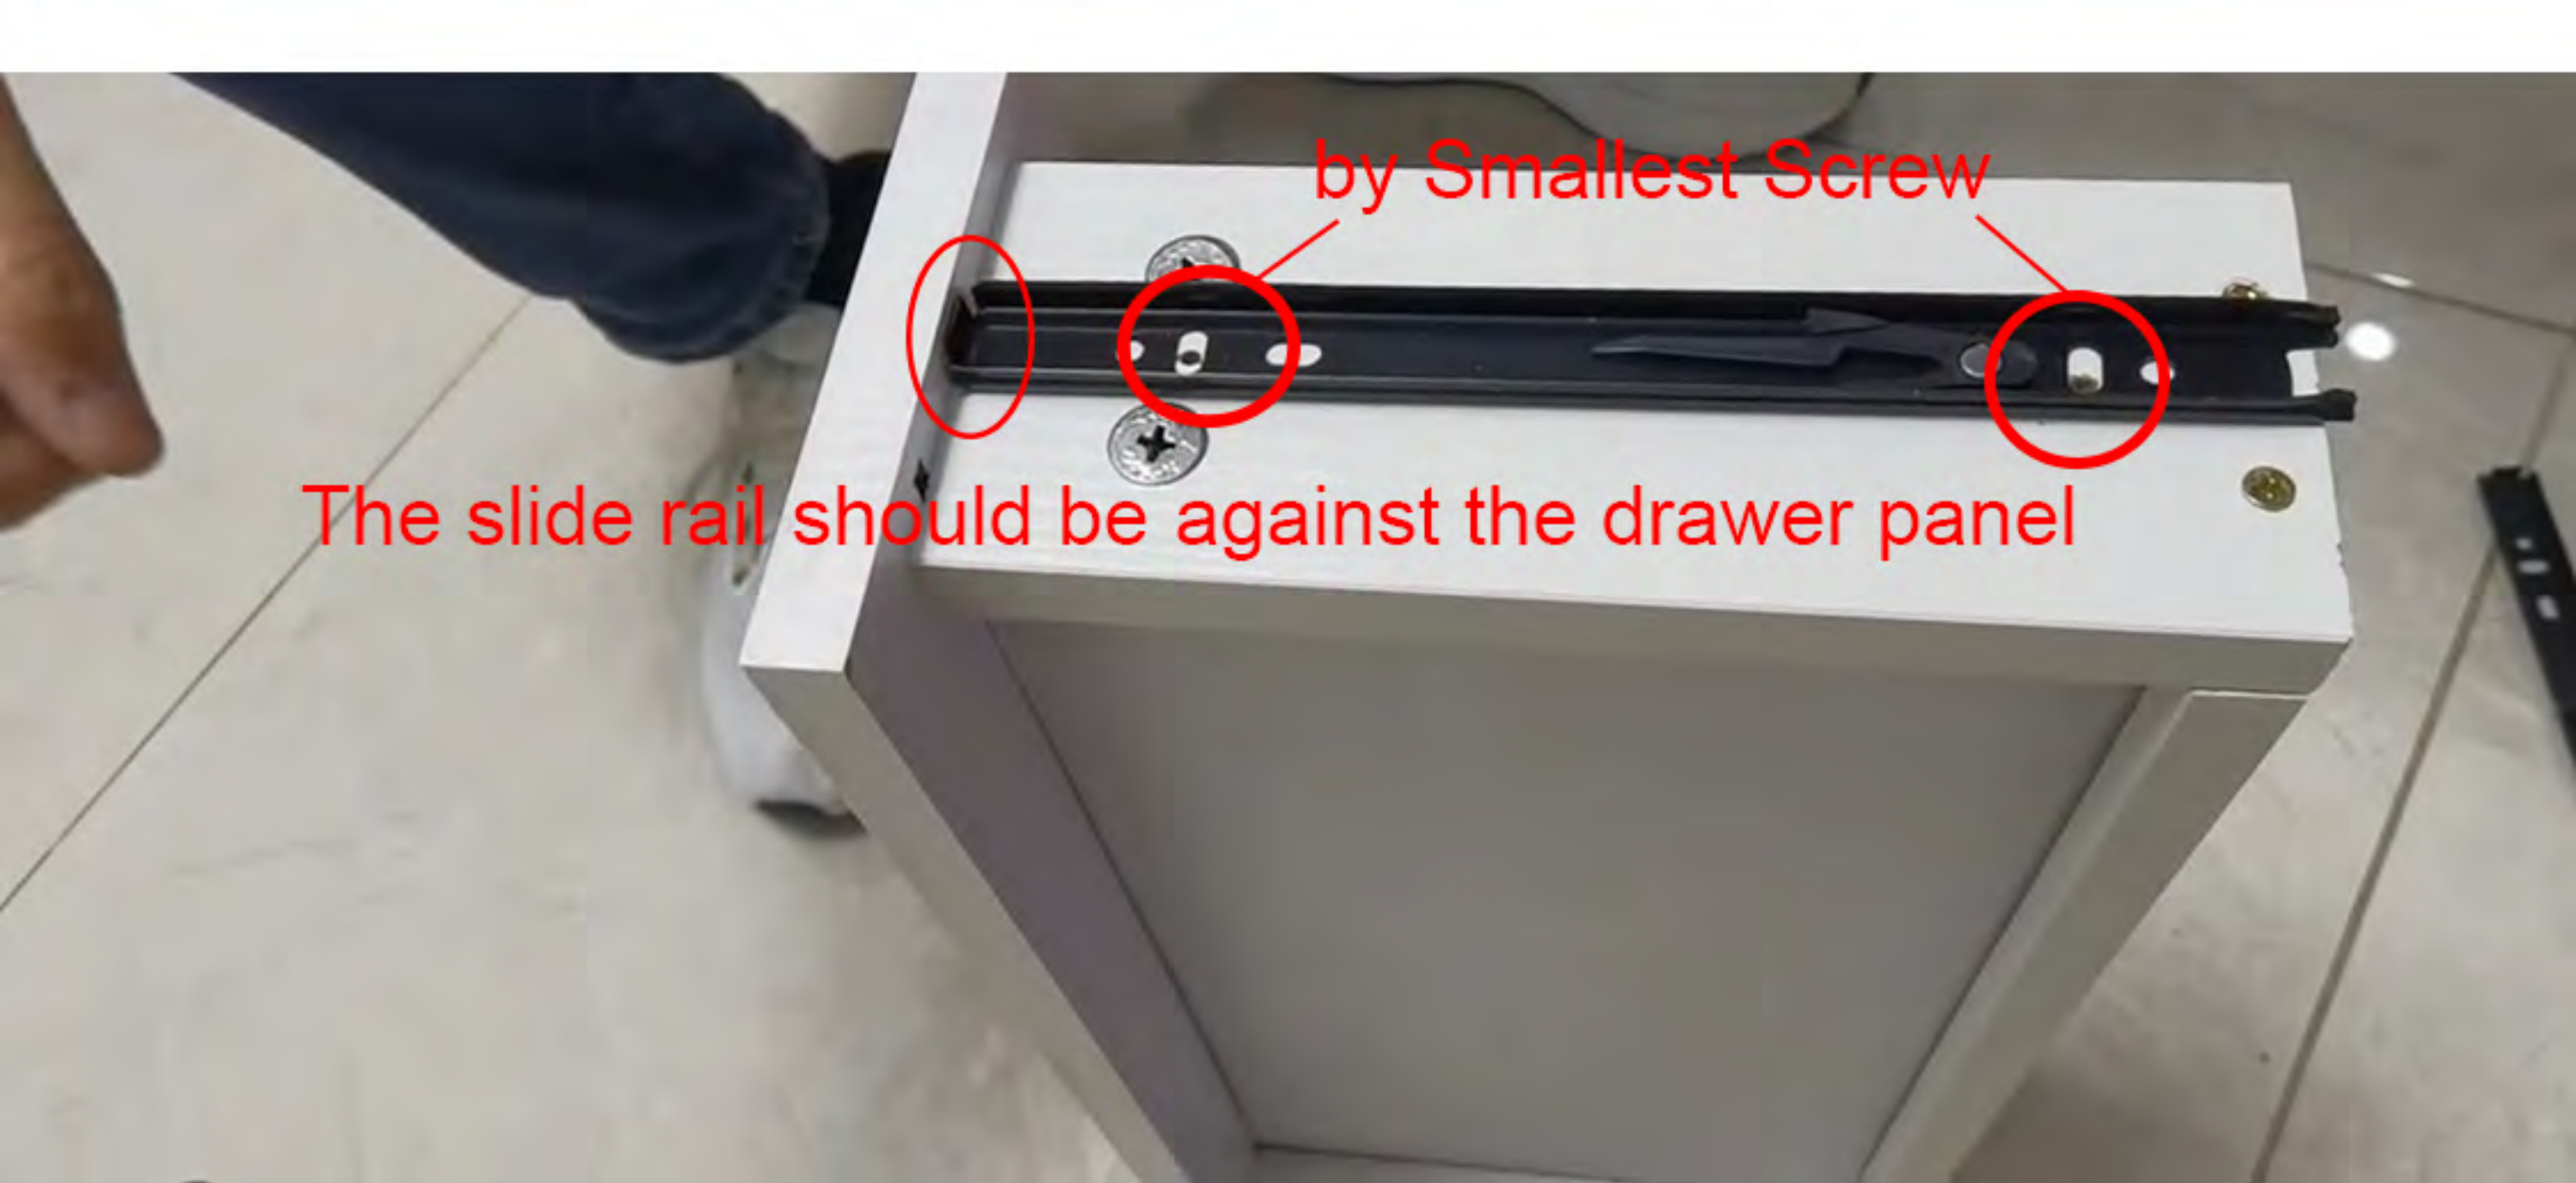


For a more detailed installation tutorial, please refer to the YouTube video.




## Installation of anti-tipping device




If you want to fix it to the wall, you can use the wall nails included in the accessory pack

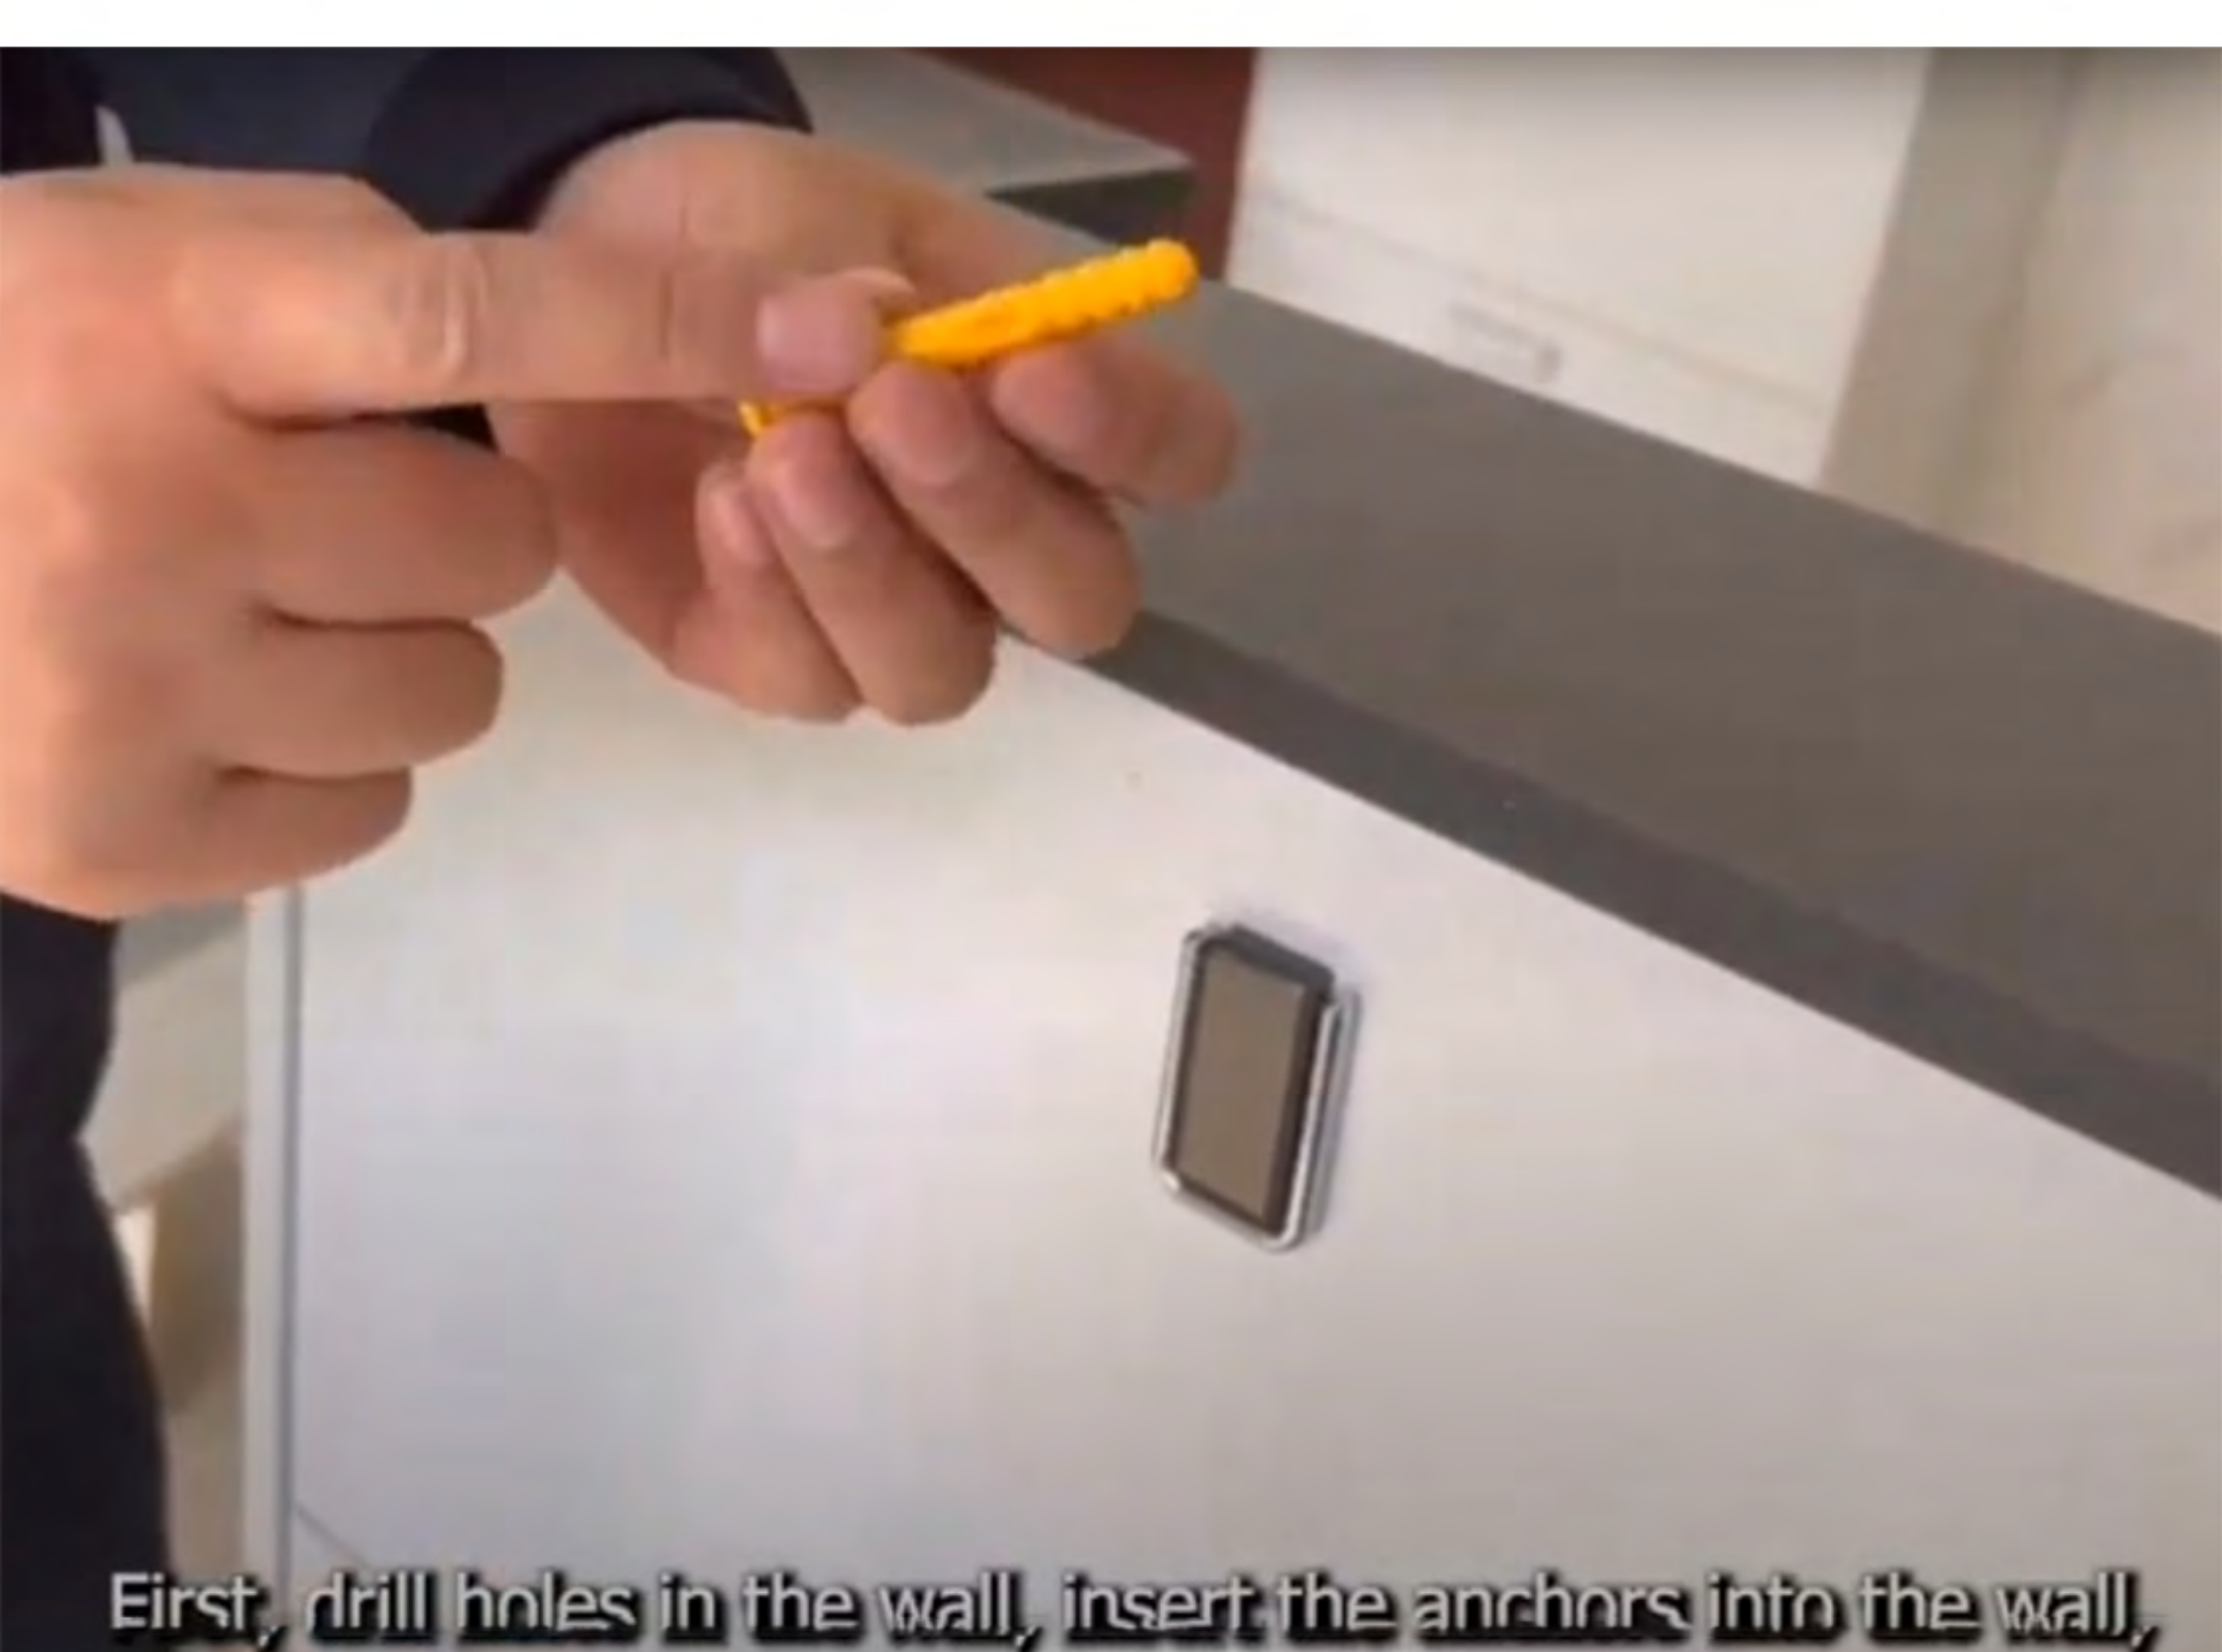

First, drill holes in the wall, insert the anchors into the wall,

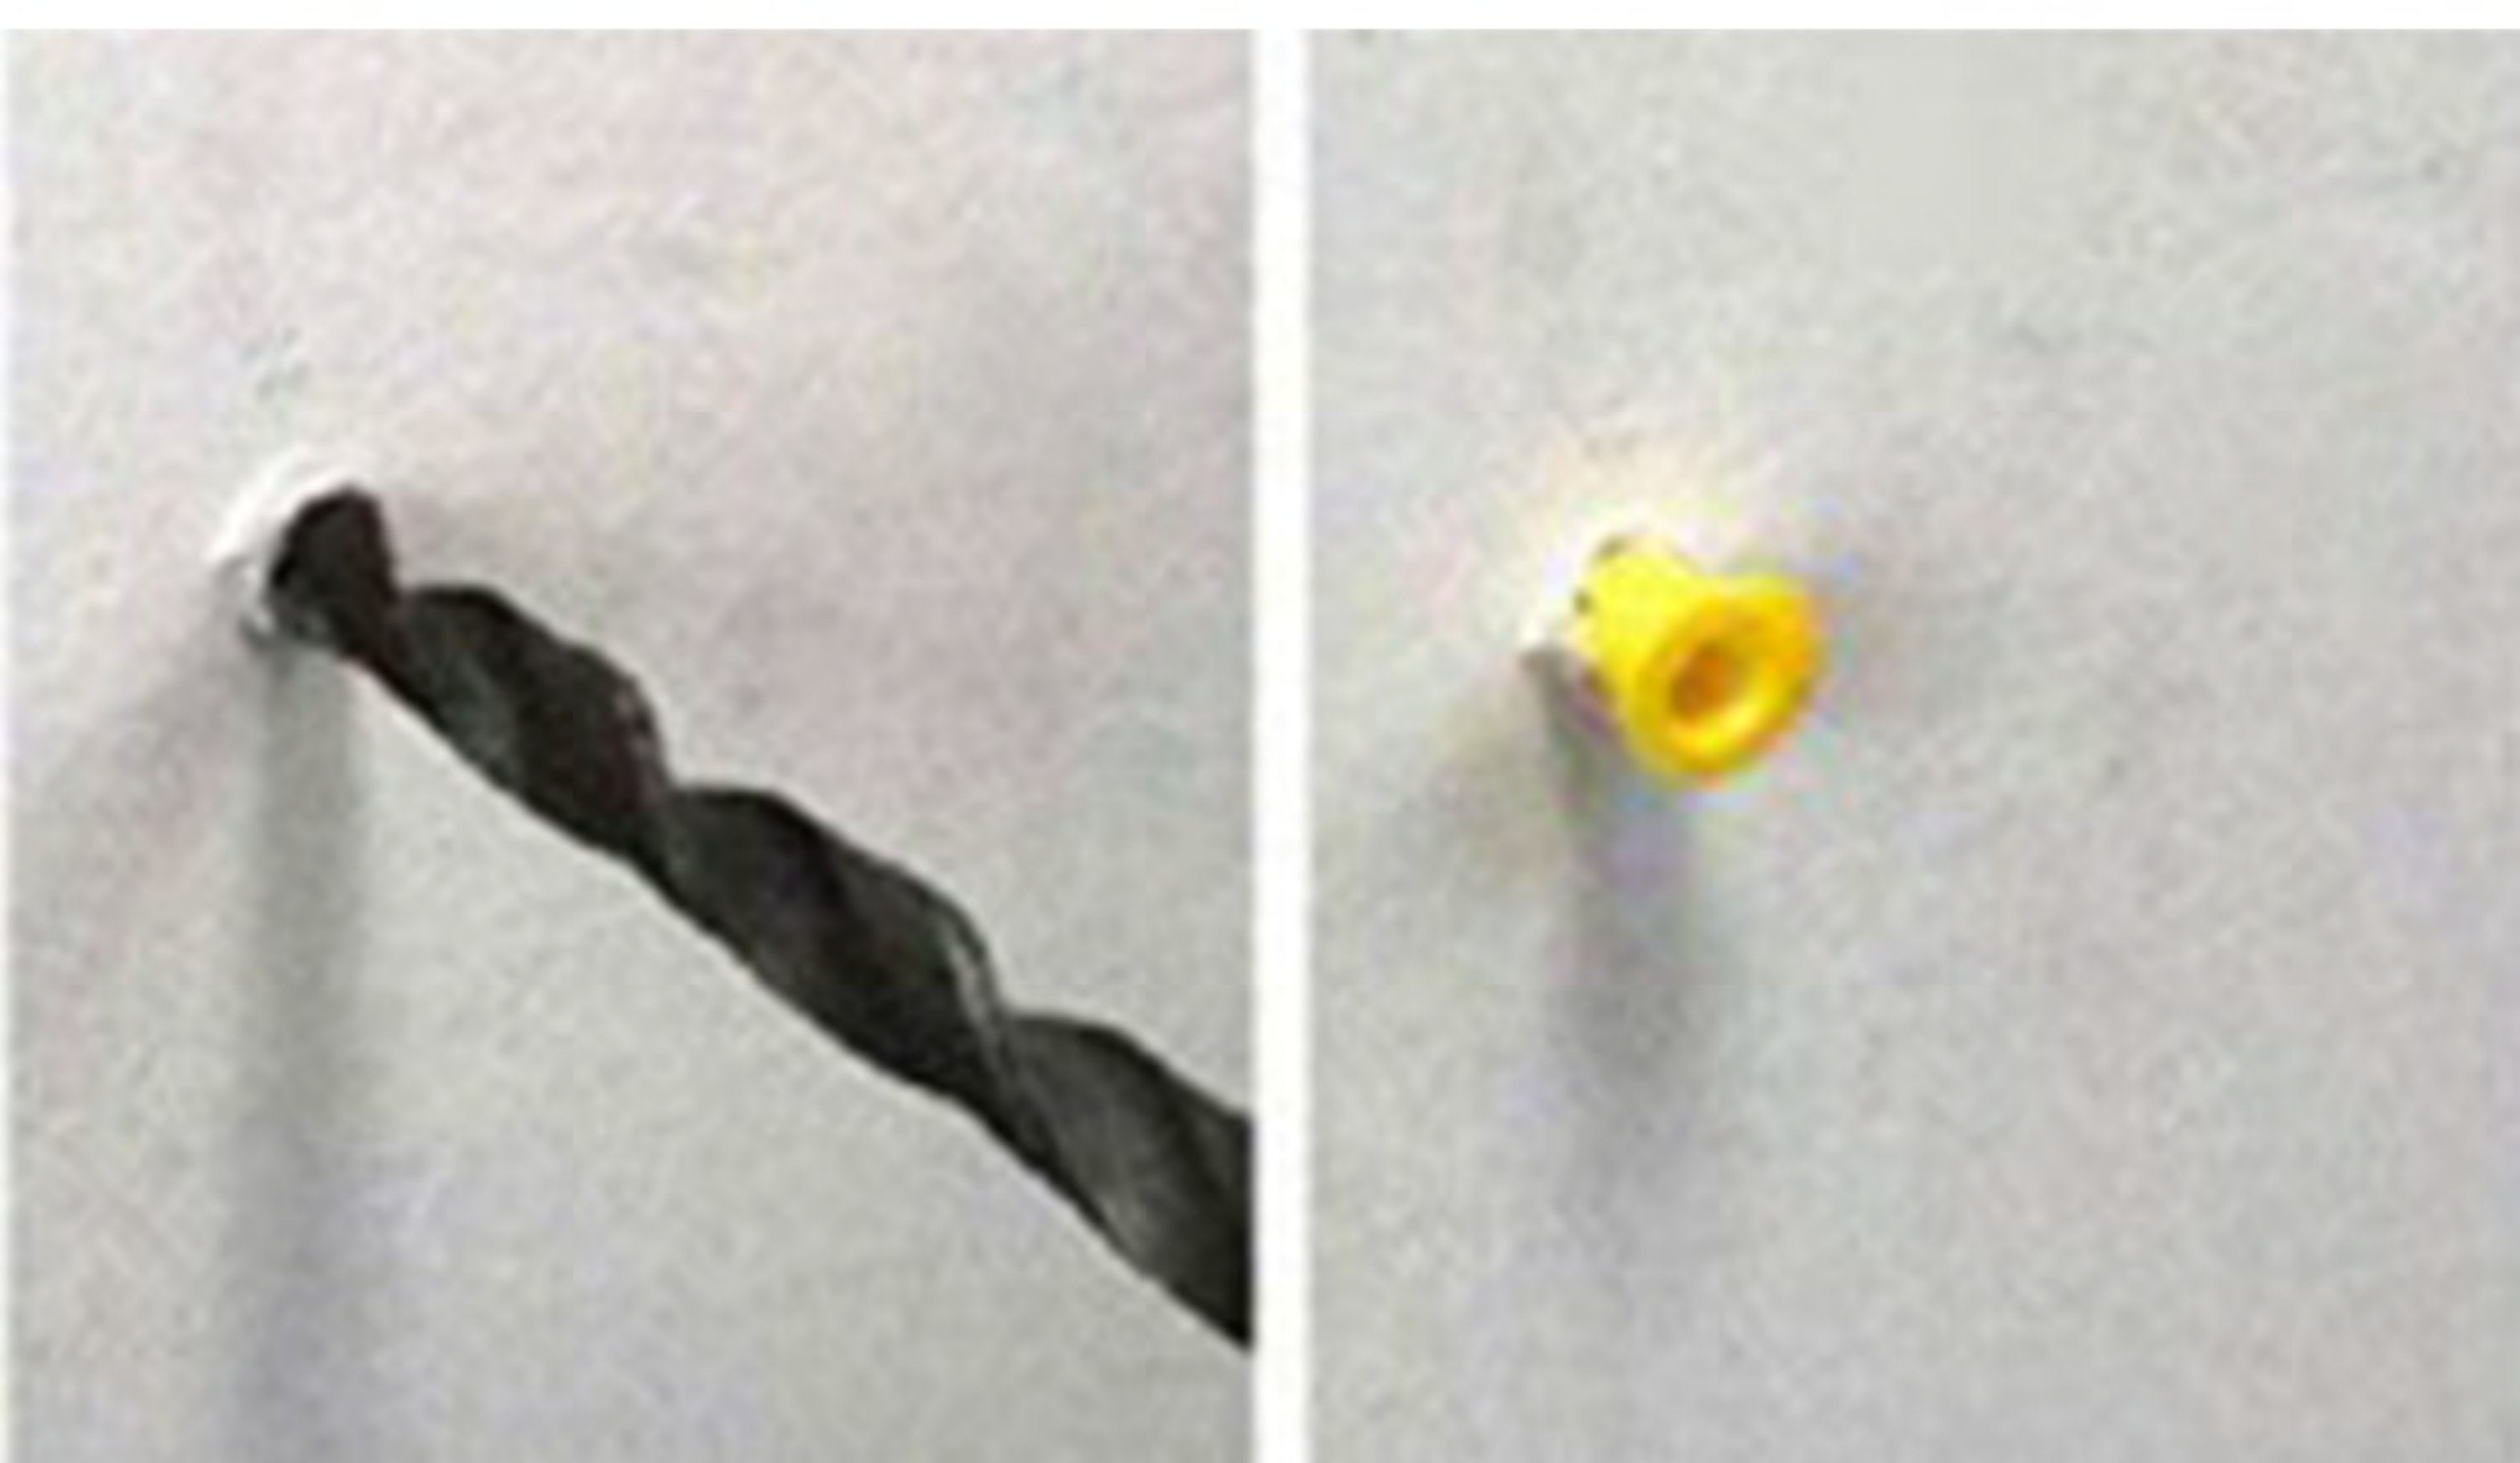

and then pass the long screws through the cabinet from the inside

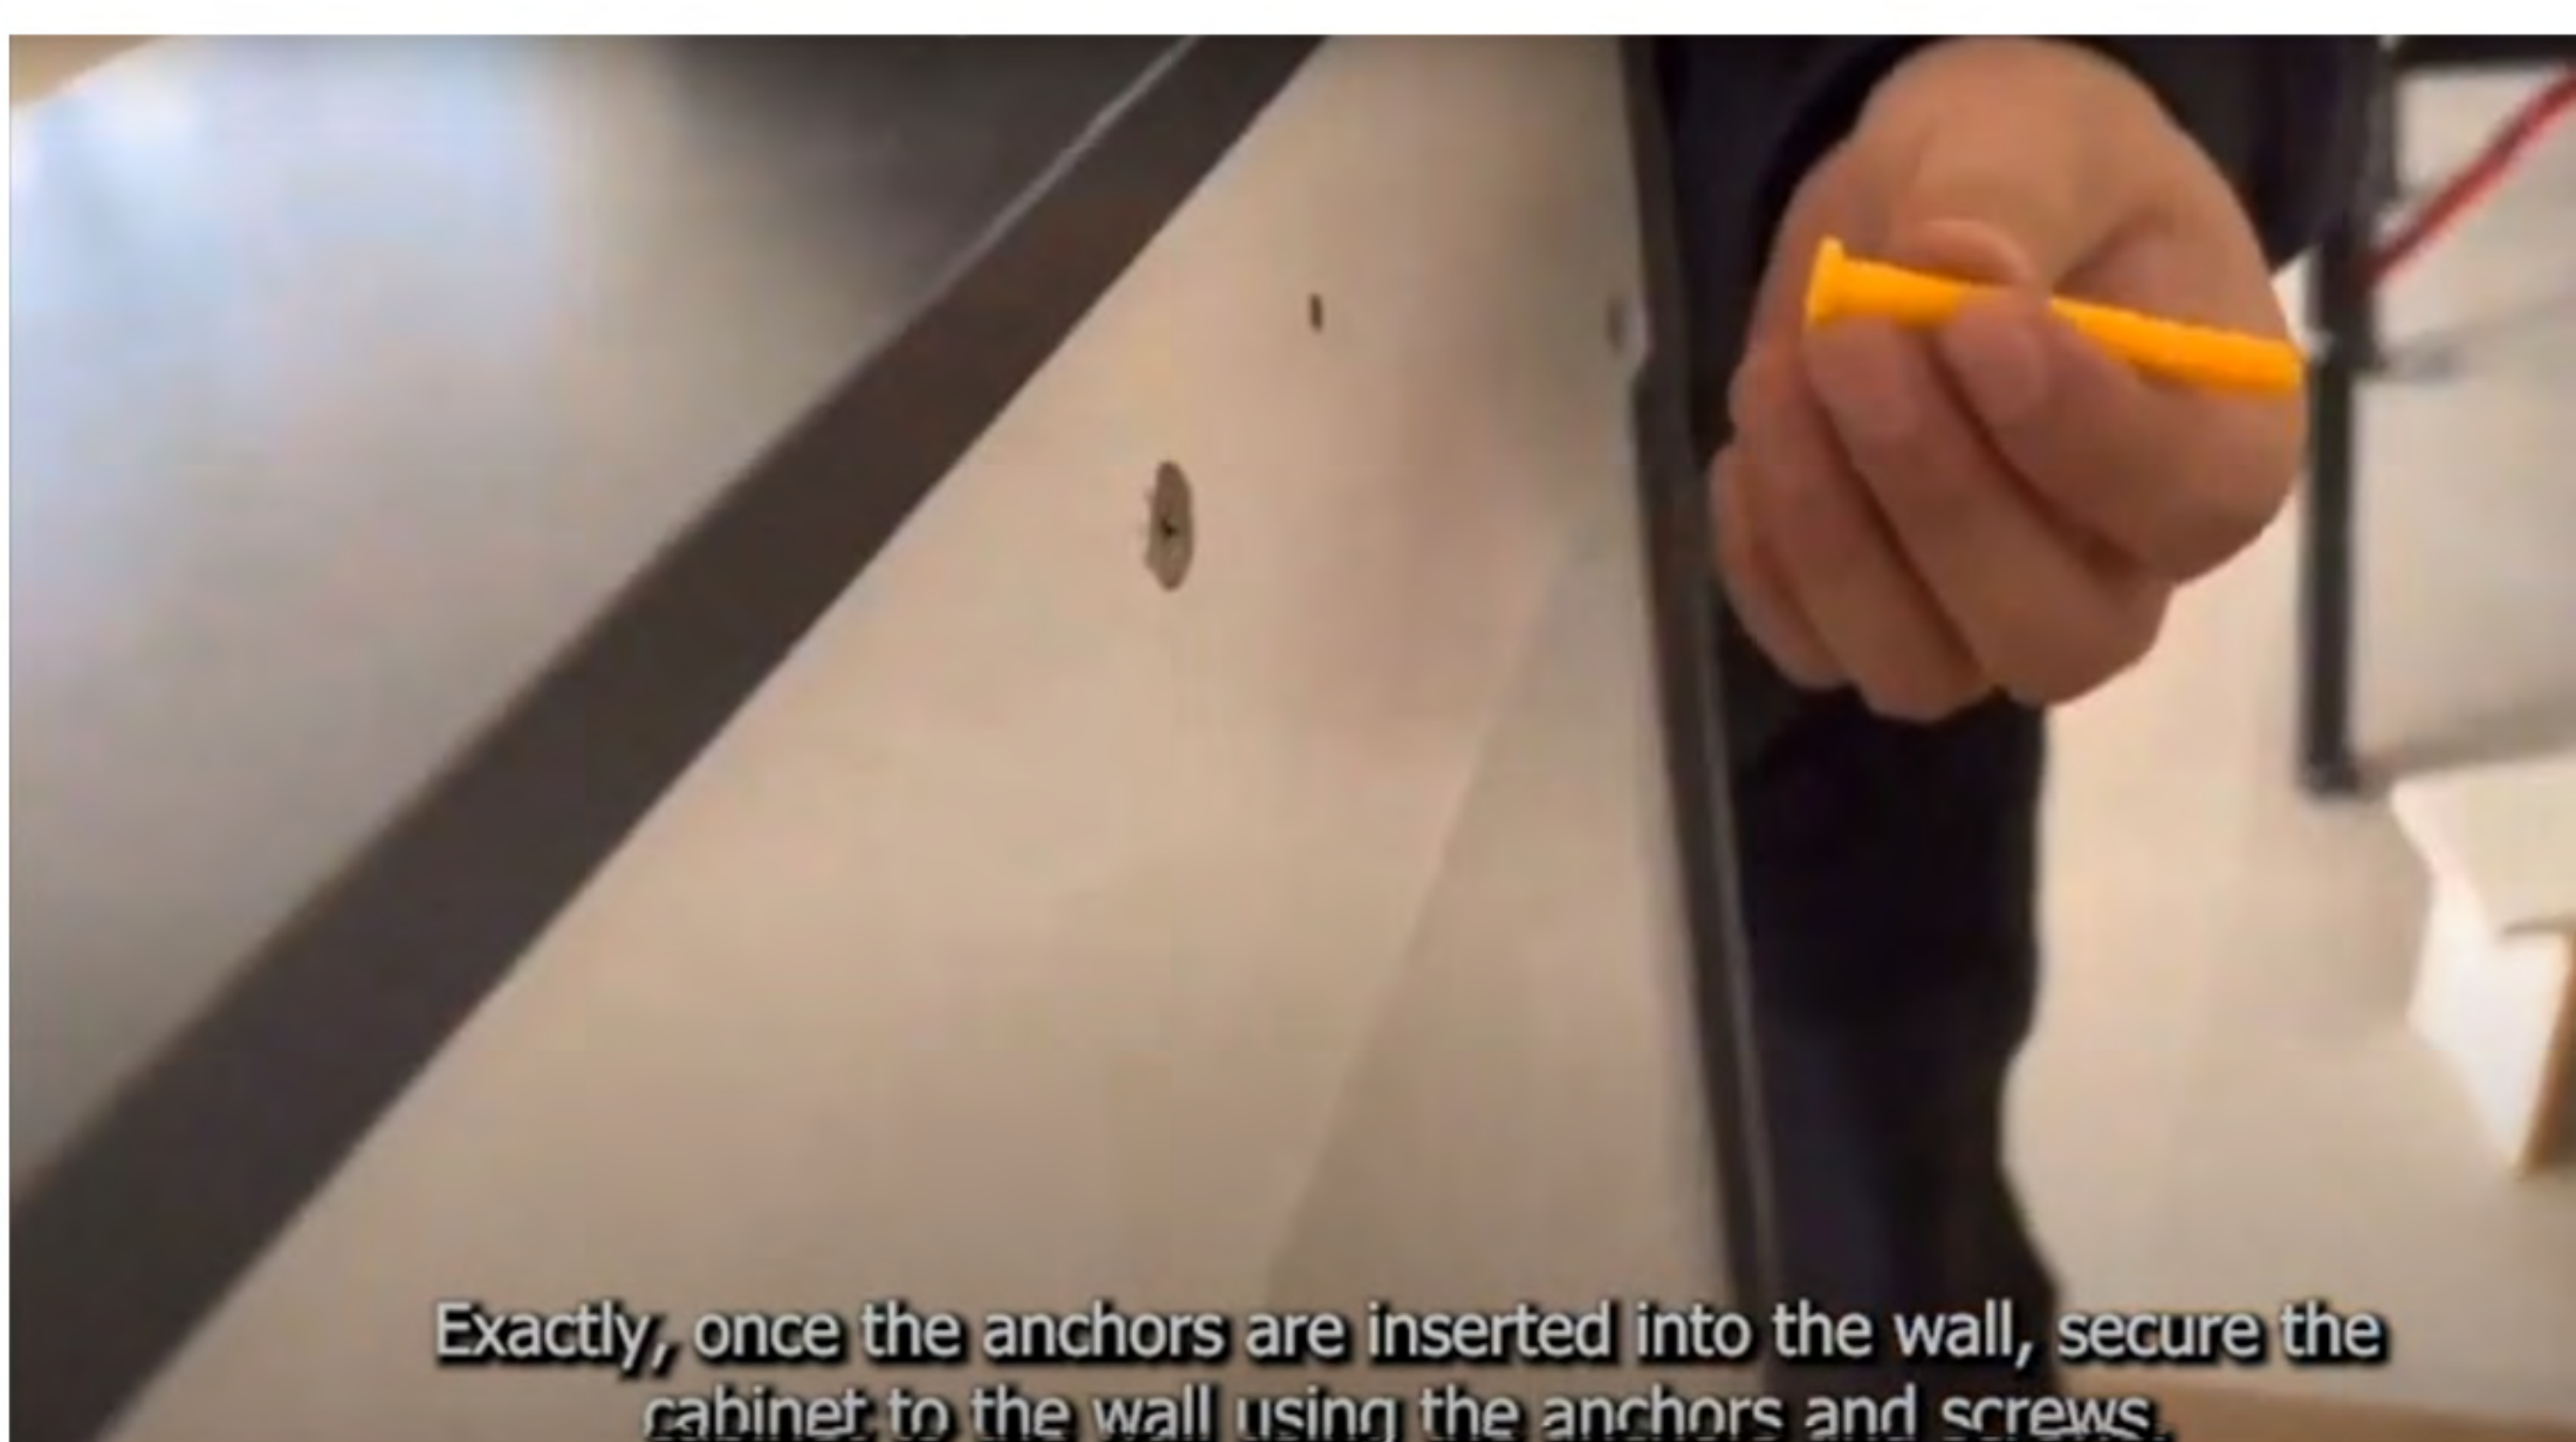

Exactly, once the anchors are inserted into the wall, secure the cabinet to the wall using the anchors and screws.