

WH001

Installation Instructions

- 1, Flat head screws 2, Flat head screws 3, Counter lock nuts



A, Legs



B, Long pegboard




C, Short pegboard



D, Lower column



E, Upper column

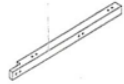

Phillips screwdriver required for installation of screws



1, Attach the upper column to the lower column using the legs to the lower column flat head screws and counter lock nuts




2, Use pointed screws to fix the legs to the lower column



Final Look




3, Install the pegboard

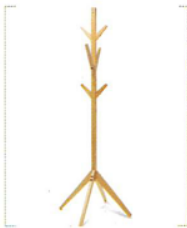

4, Install the pegboard



Final Look

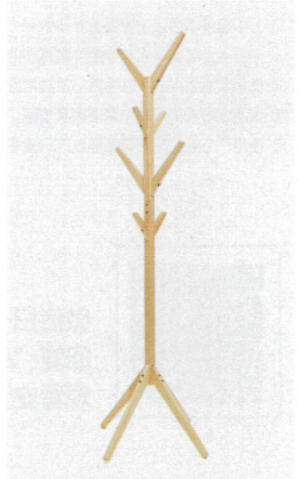

Final Look

Installation details

