

Furniture installation



Please be sure to use a manual screwdriver and refrain from using an electric drill.

Installation process of TV cabinet call= table

sum TV003





D0*40



D0*40



B3*20



A1*32



K20*20



L56*2




L55*6



D7*2



Screwdriver

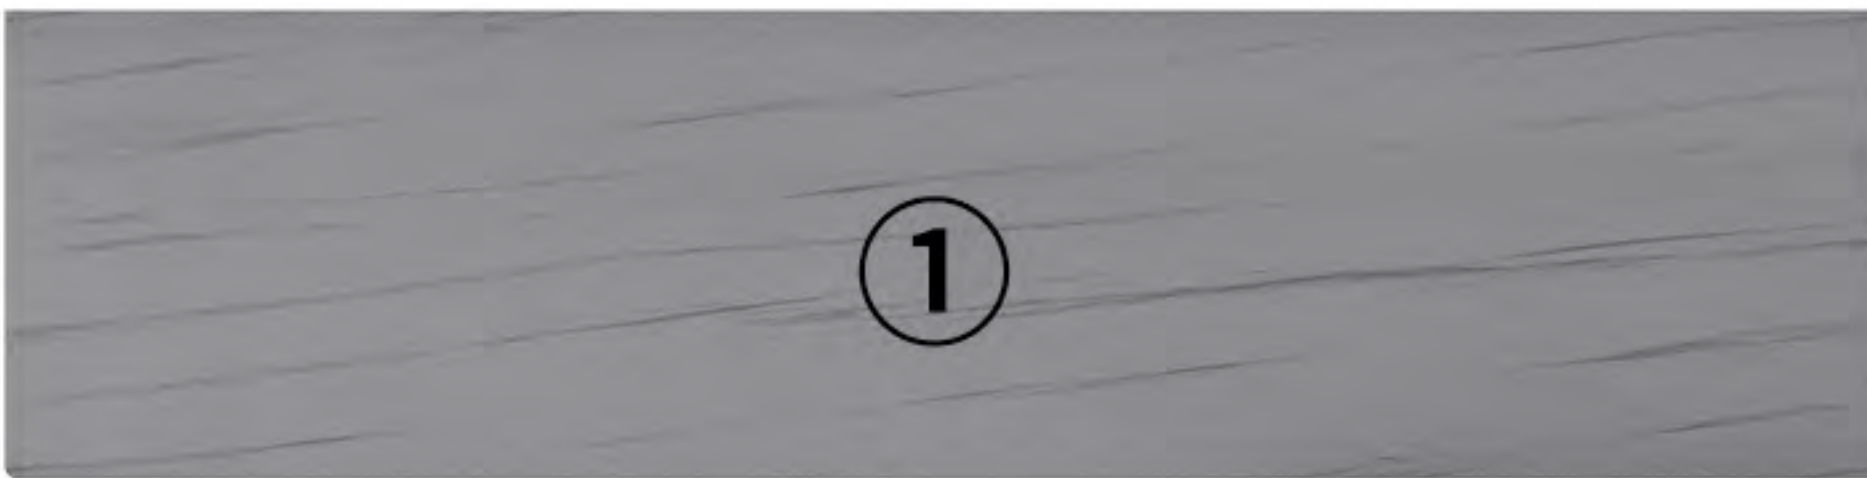

1



7



4



6








9



14




15

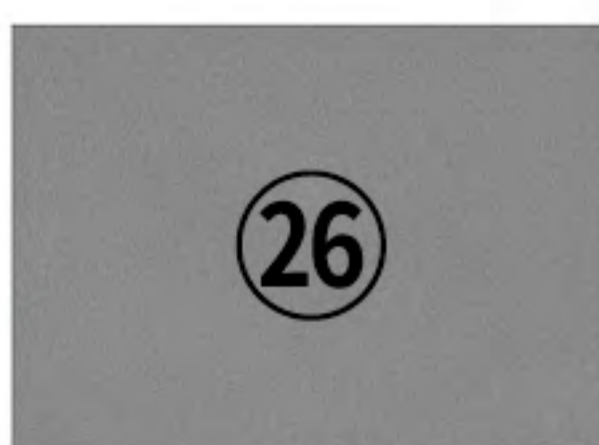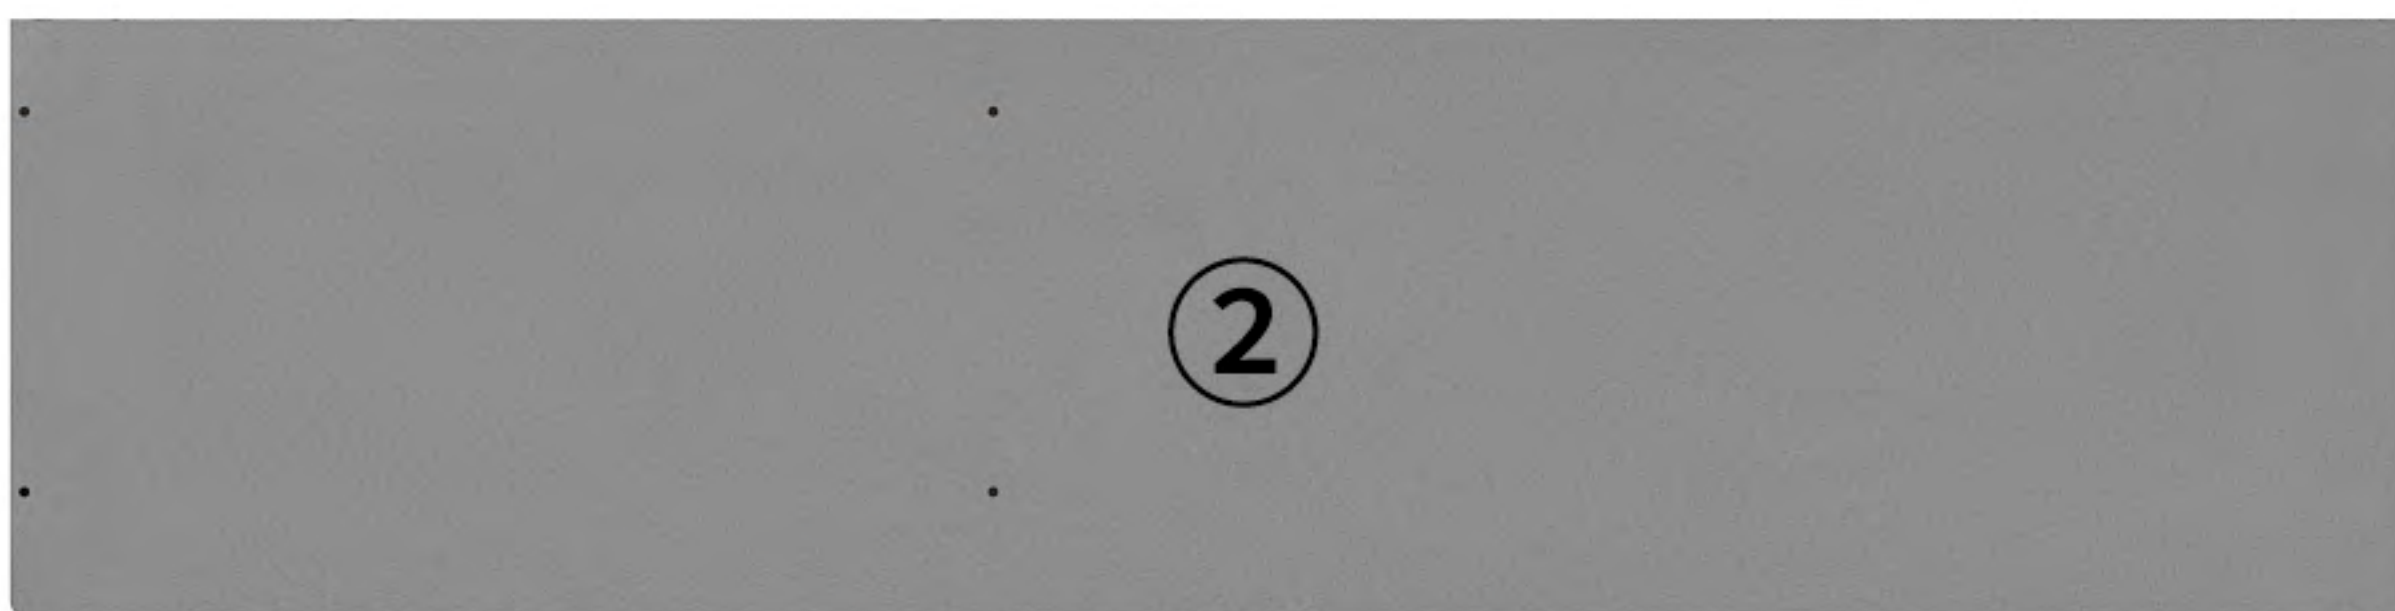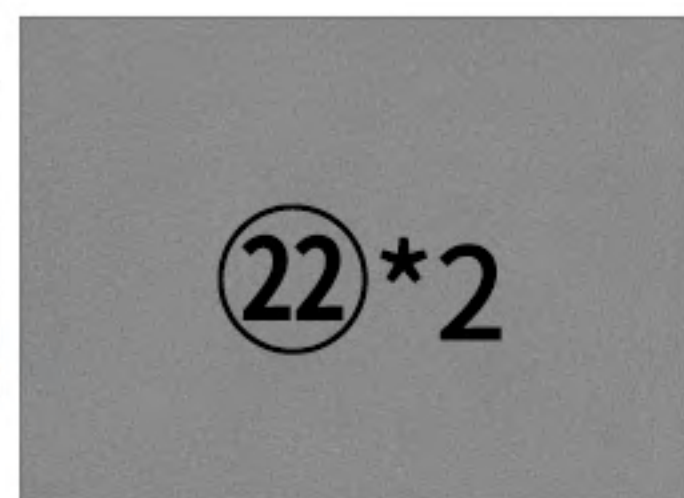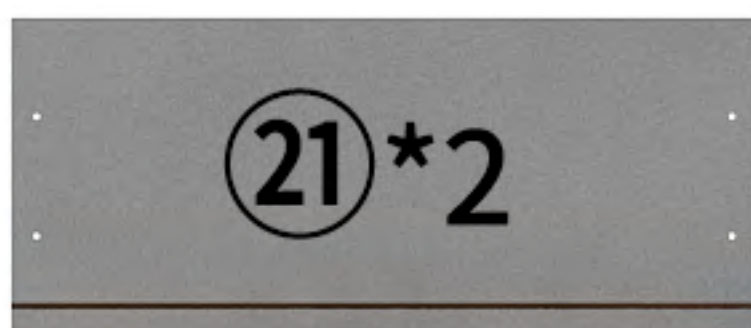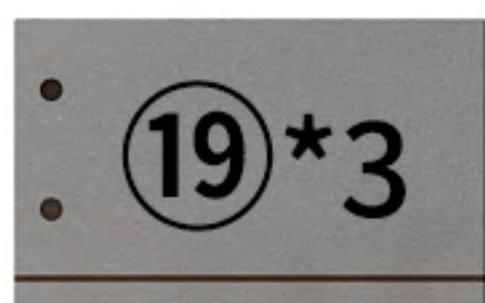


Presentation of finished product




Product Split Diagram

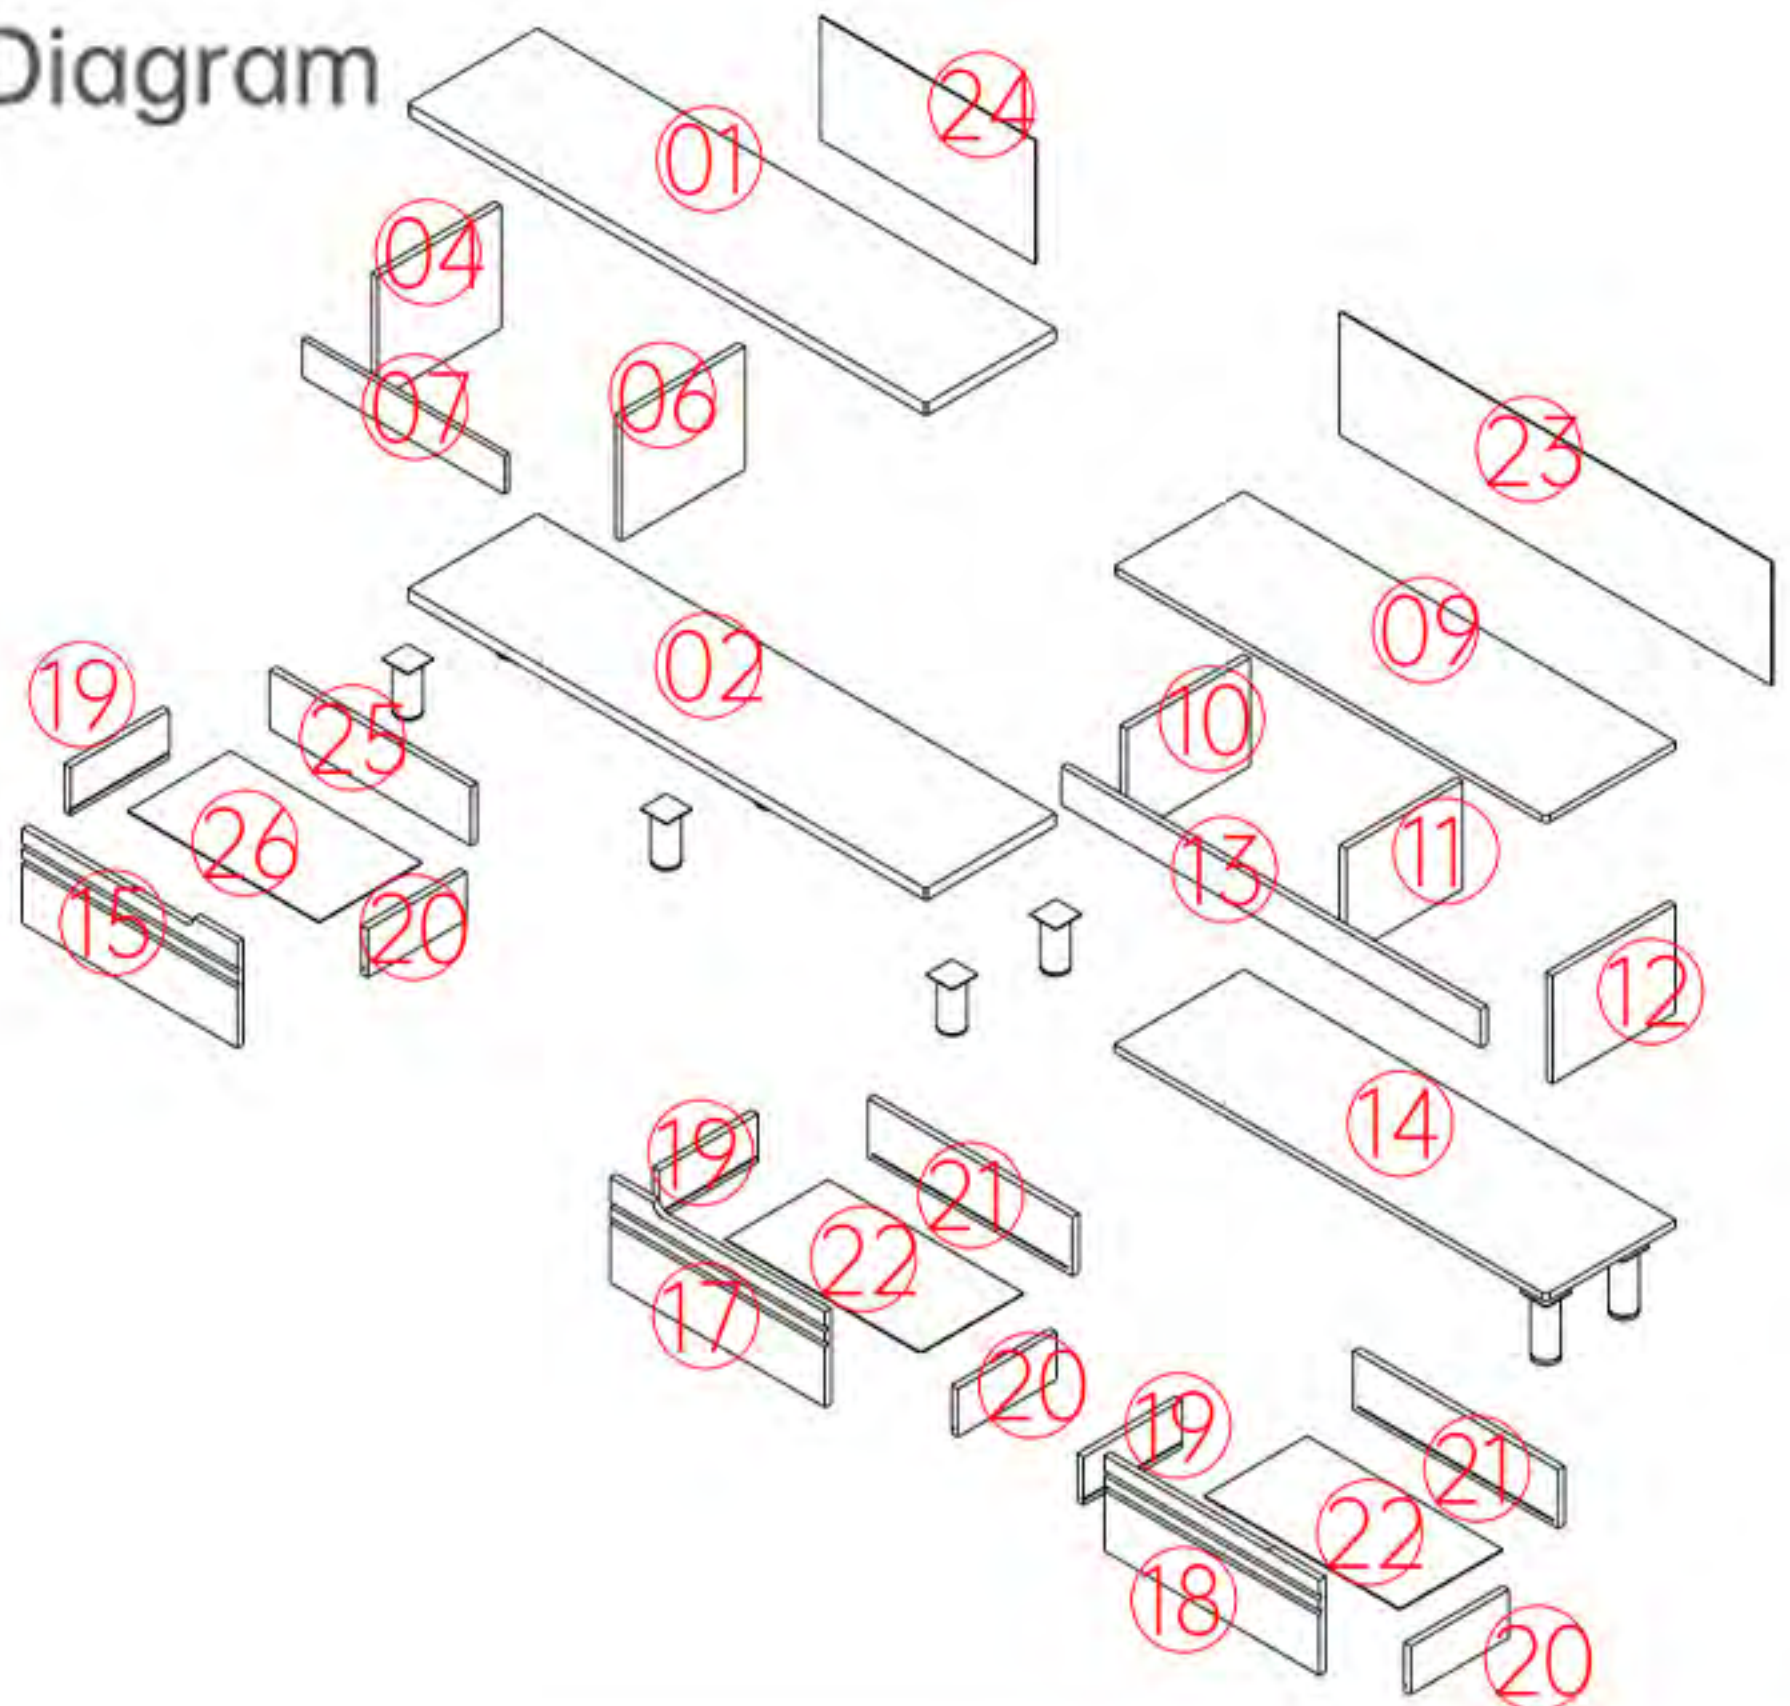


Installation method of eccentric screw

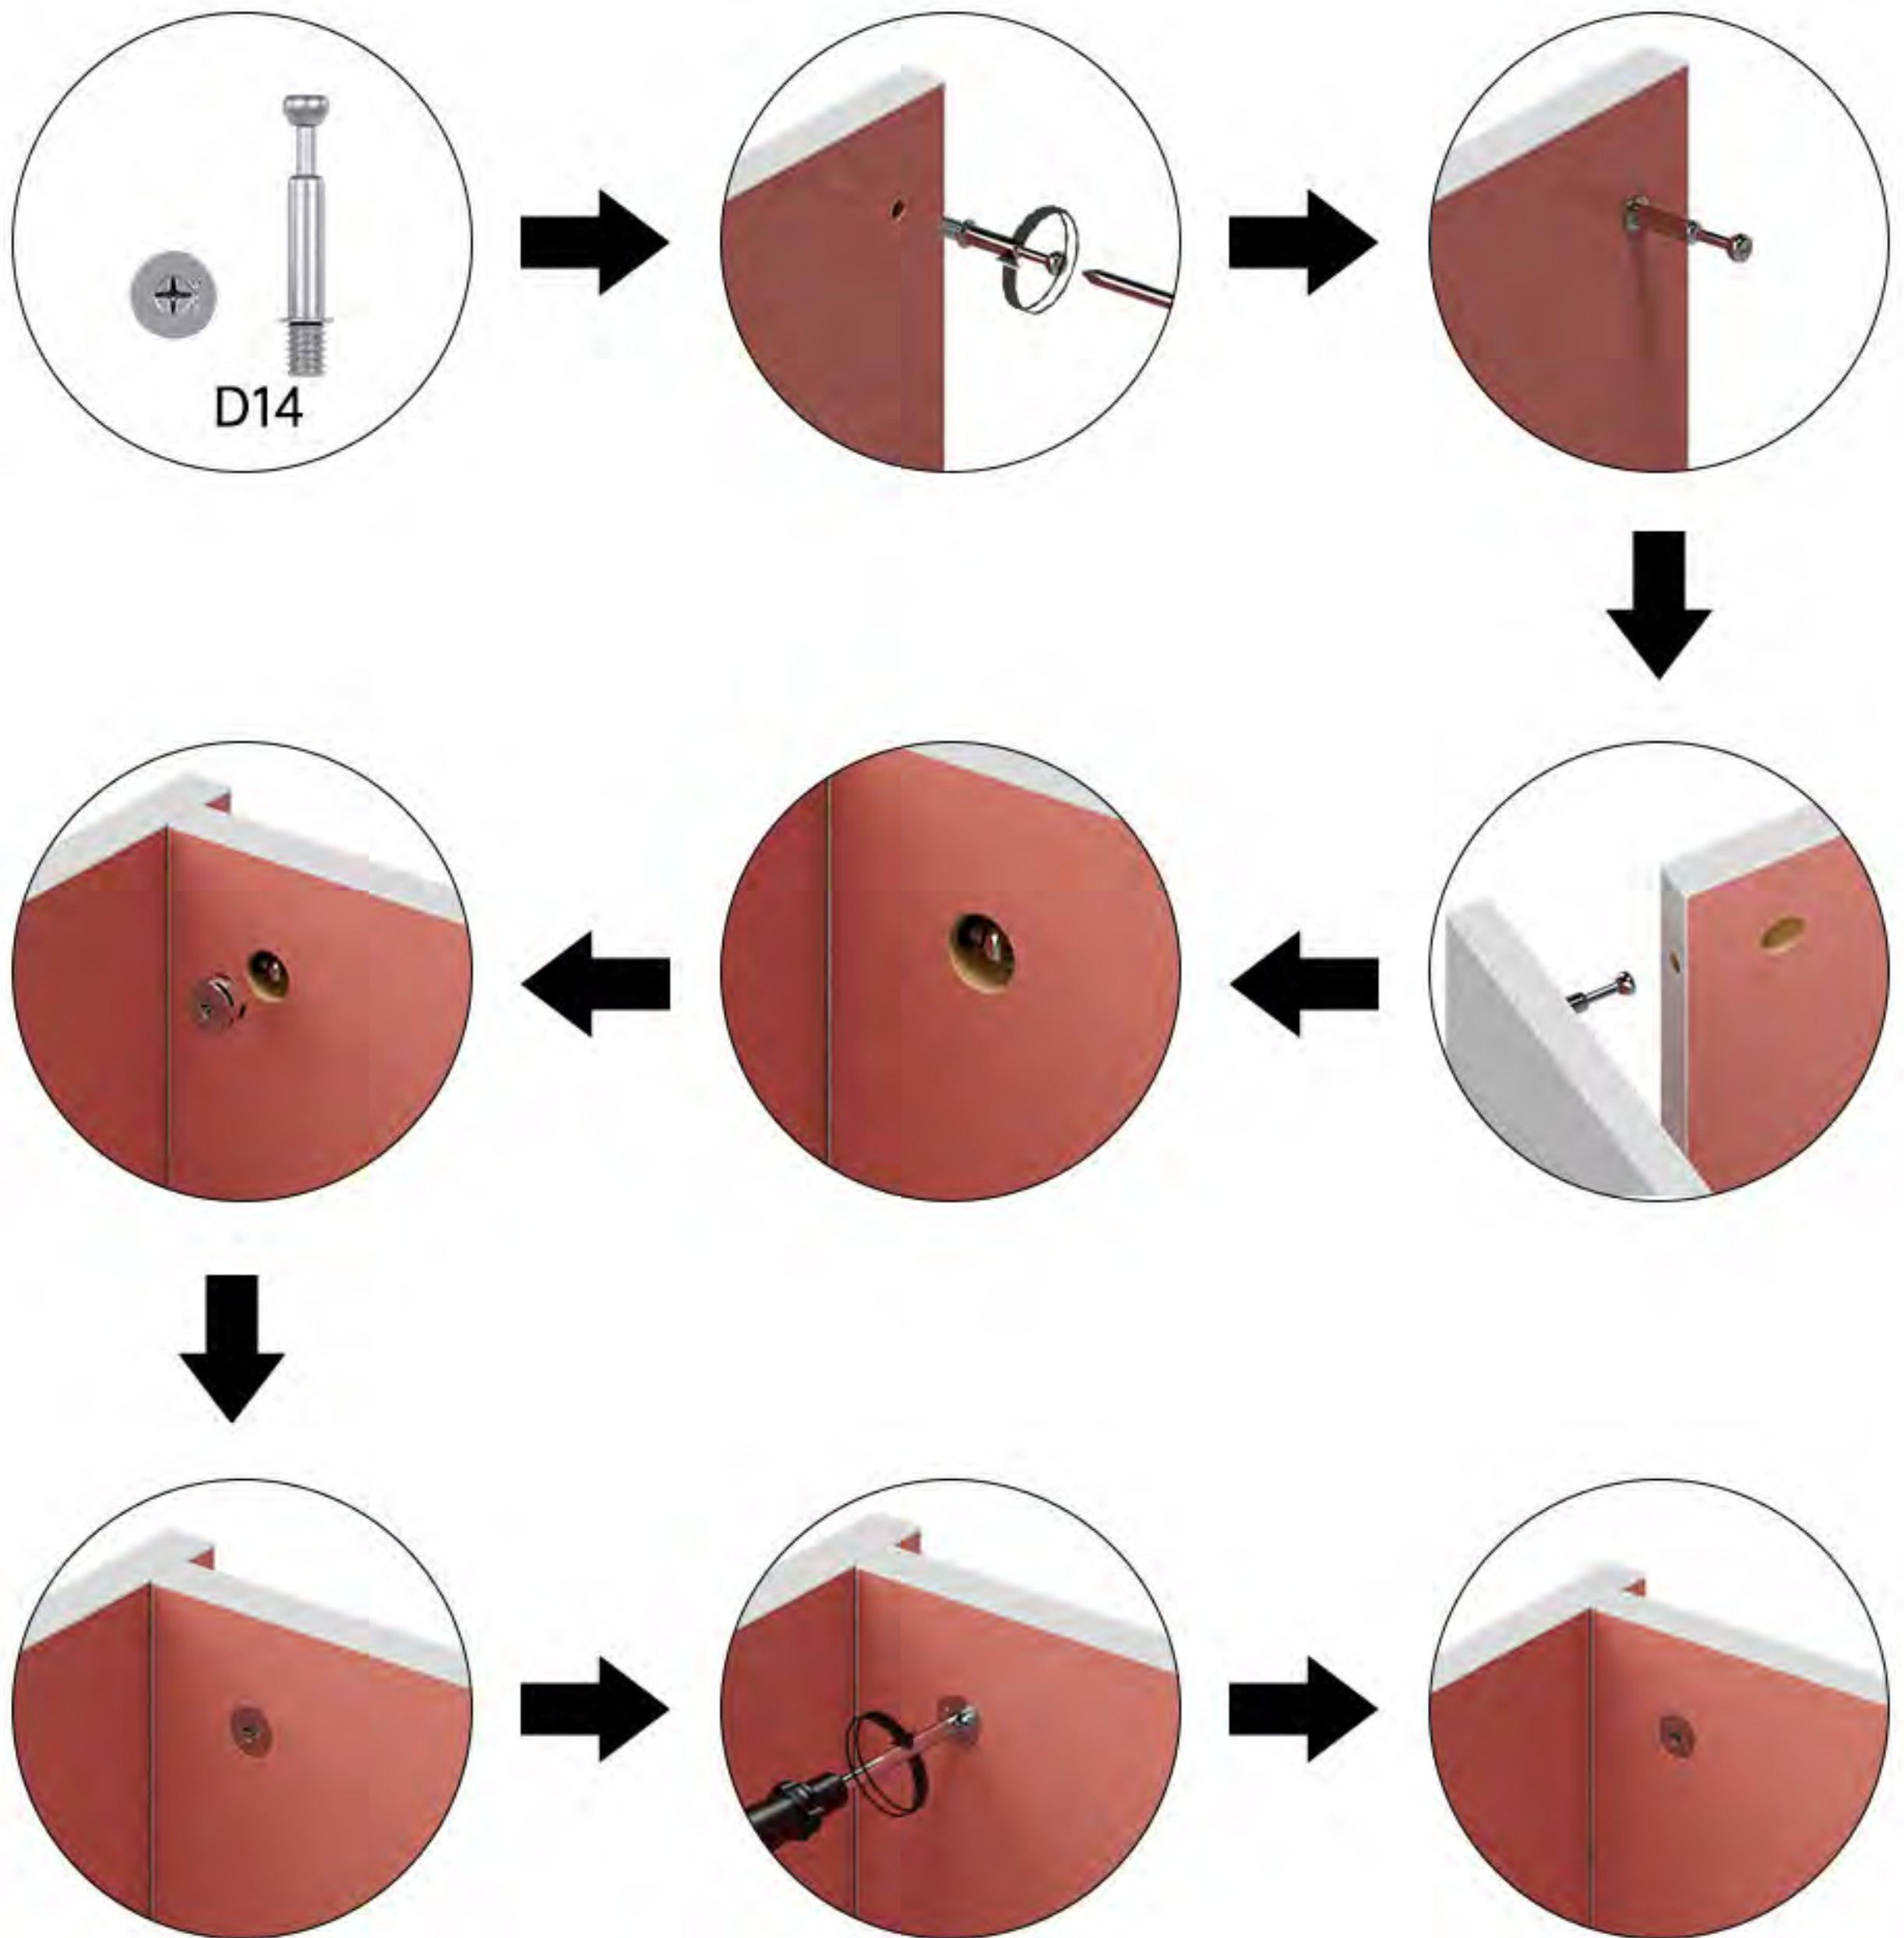


1

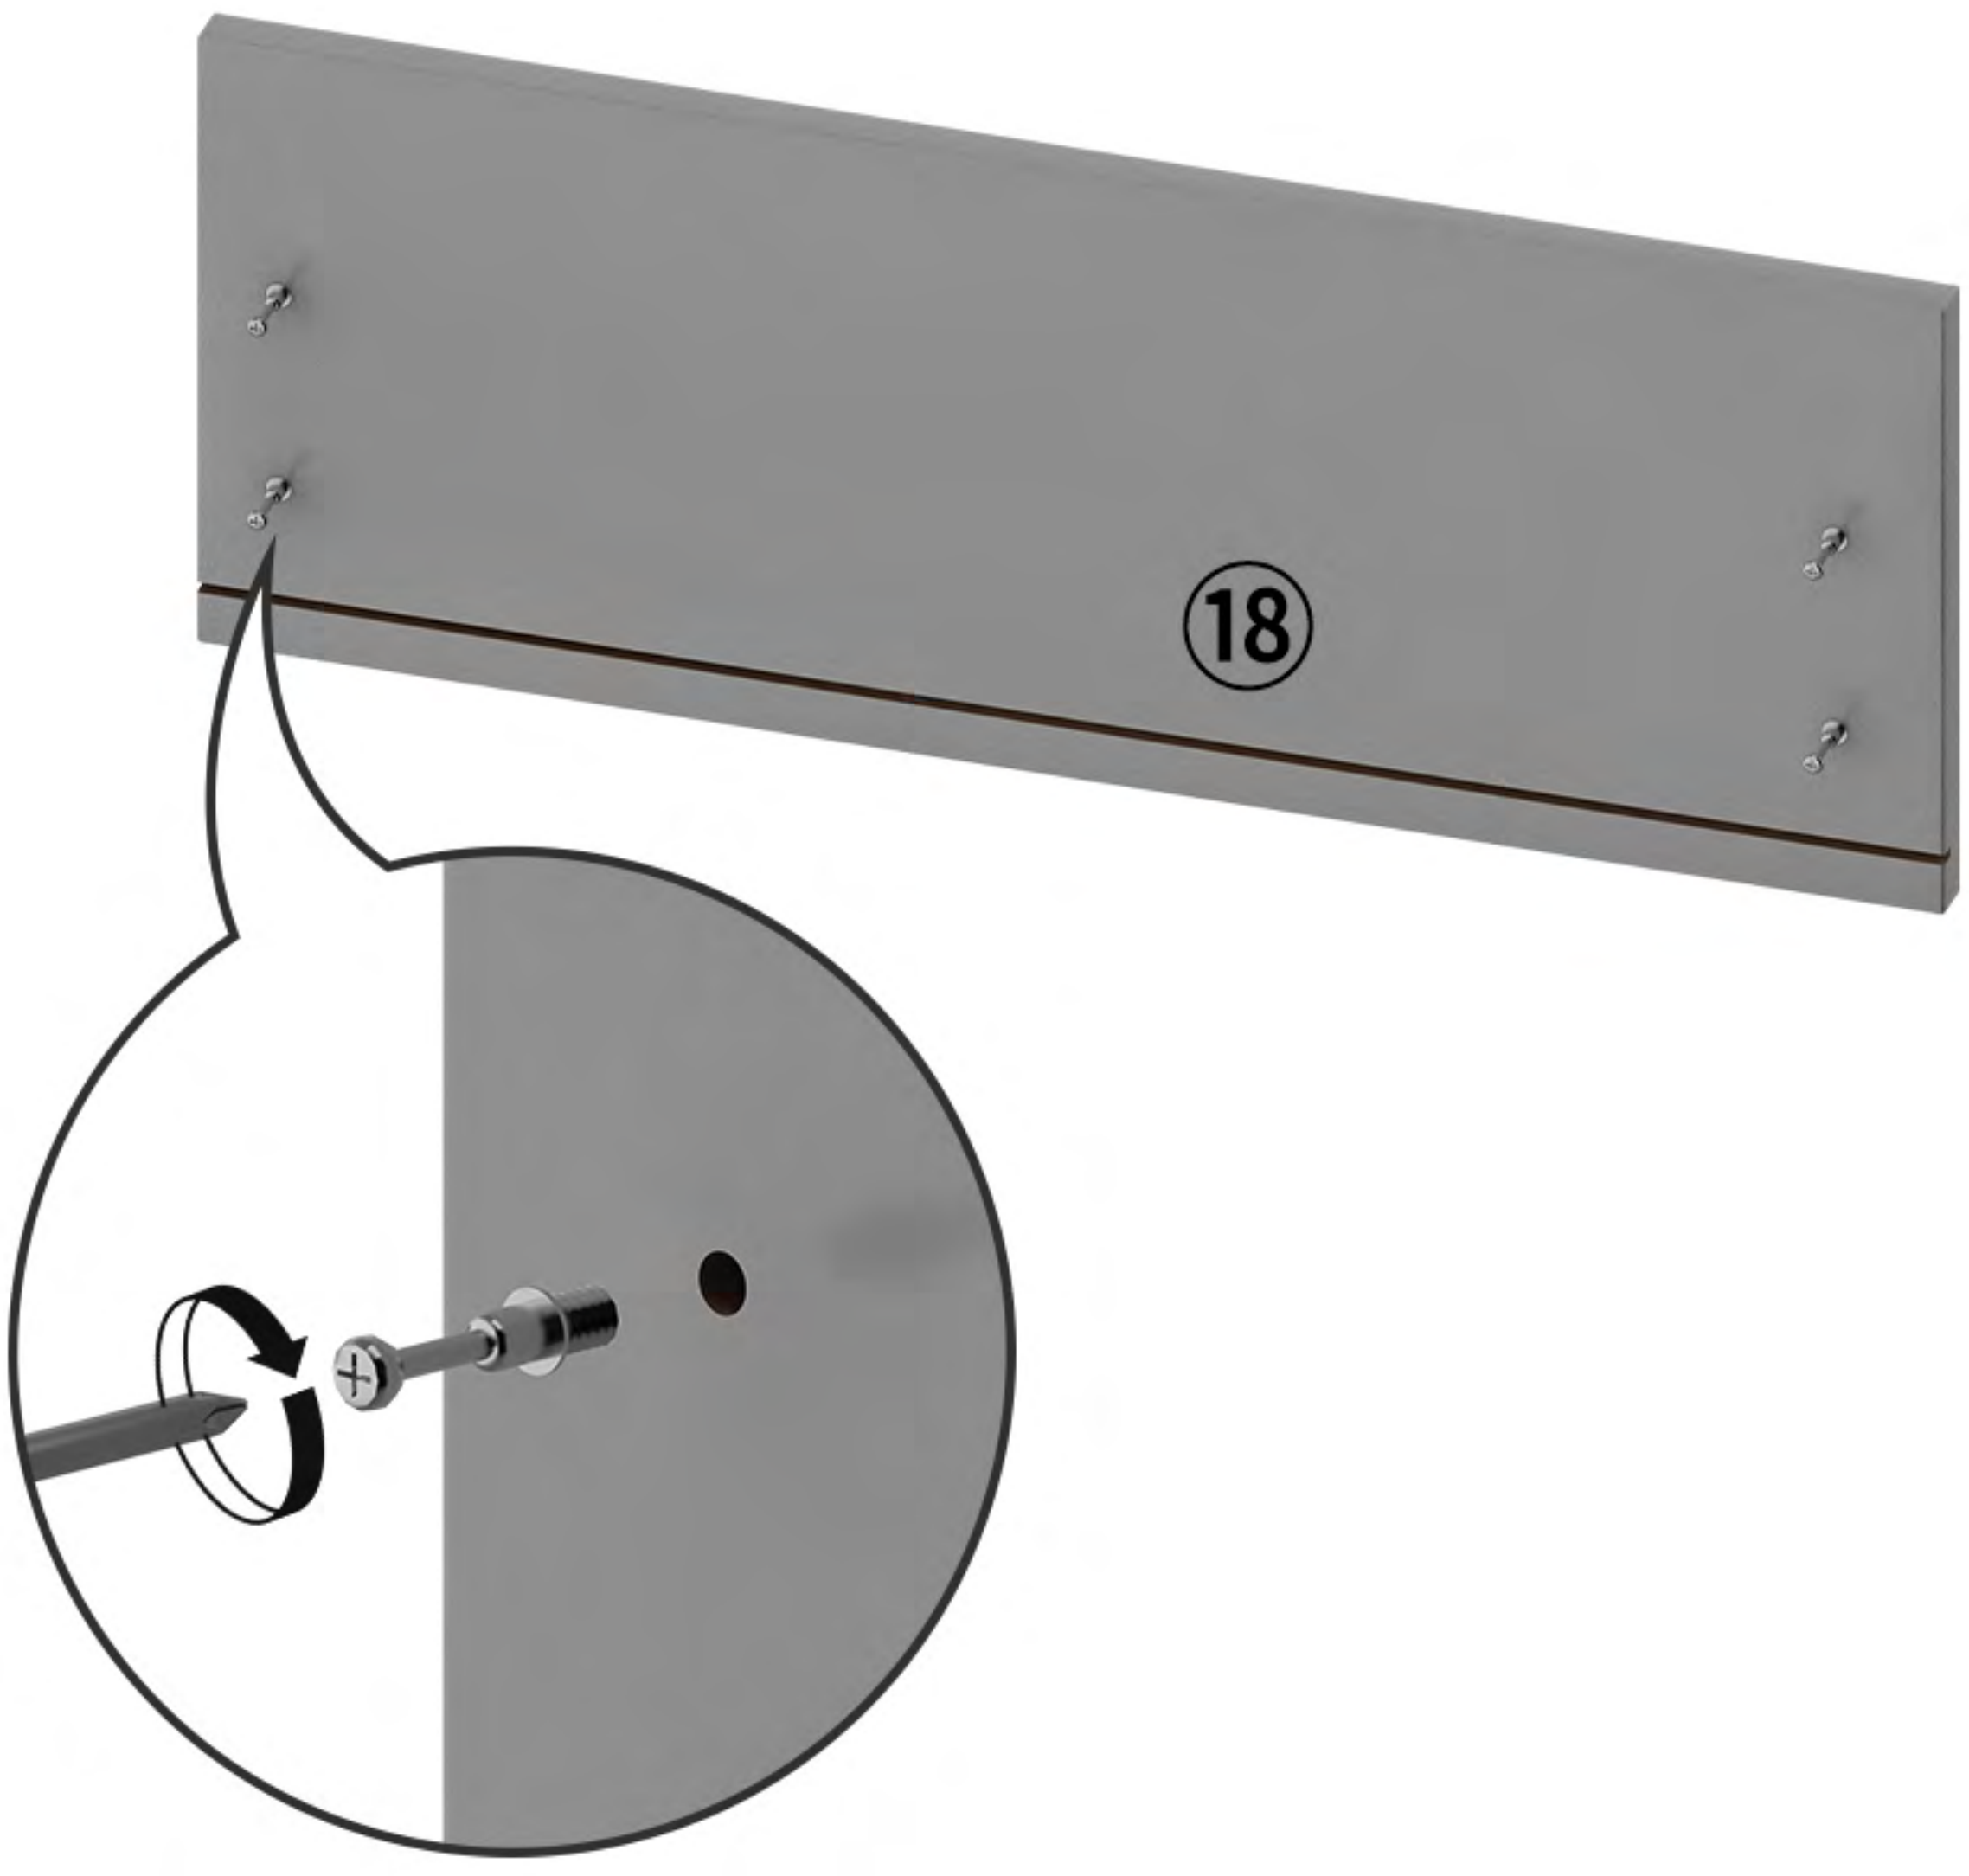



2

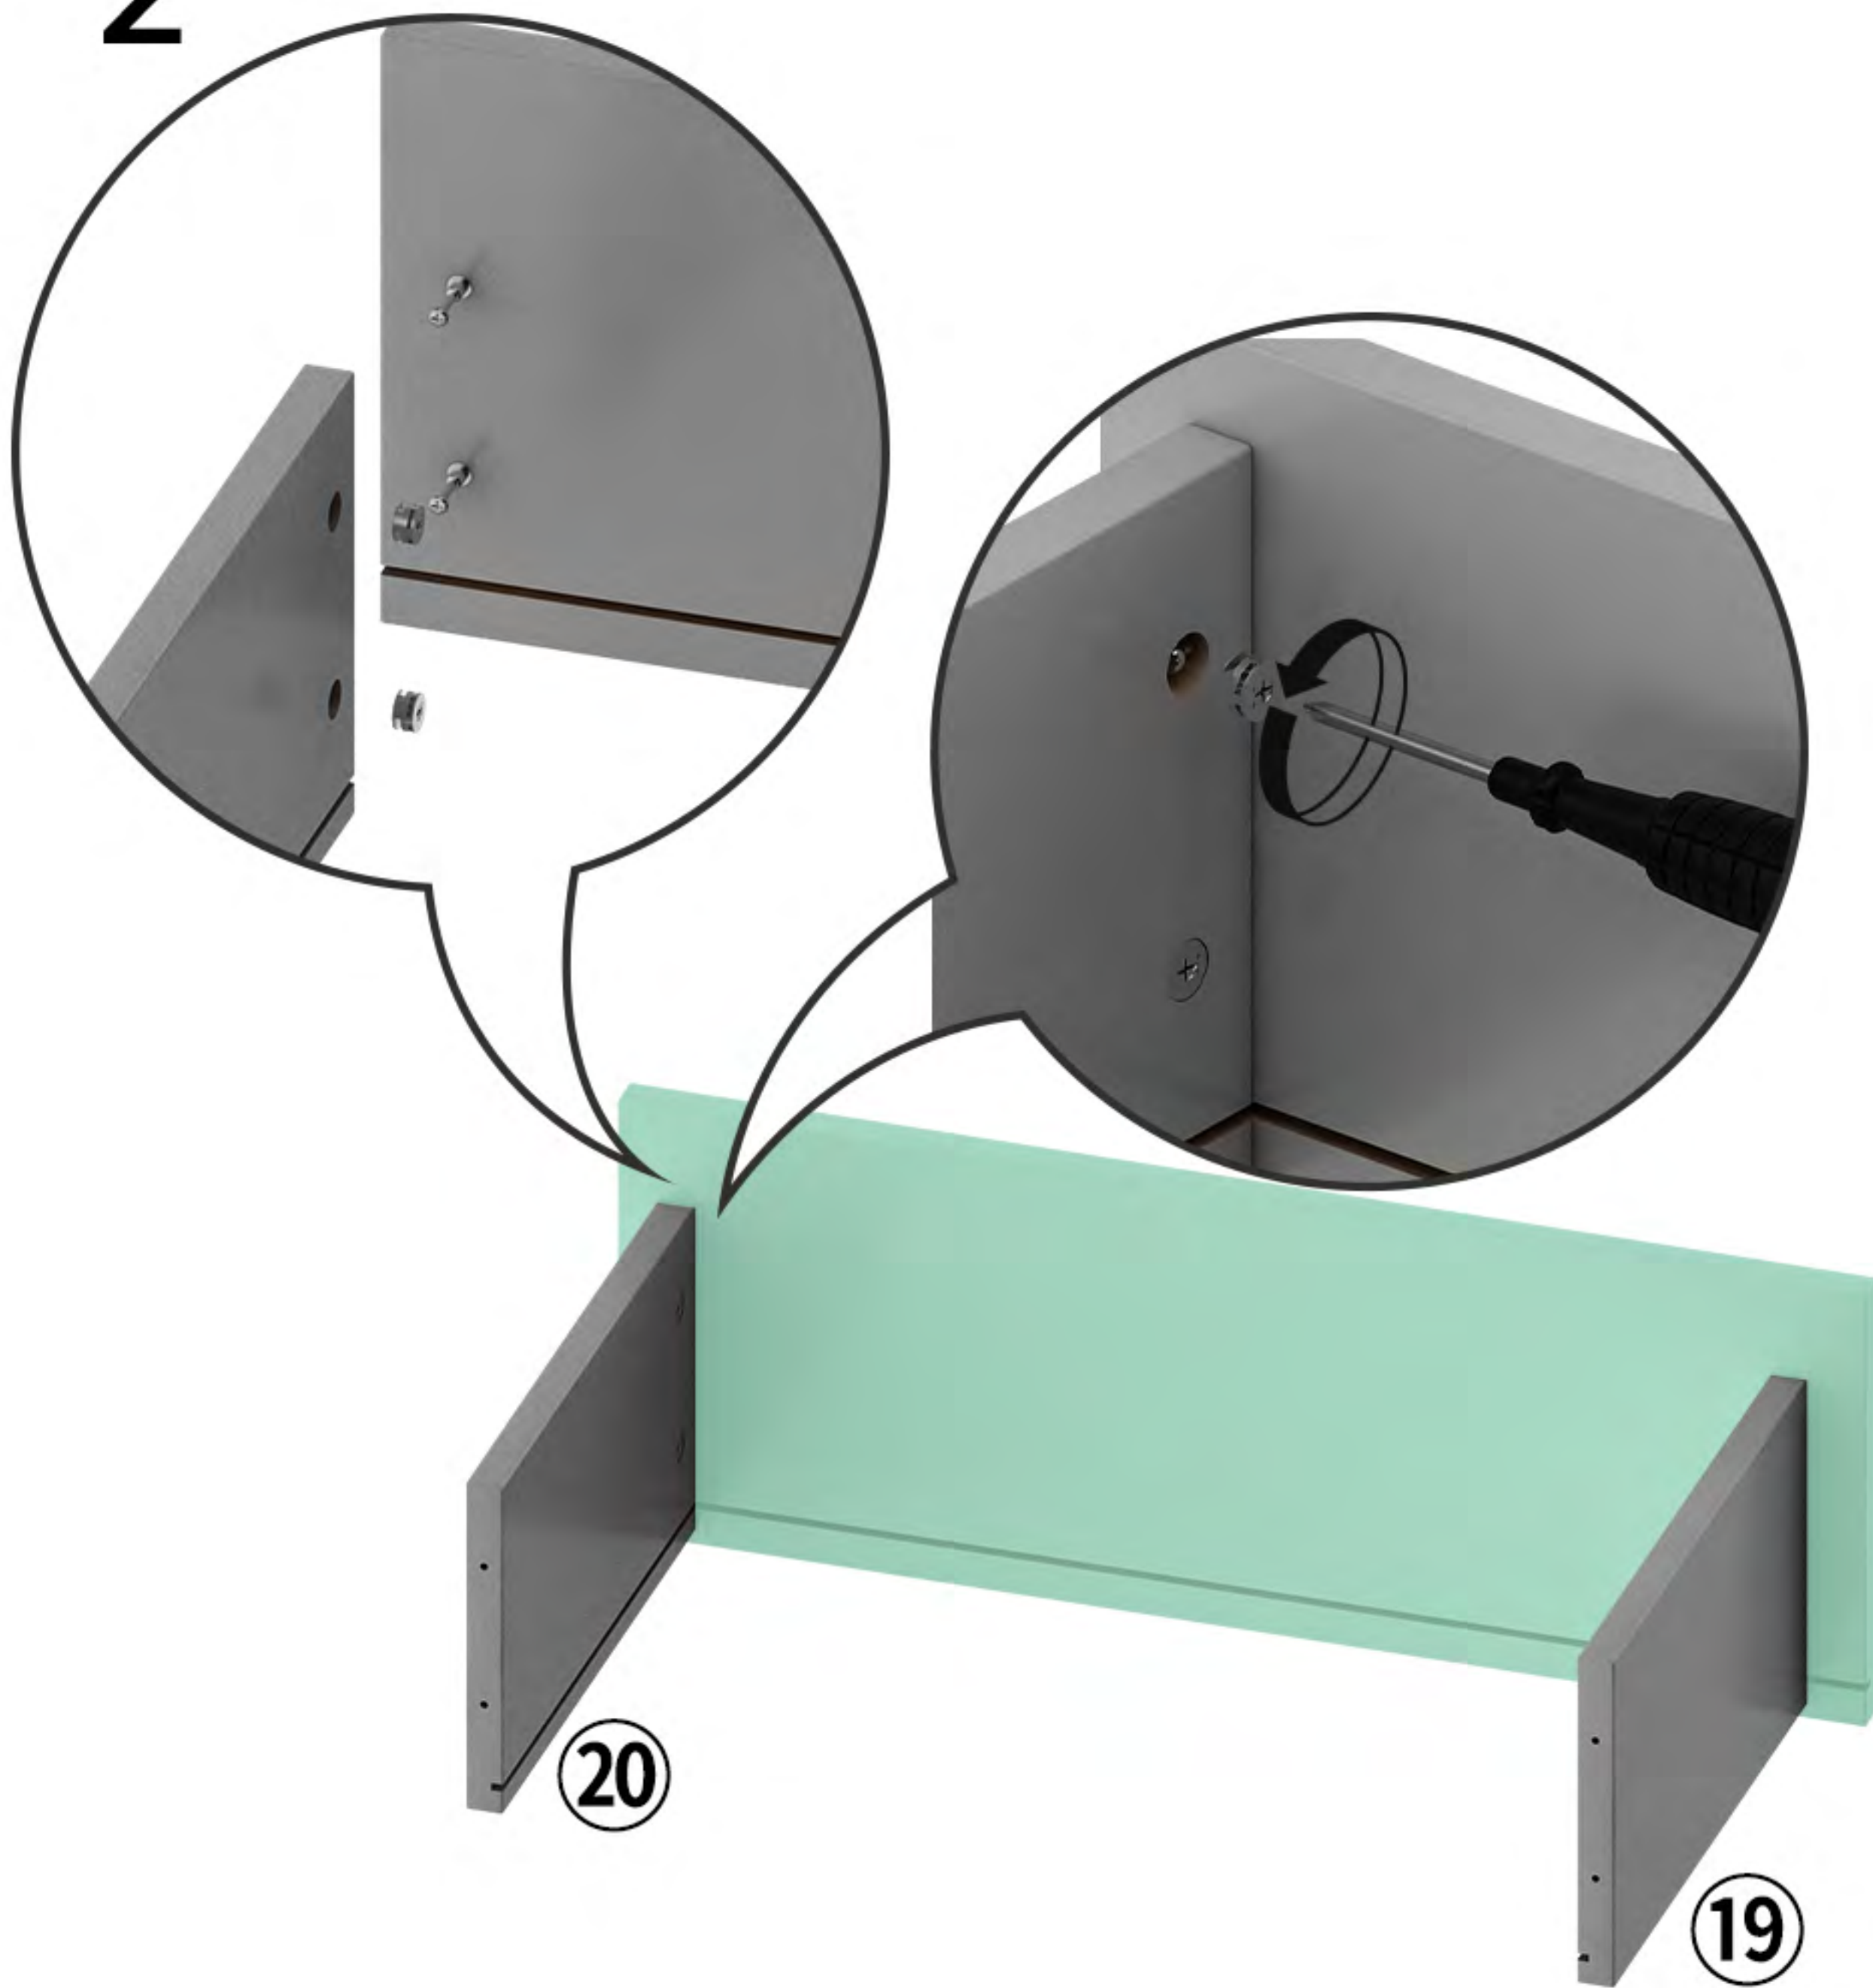

3

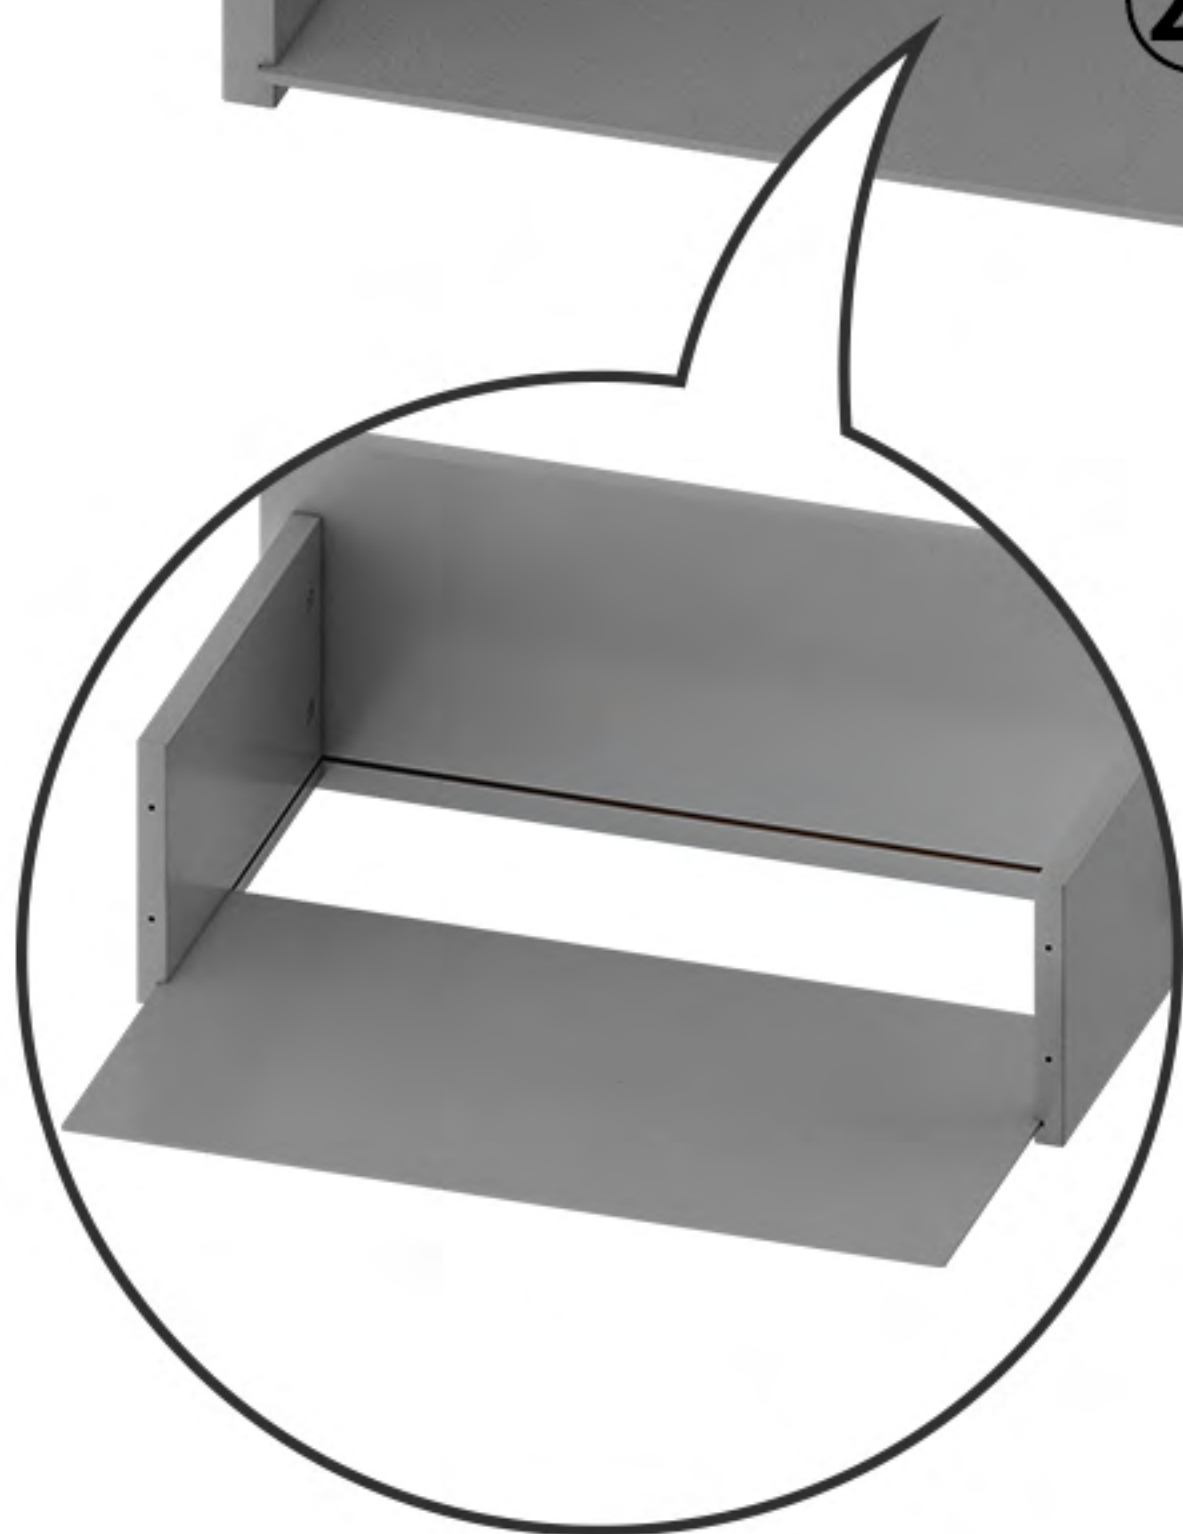


4

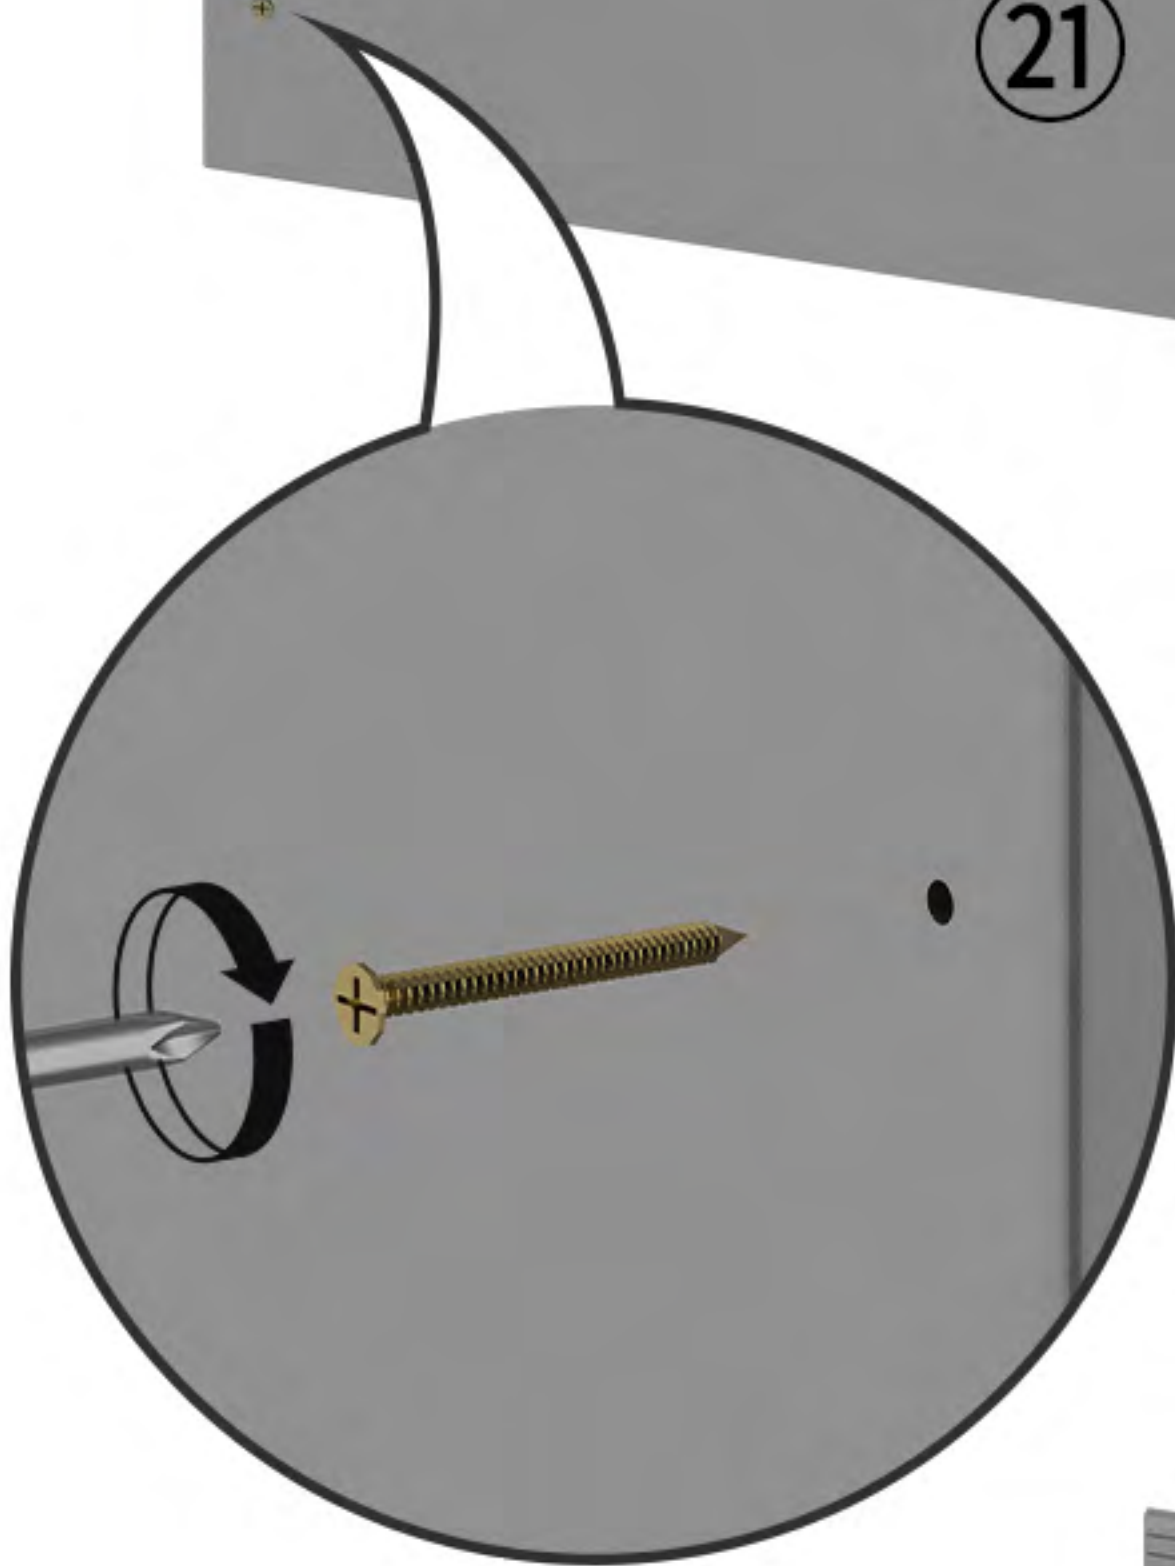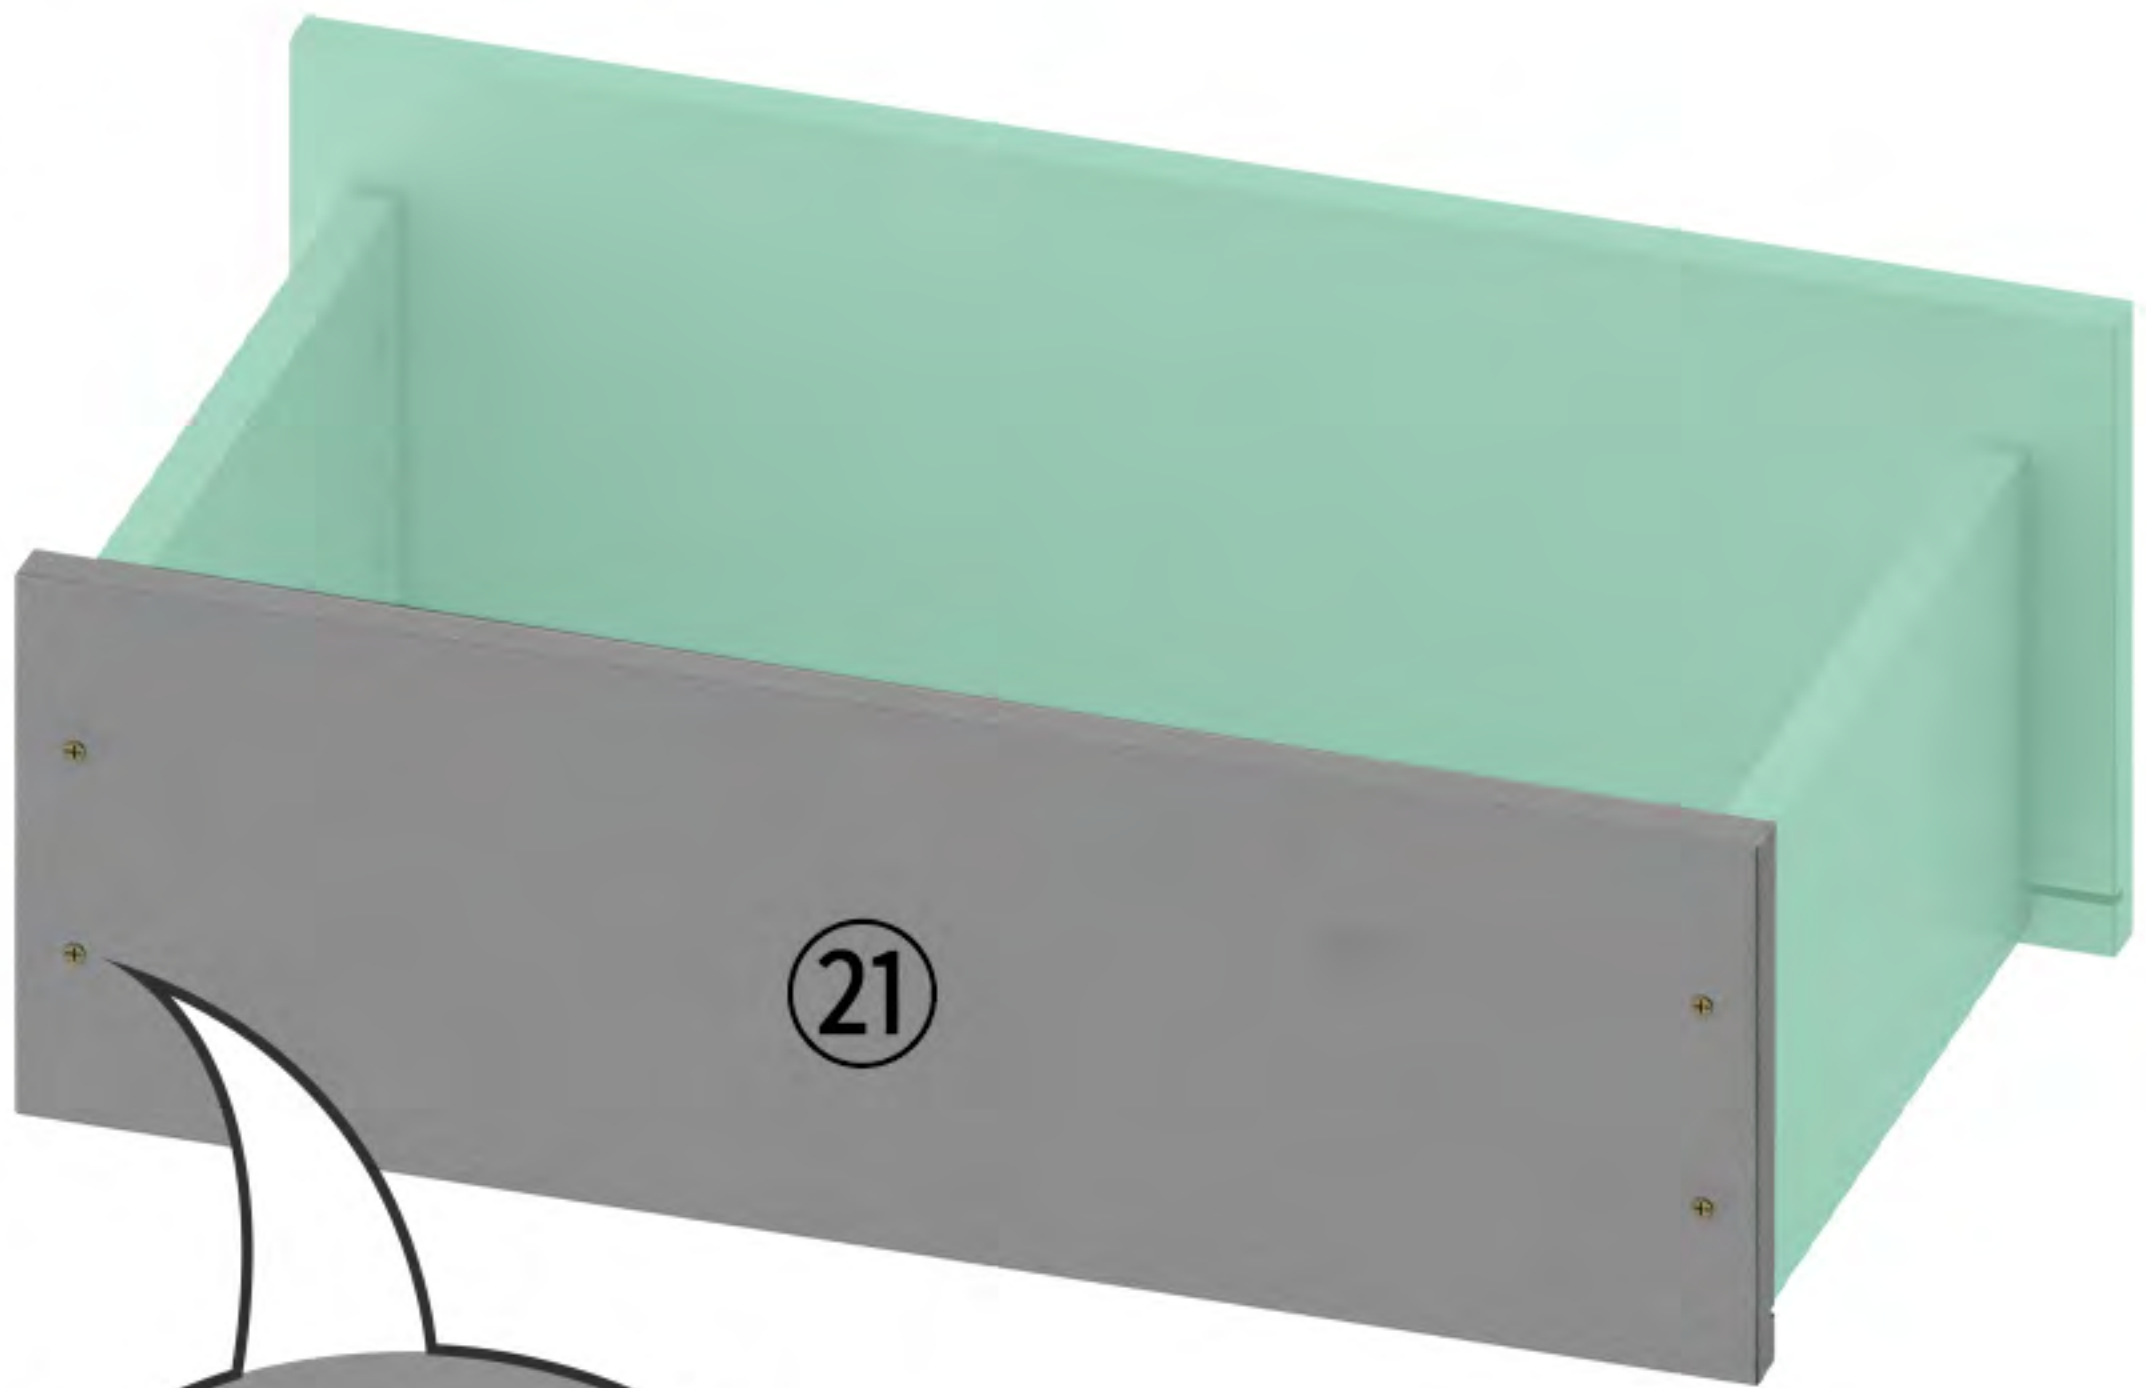




The installation method for the three drawers is identical, and it can be assembled following the product disassembly diagram.




5

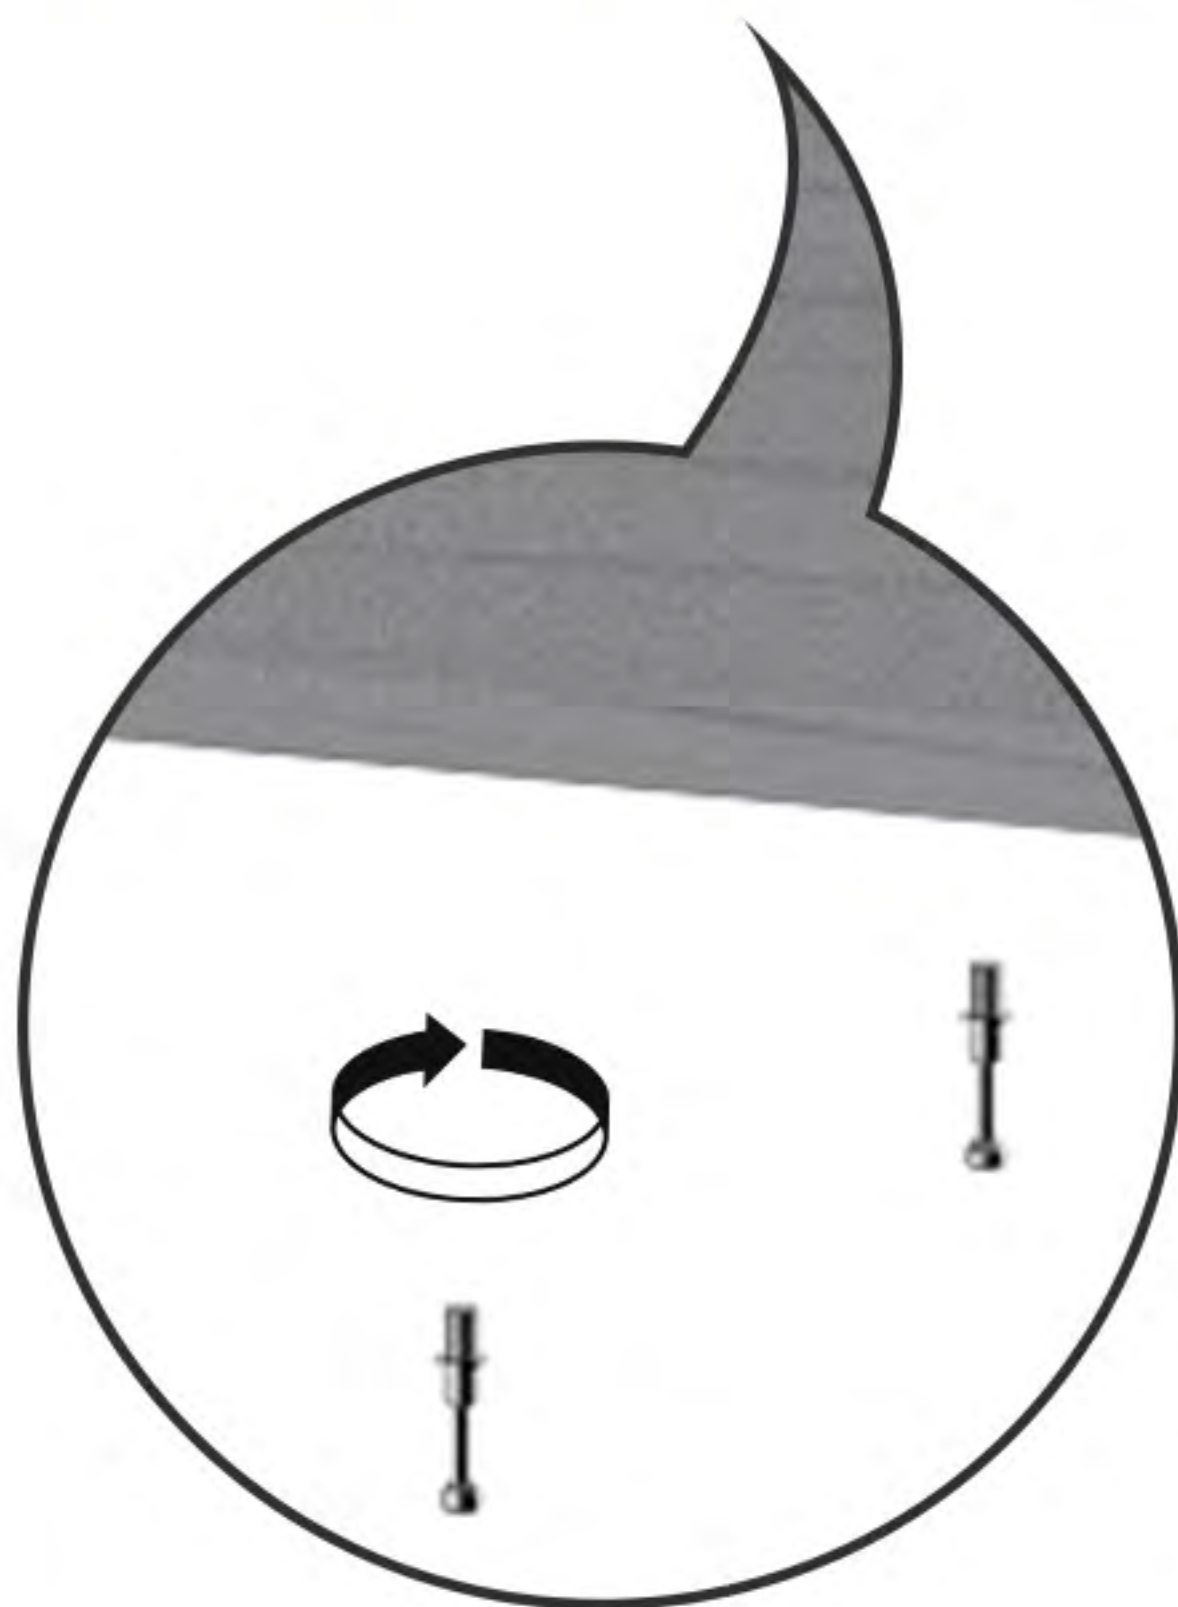

6

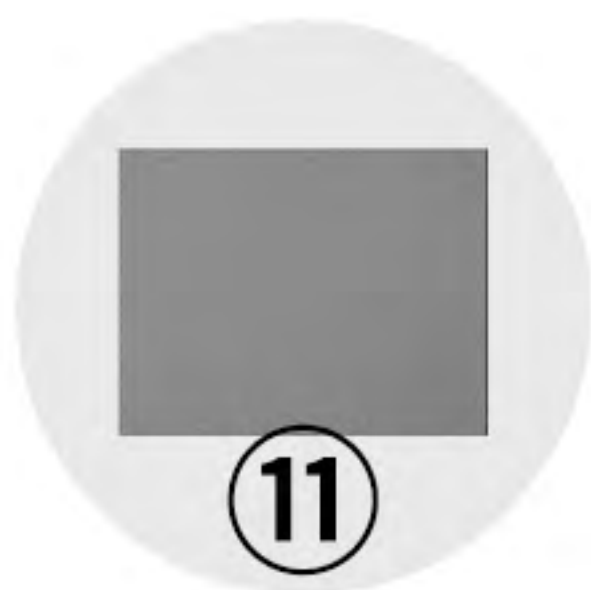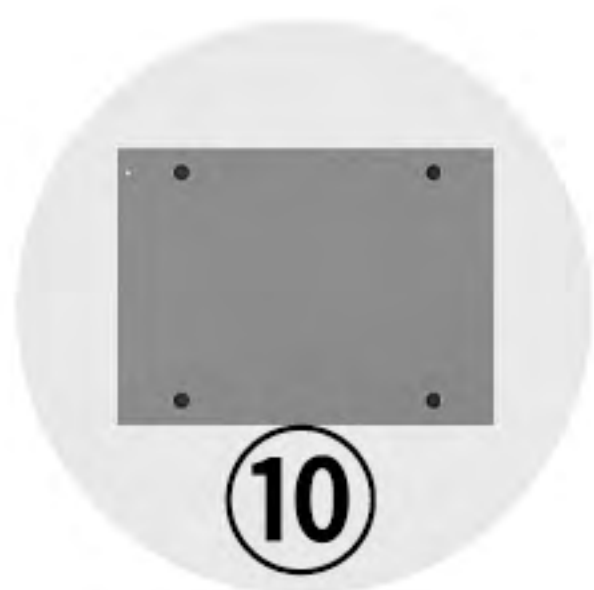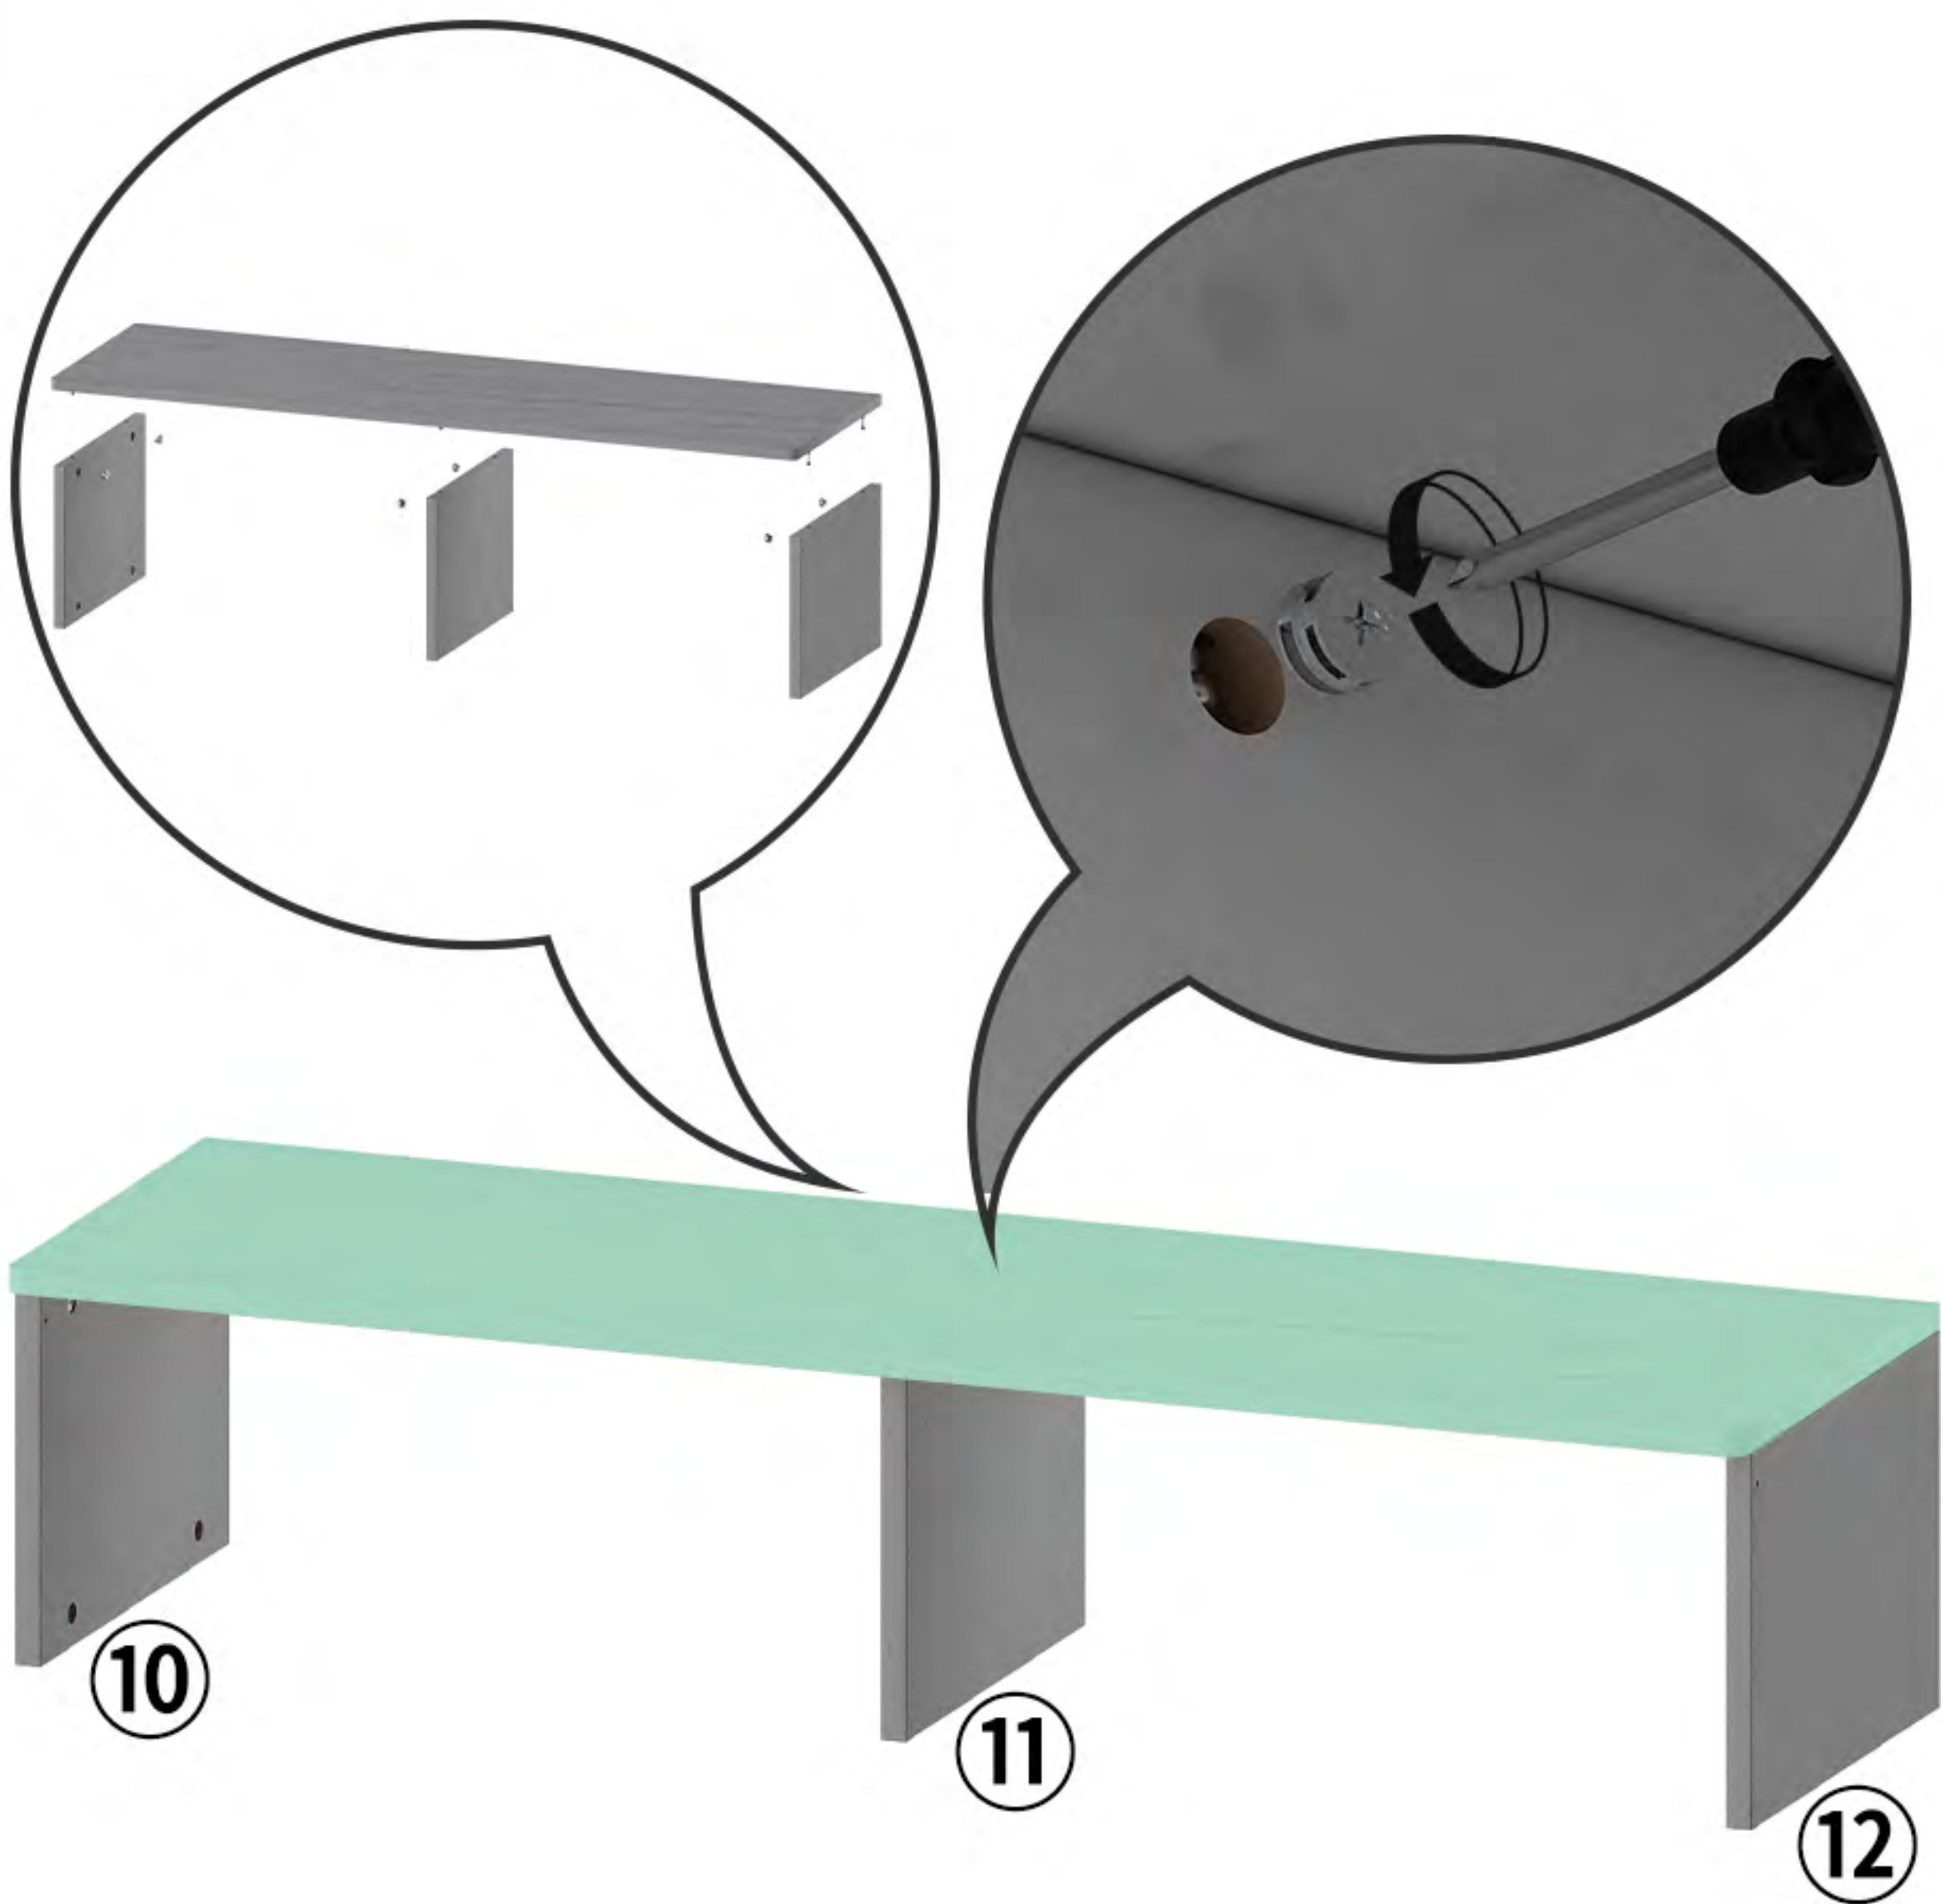

7

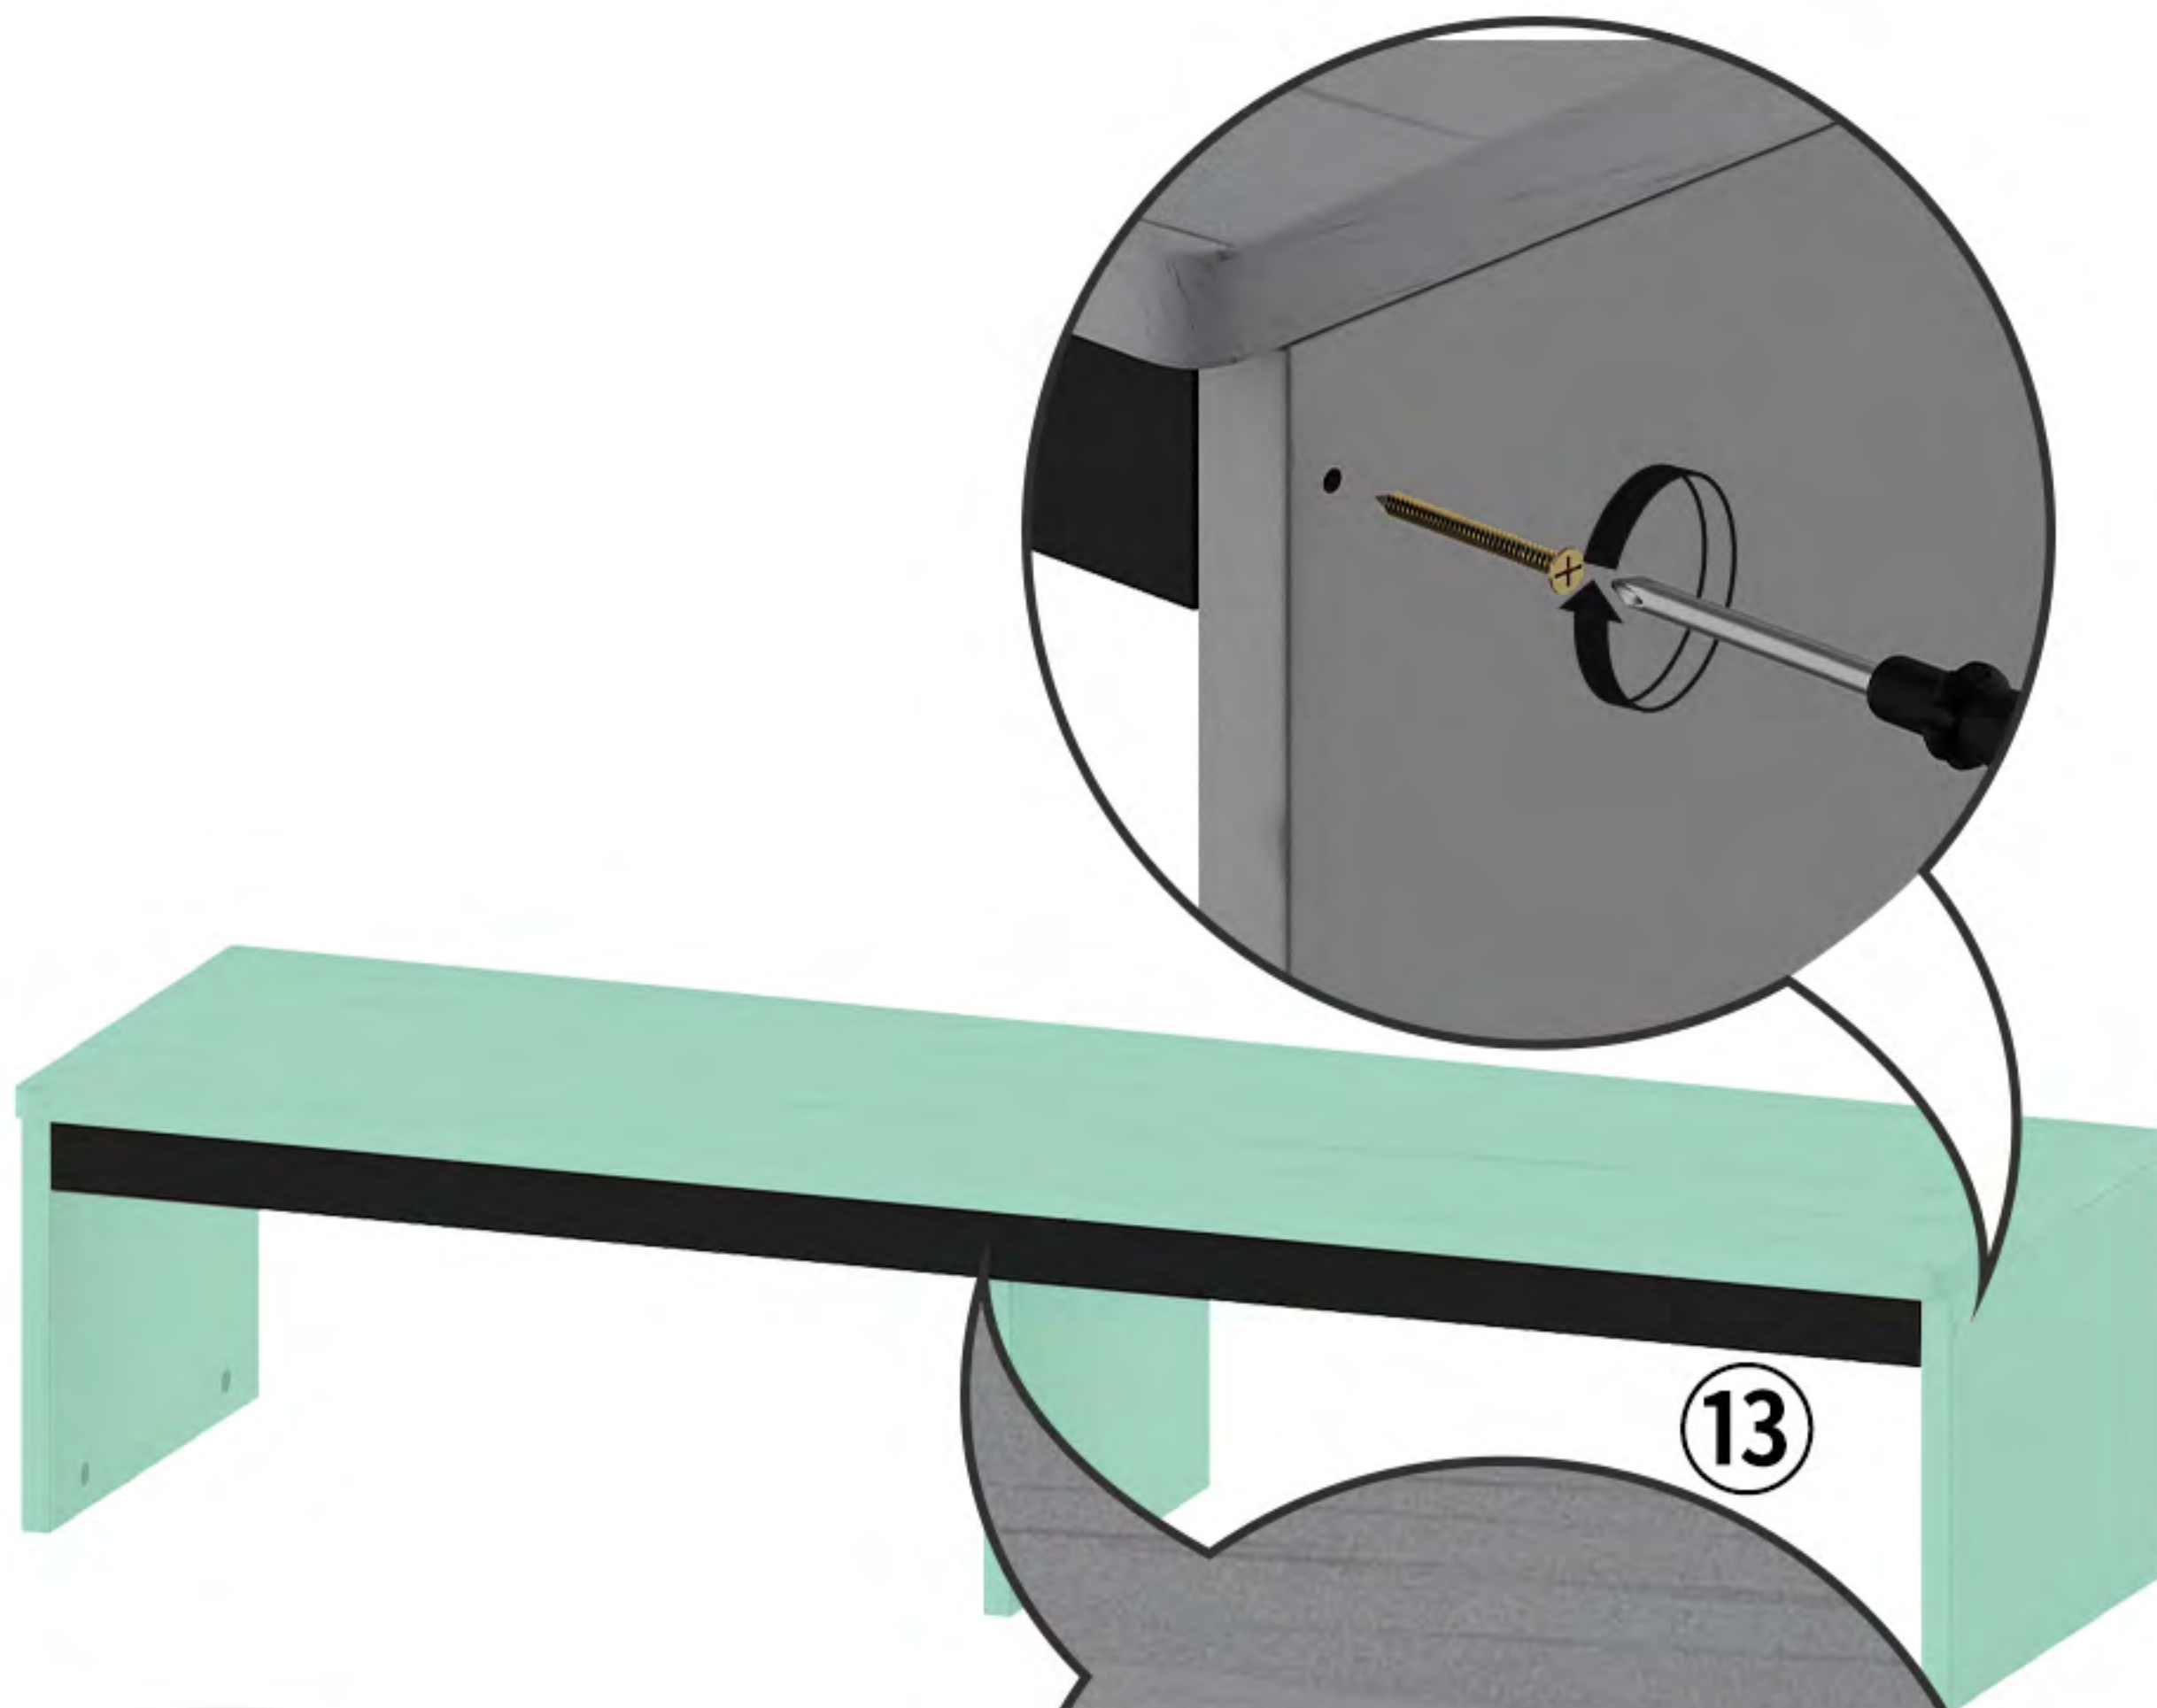

D7




13




B3

8

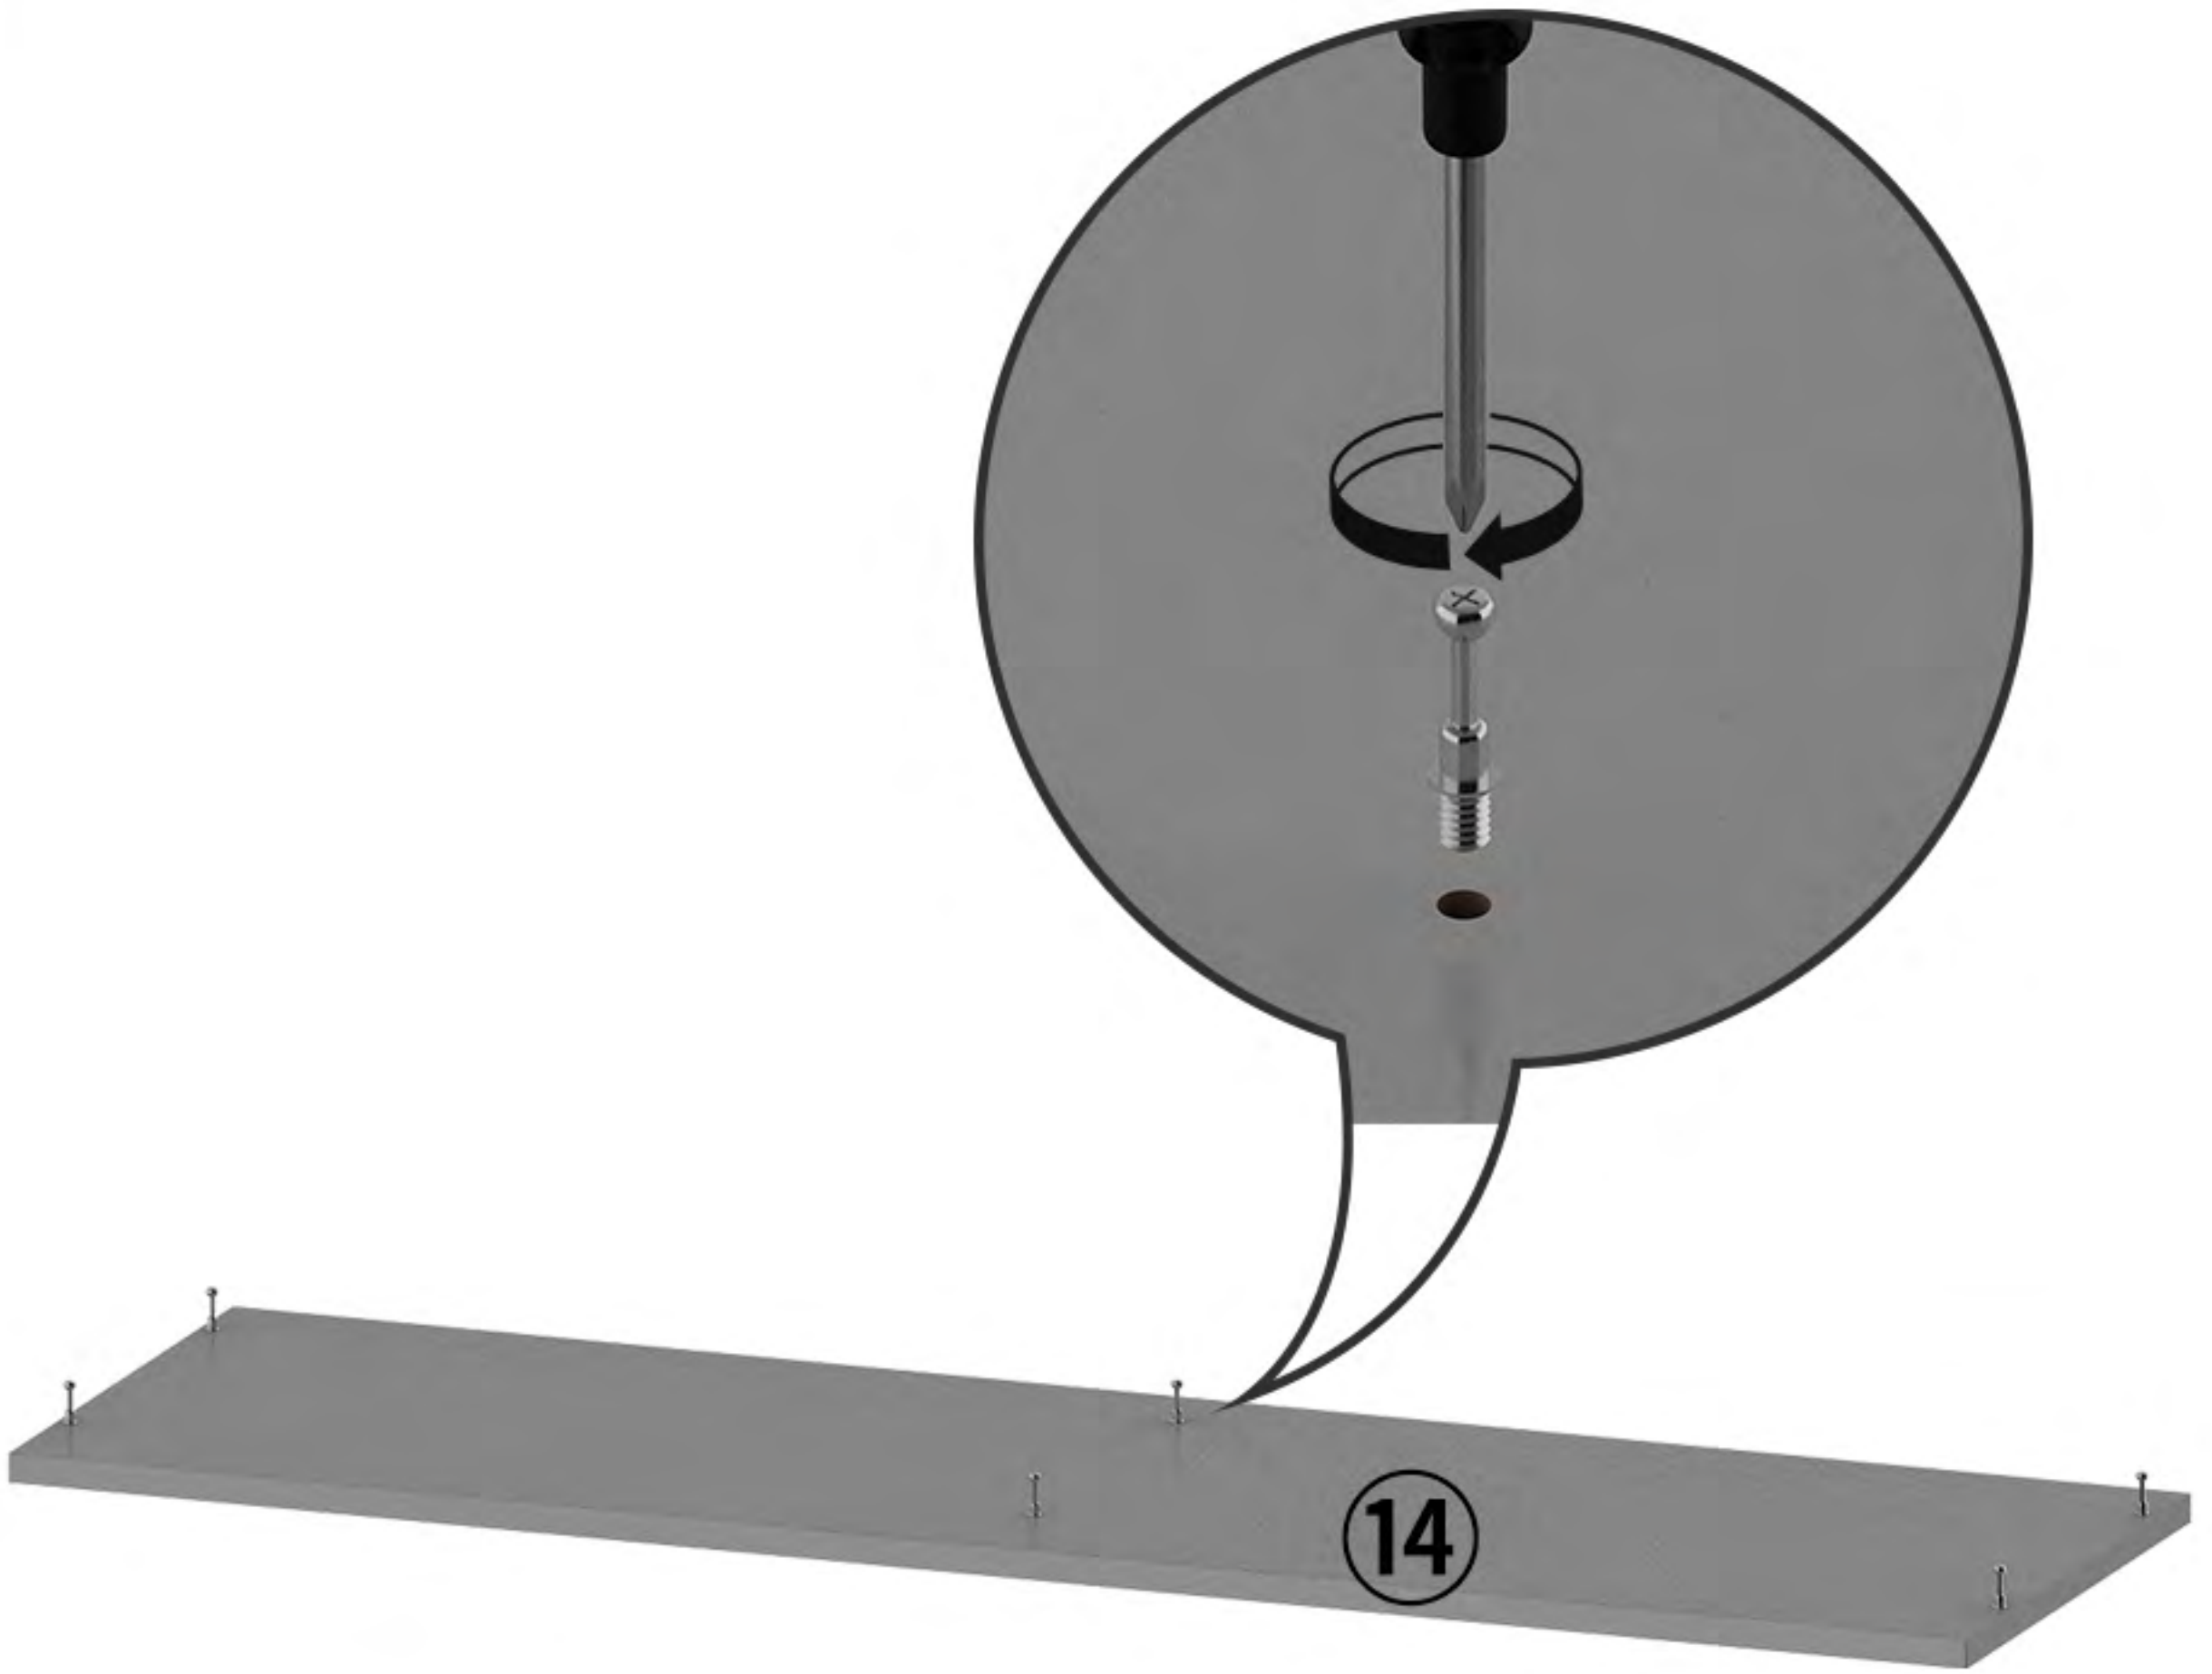


9

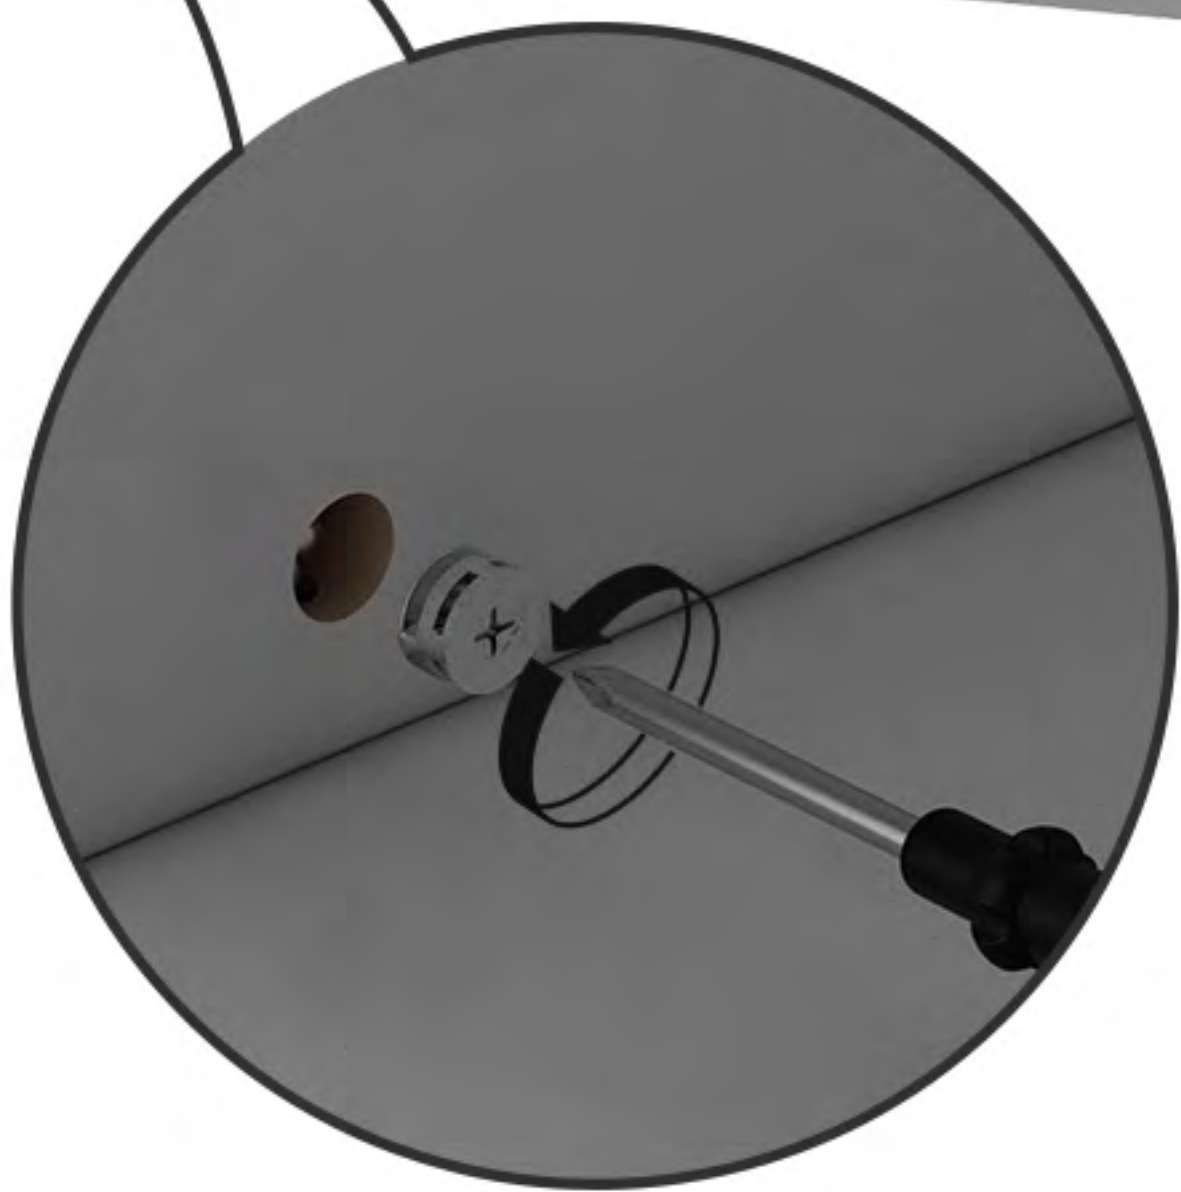



10






11

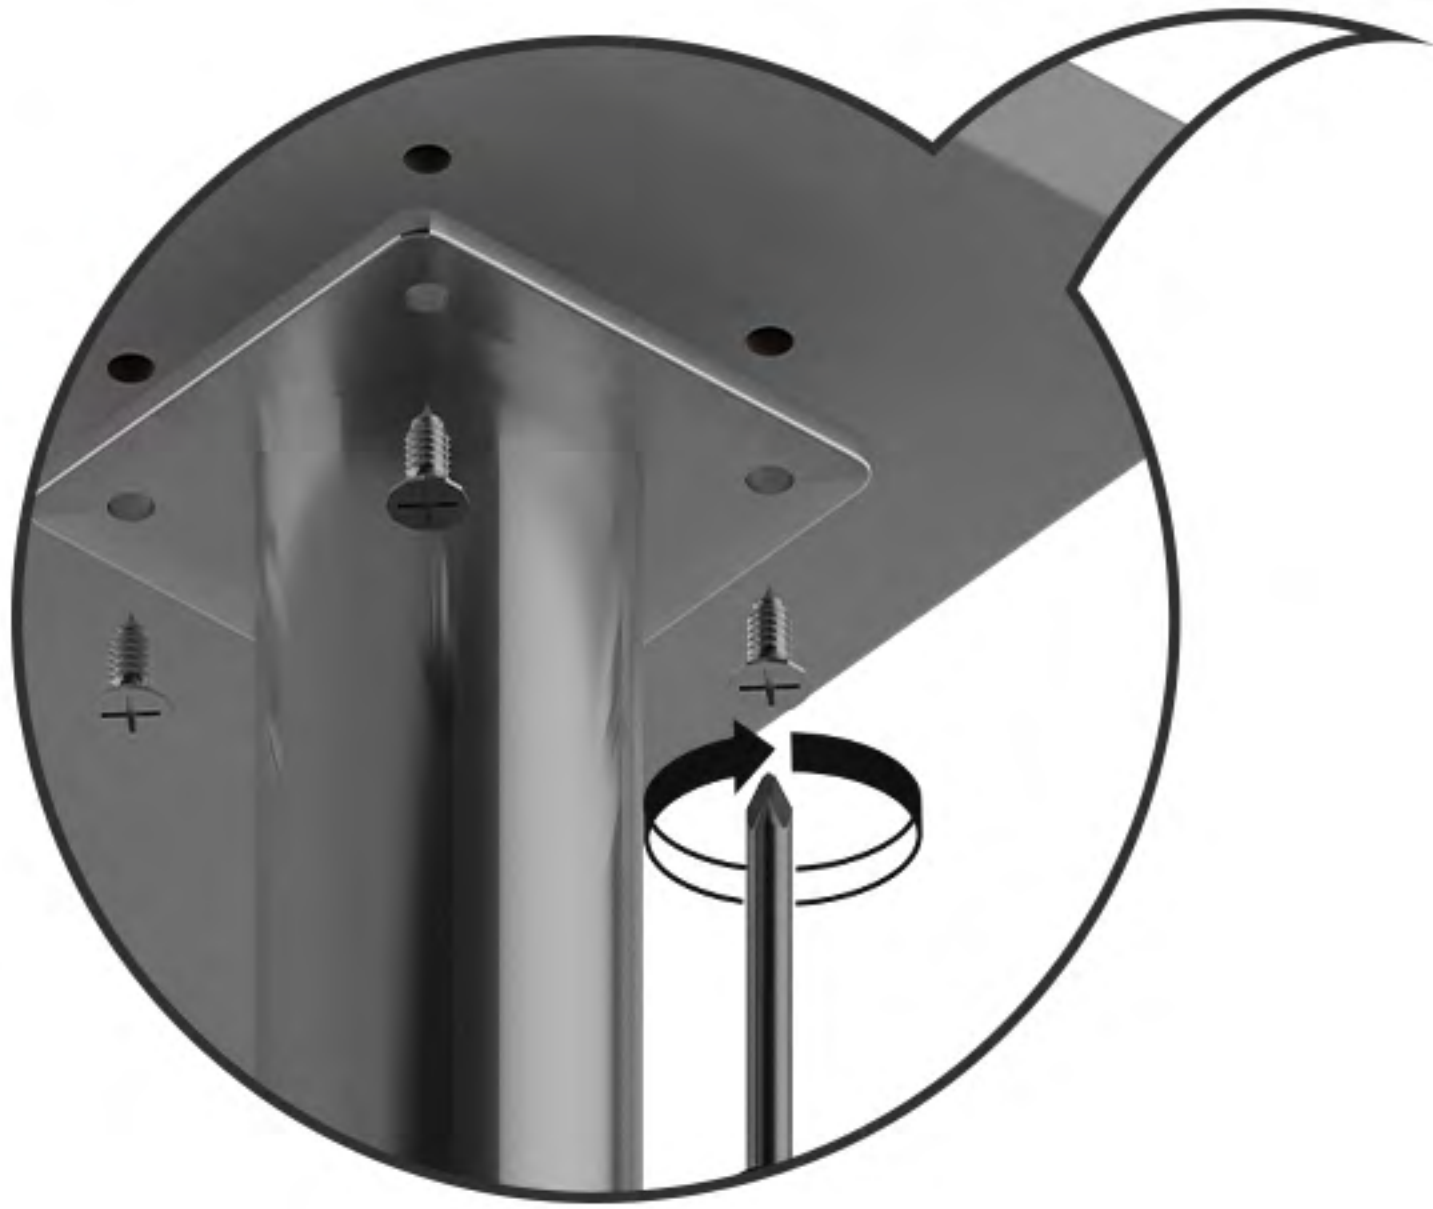


12

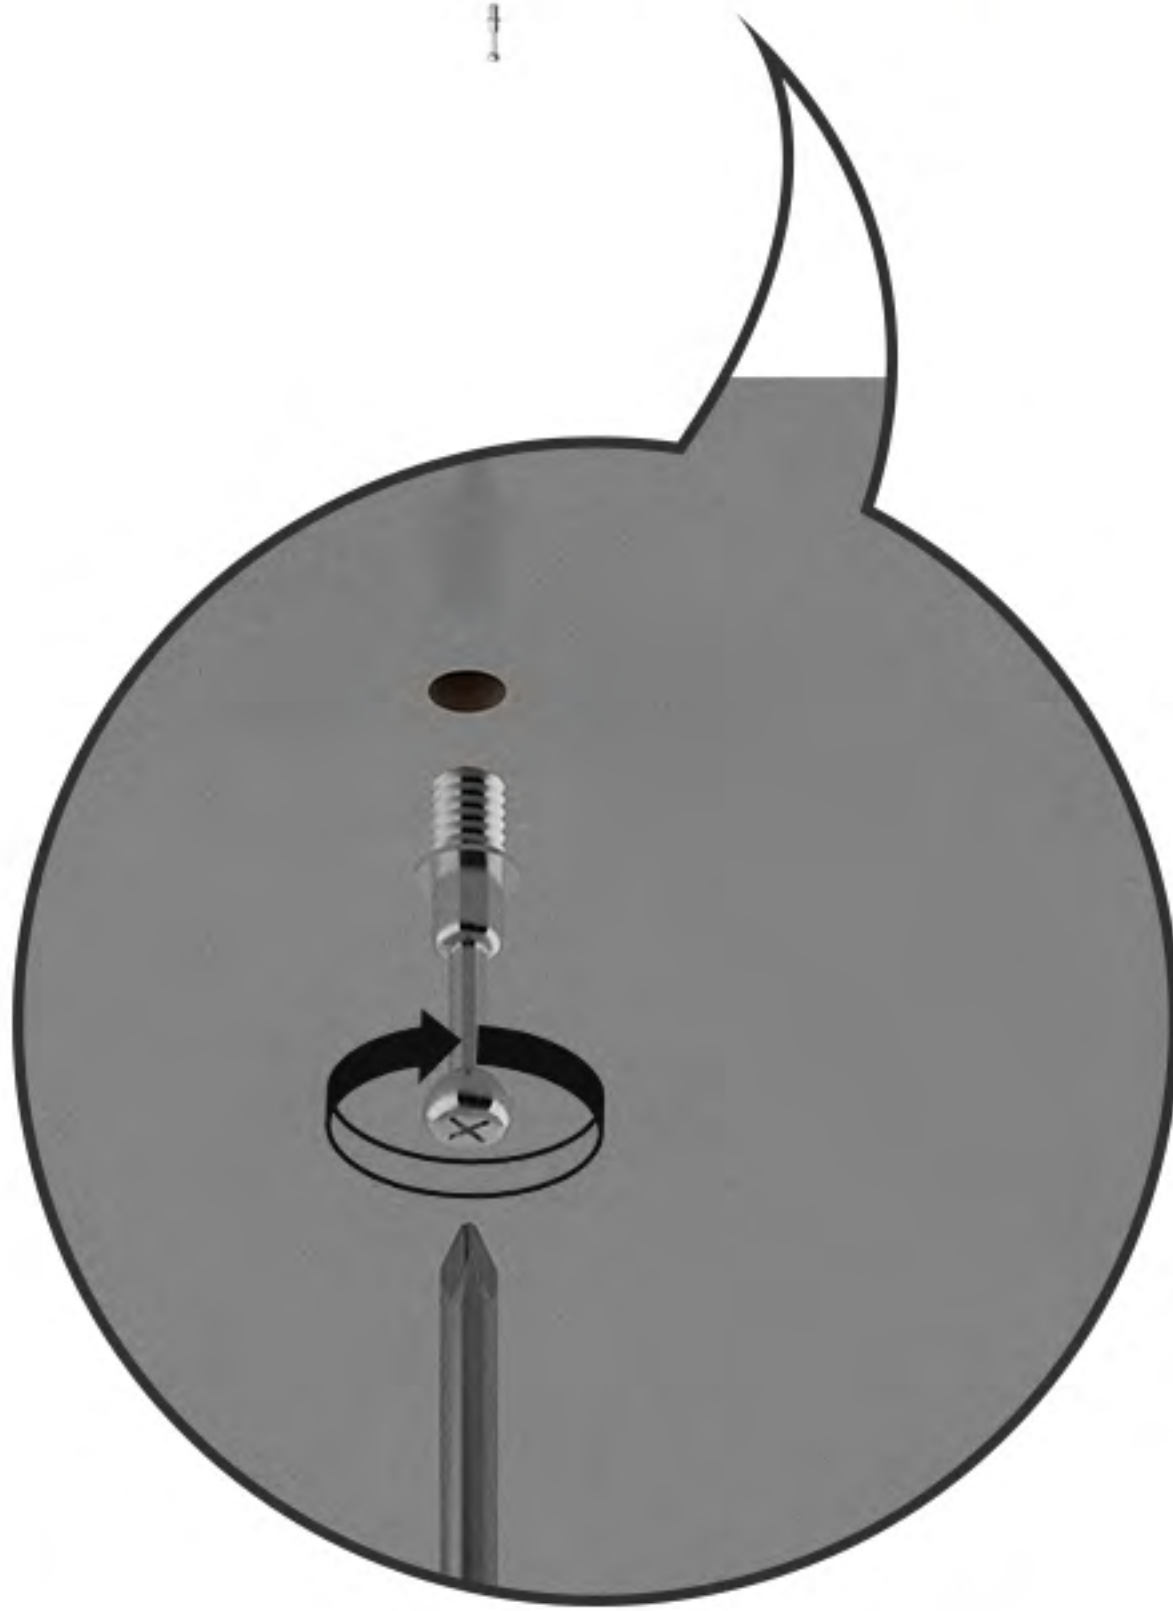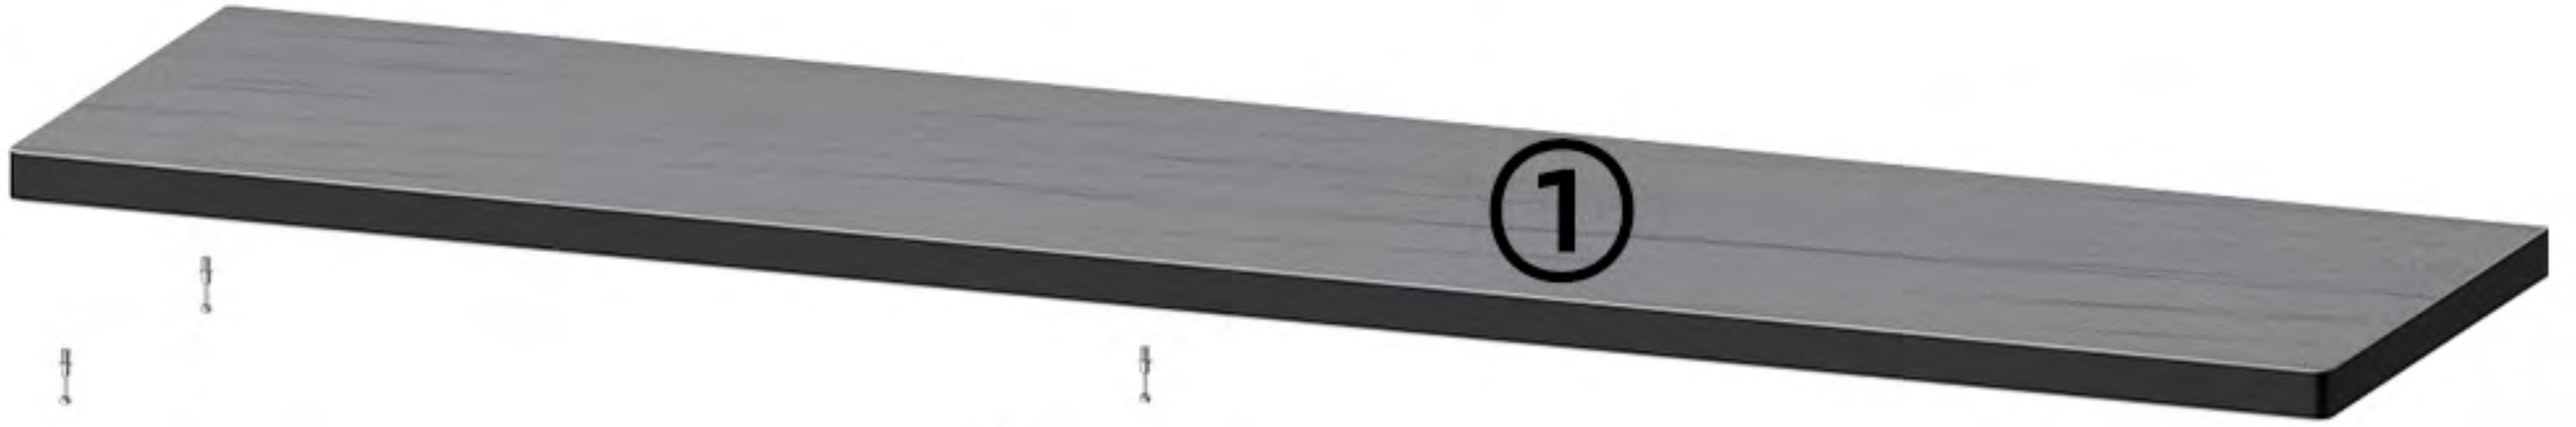



13

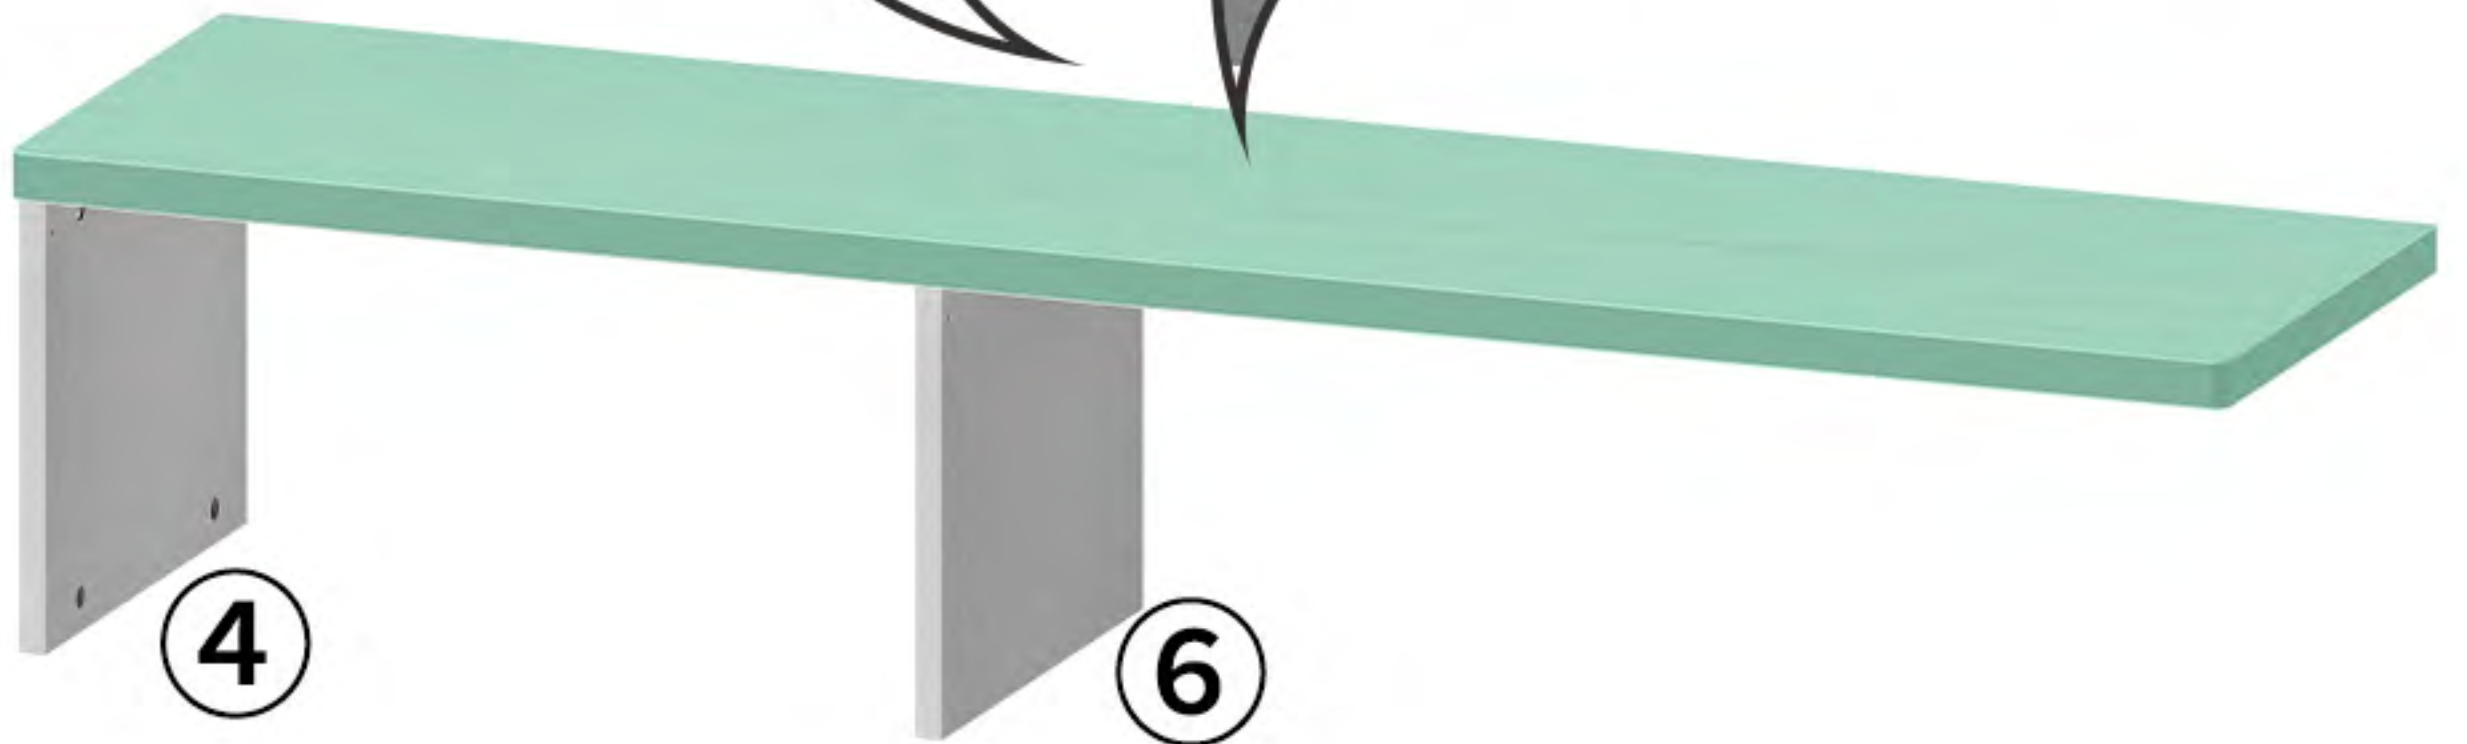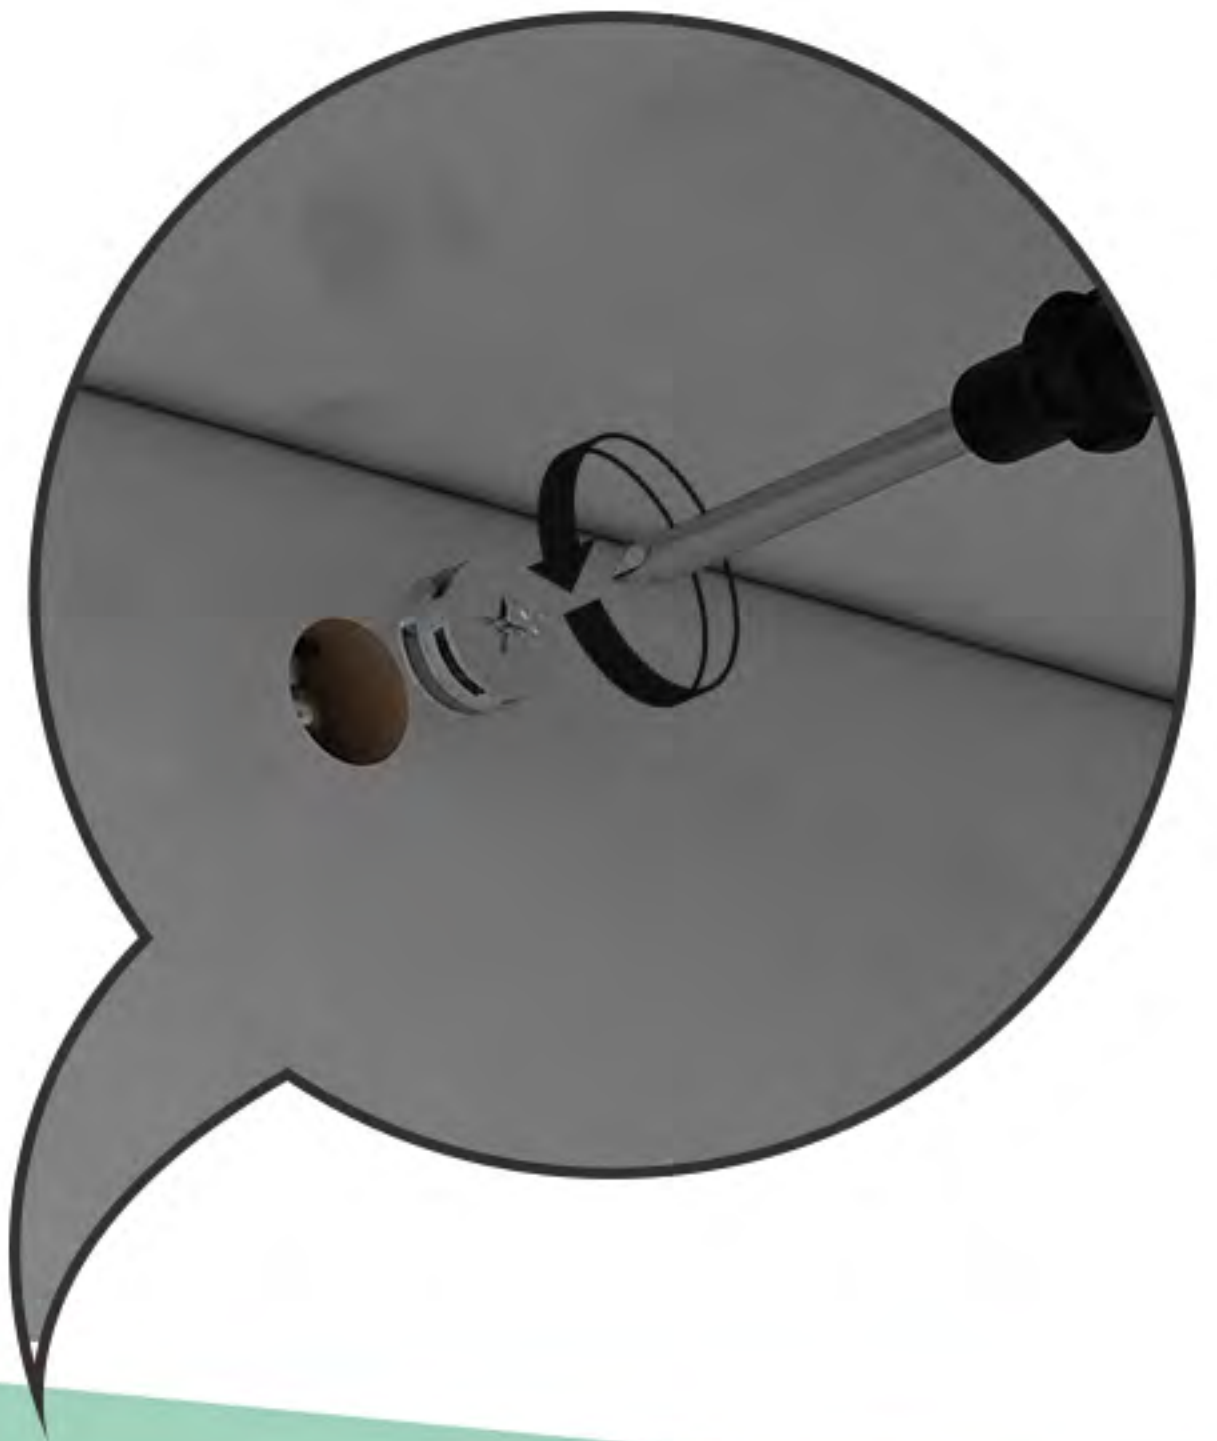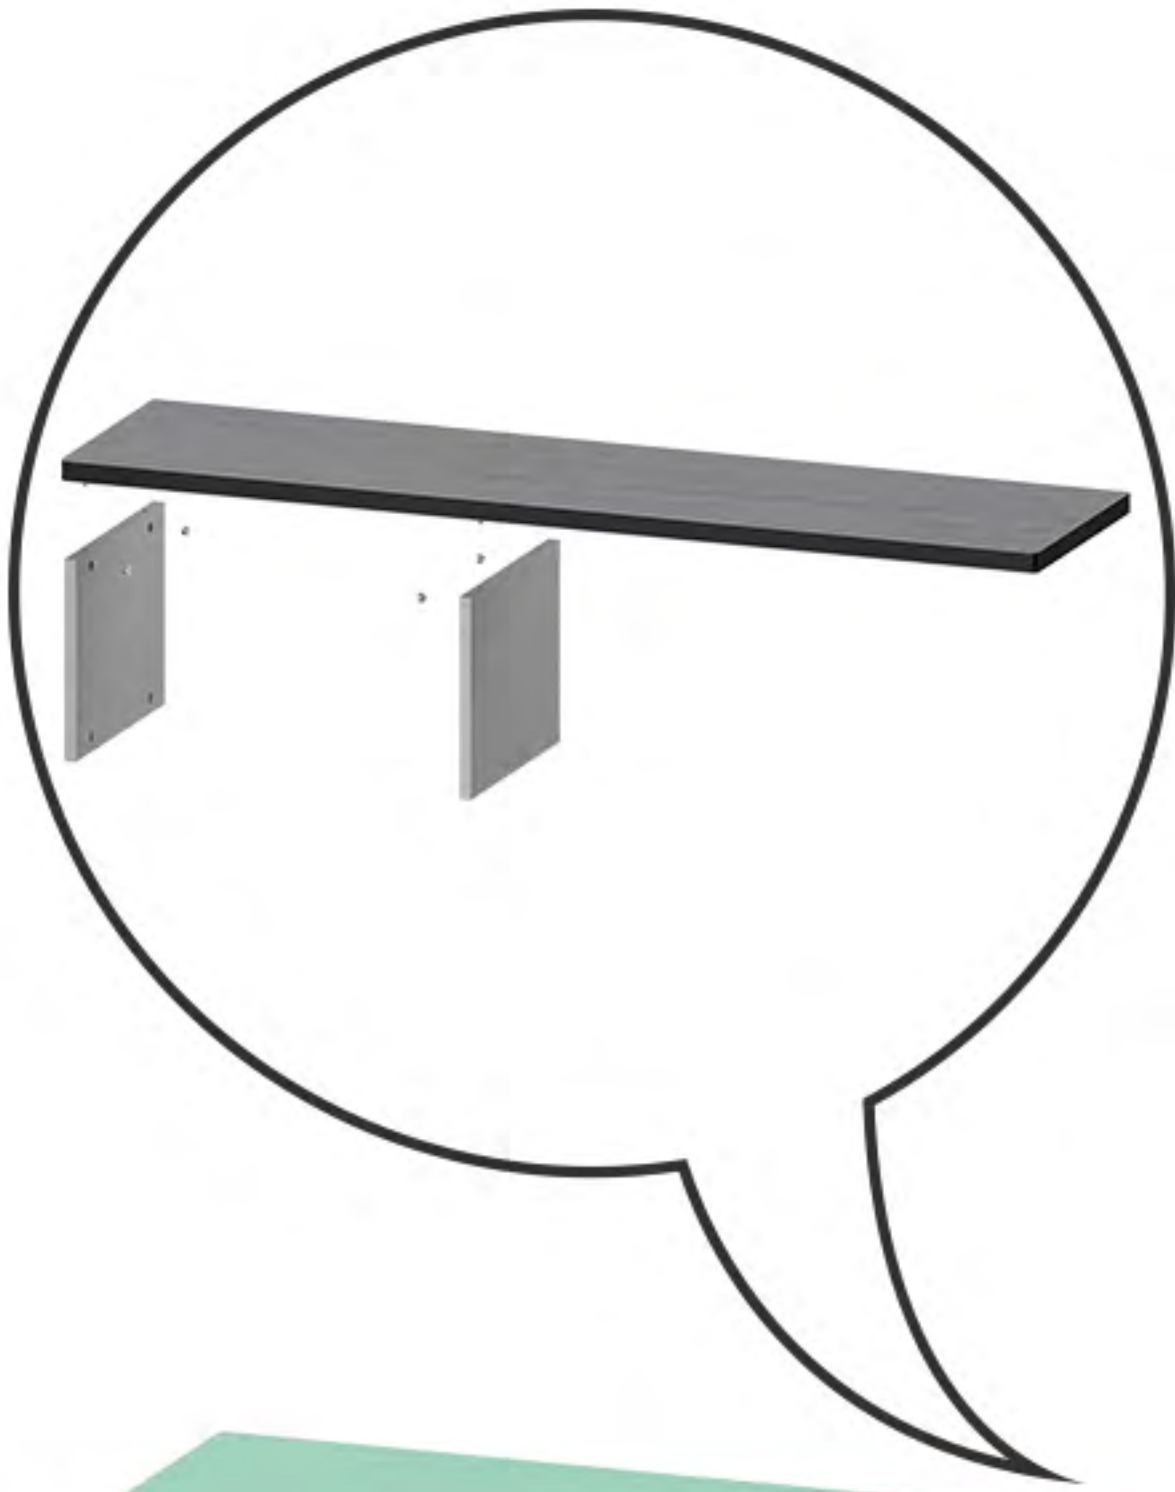

14

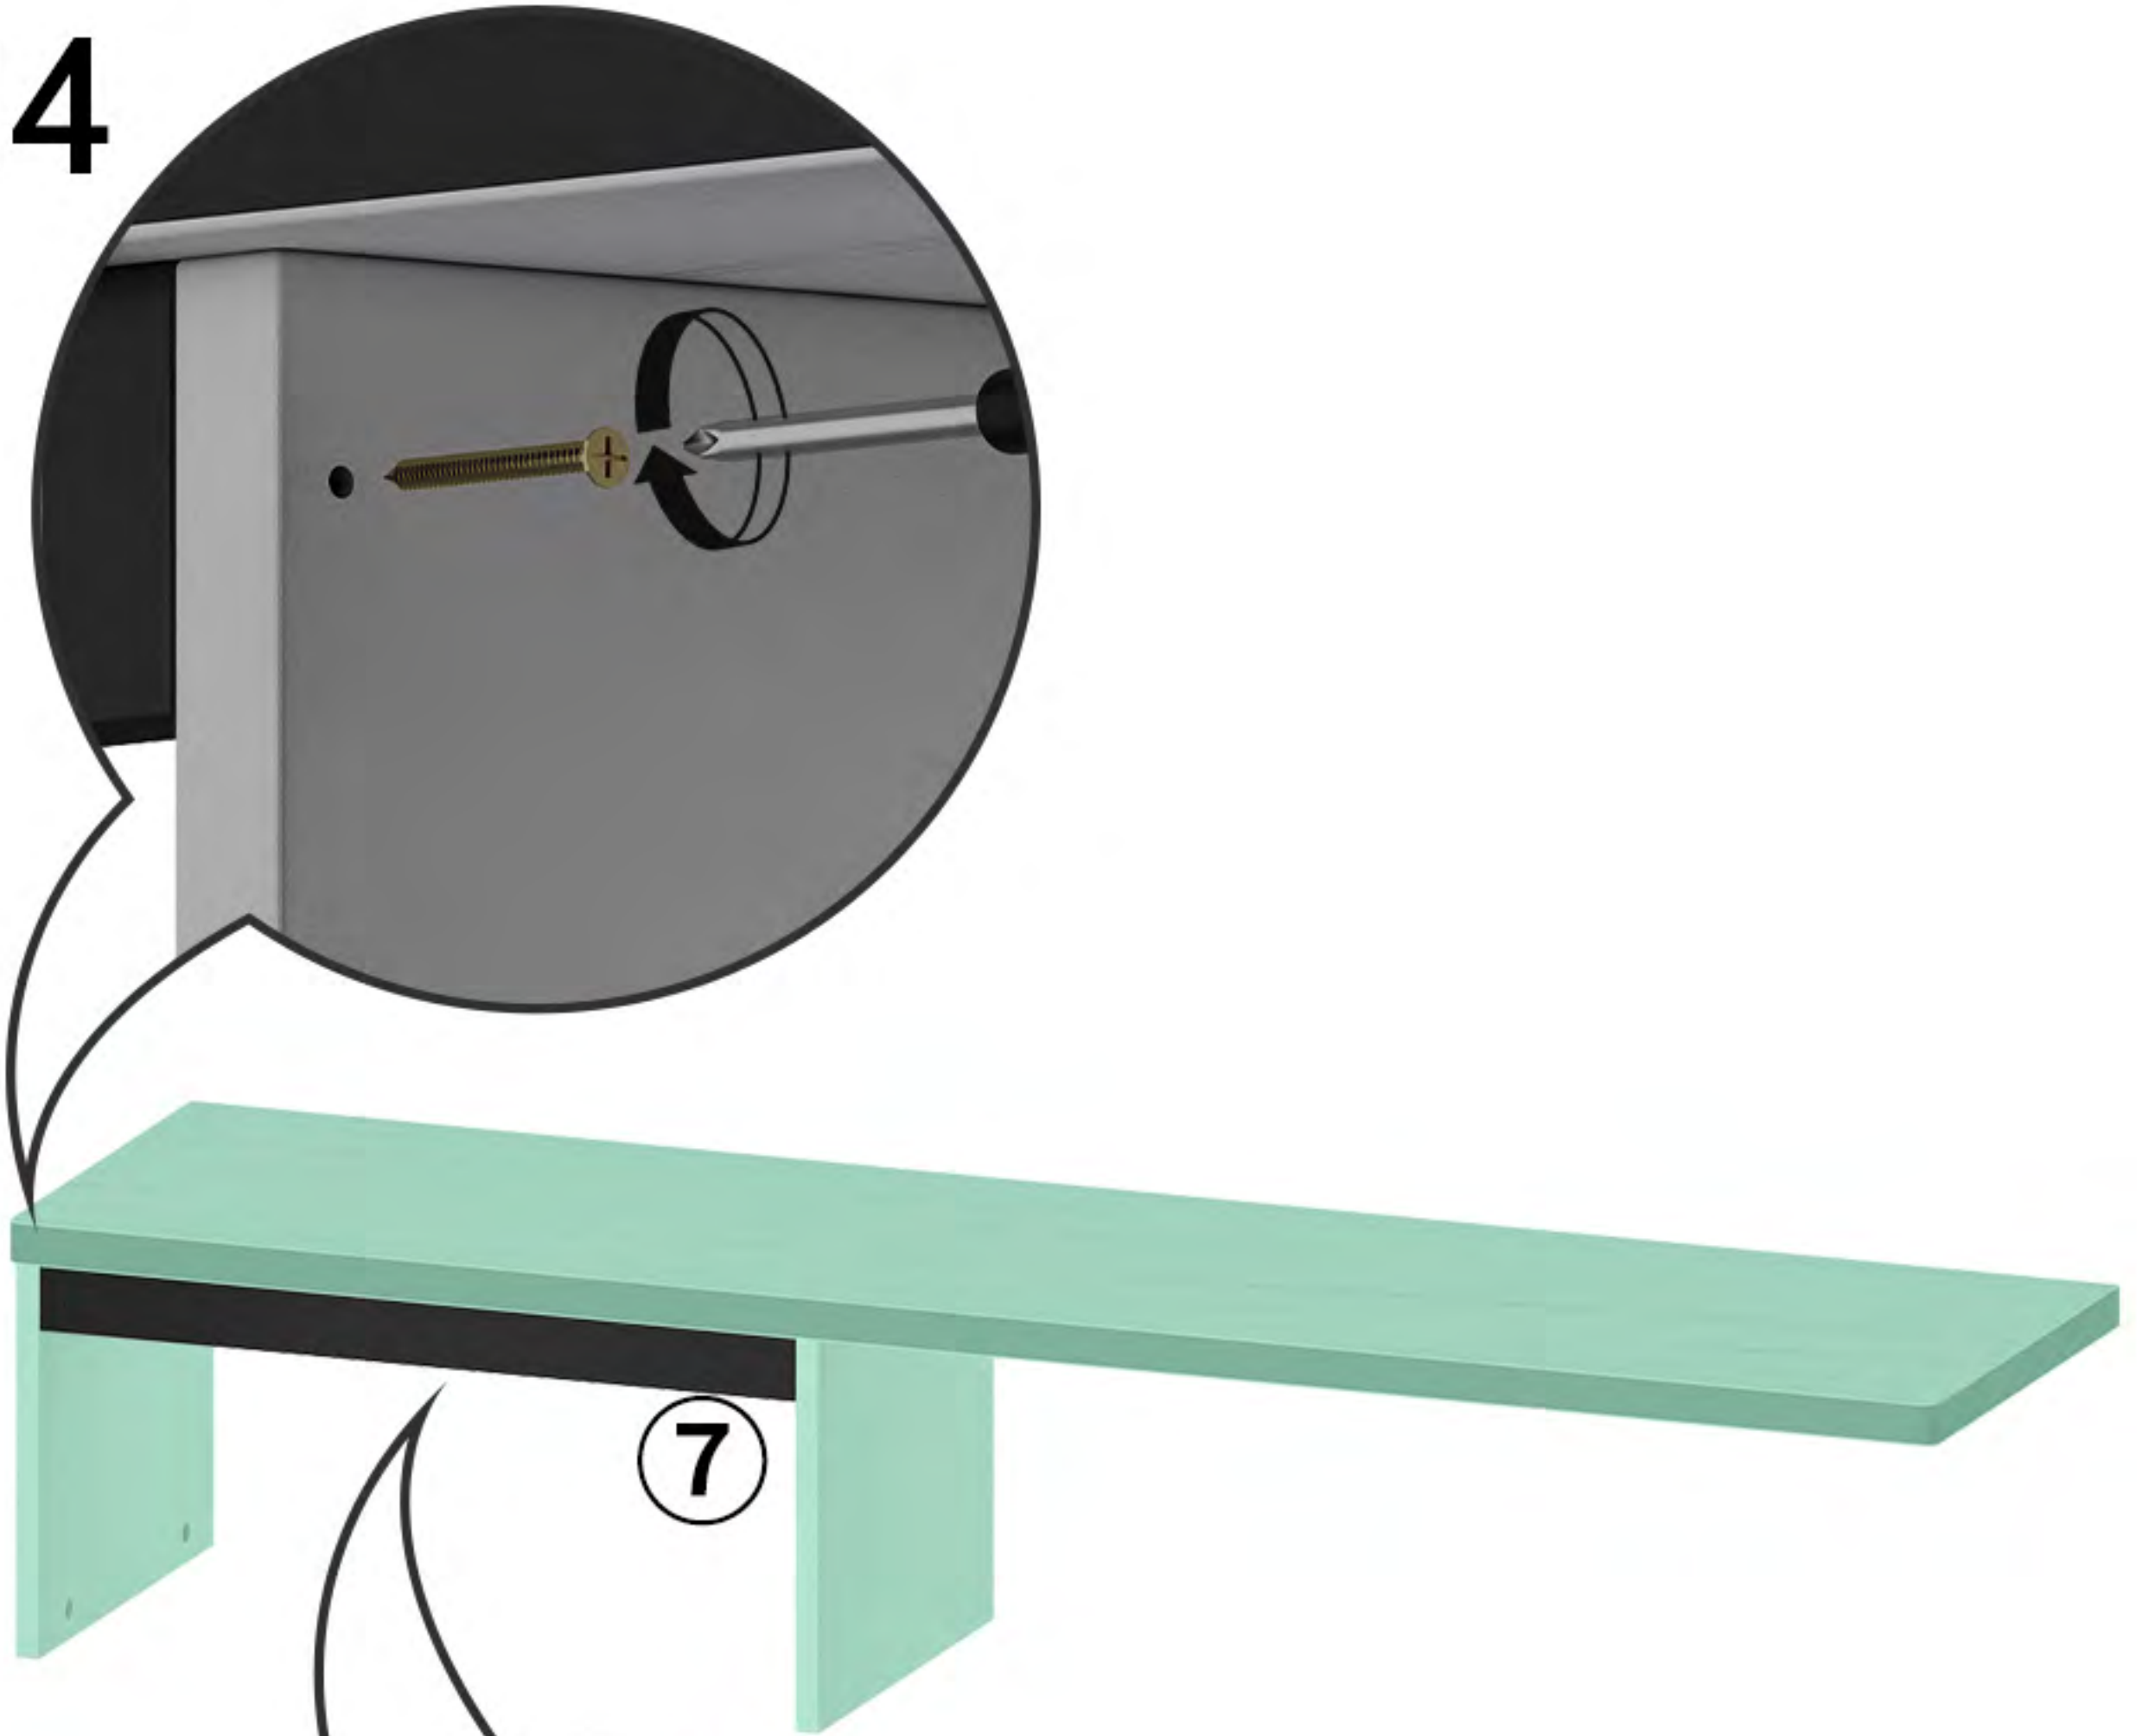

15

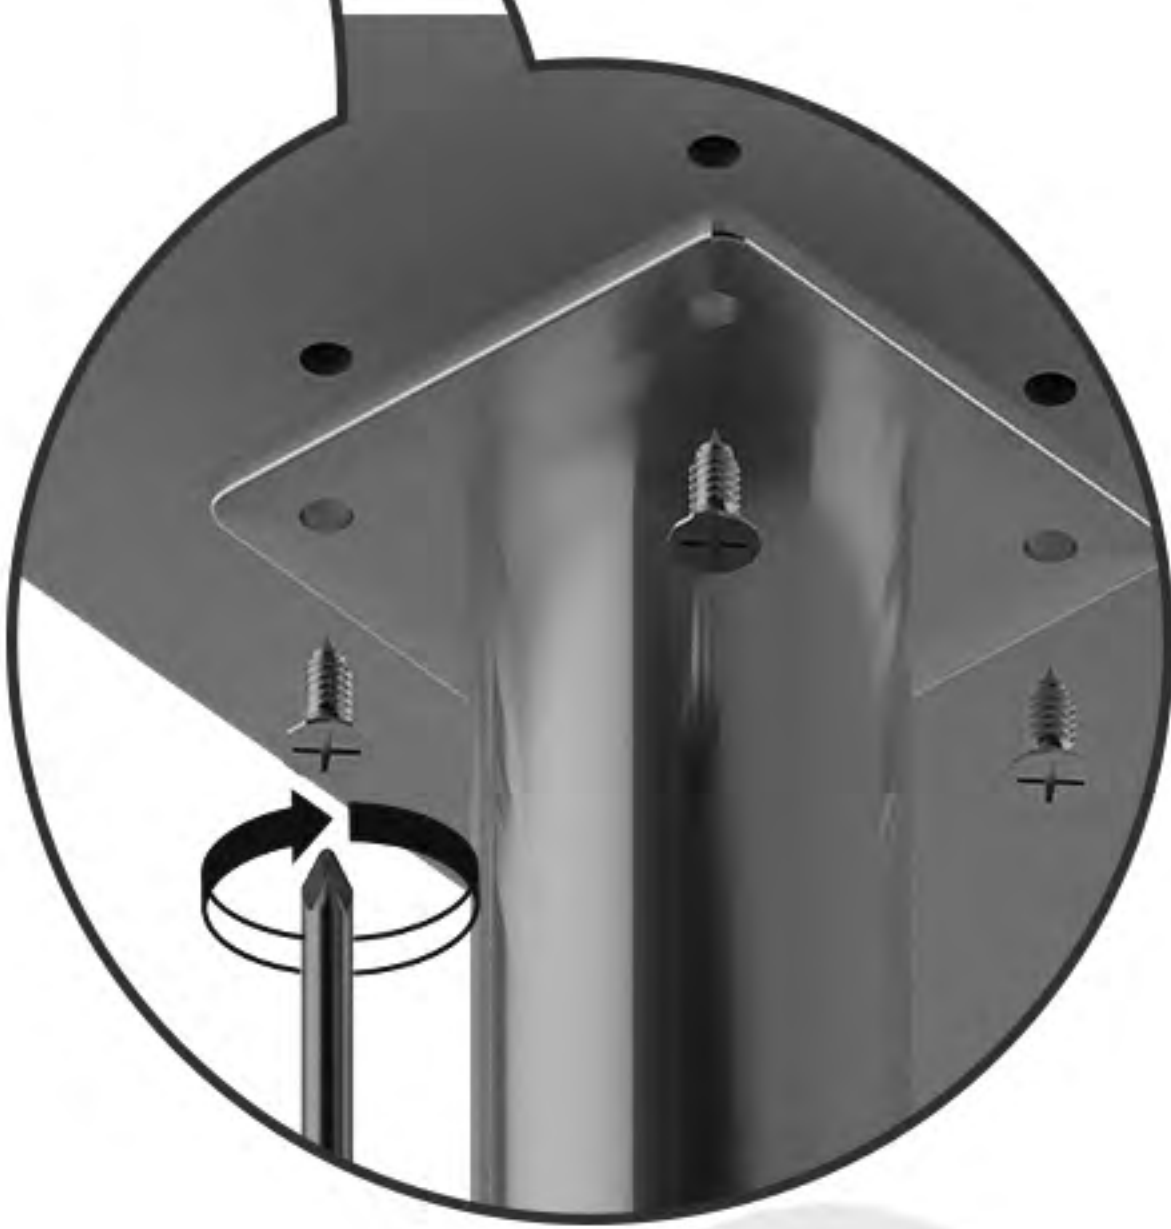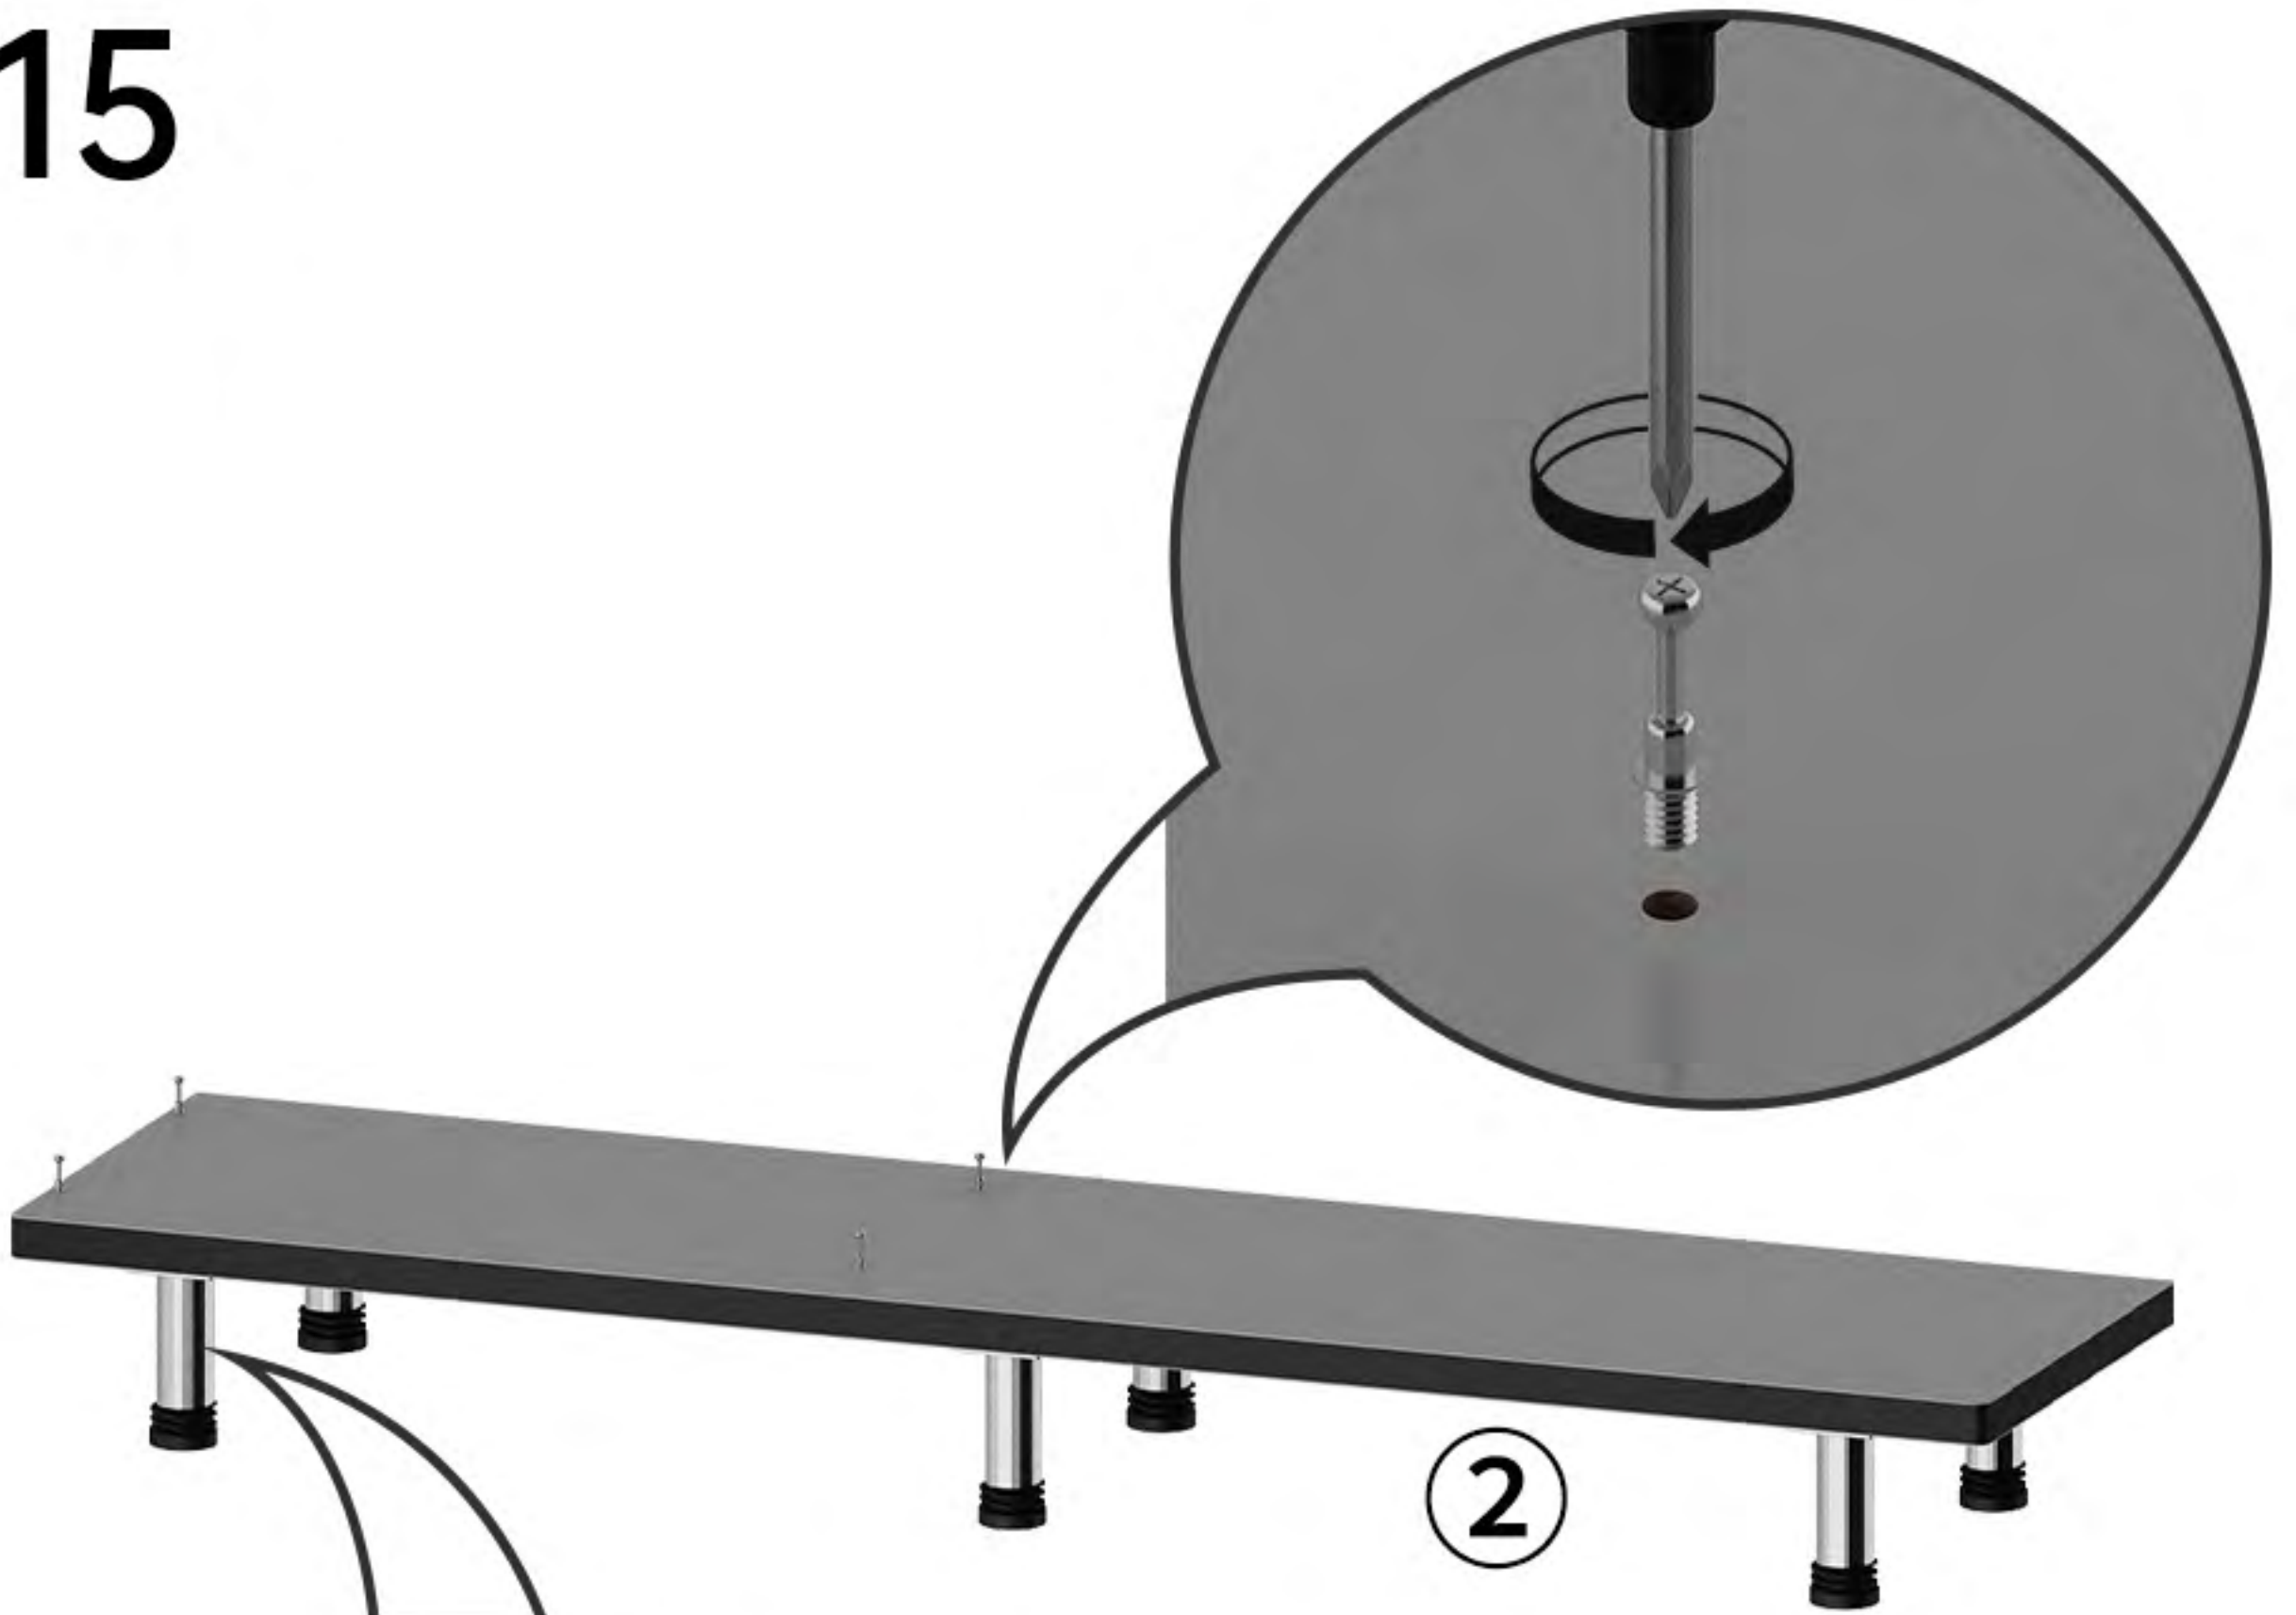

D0



2




L55




A1

16

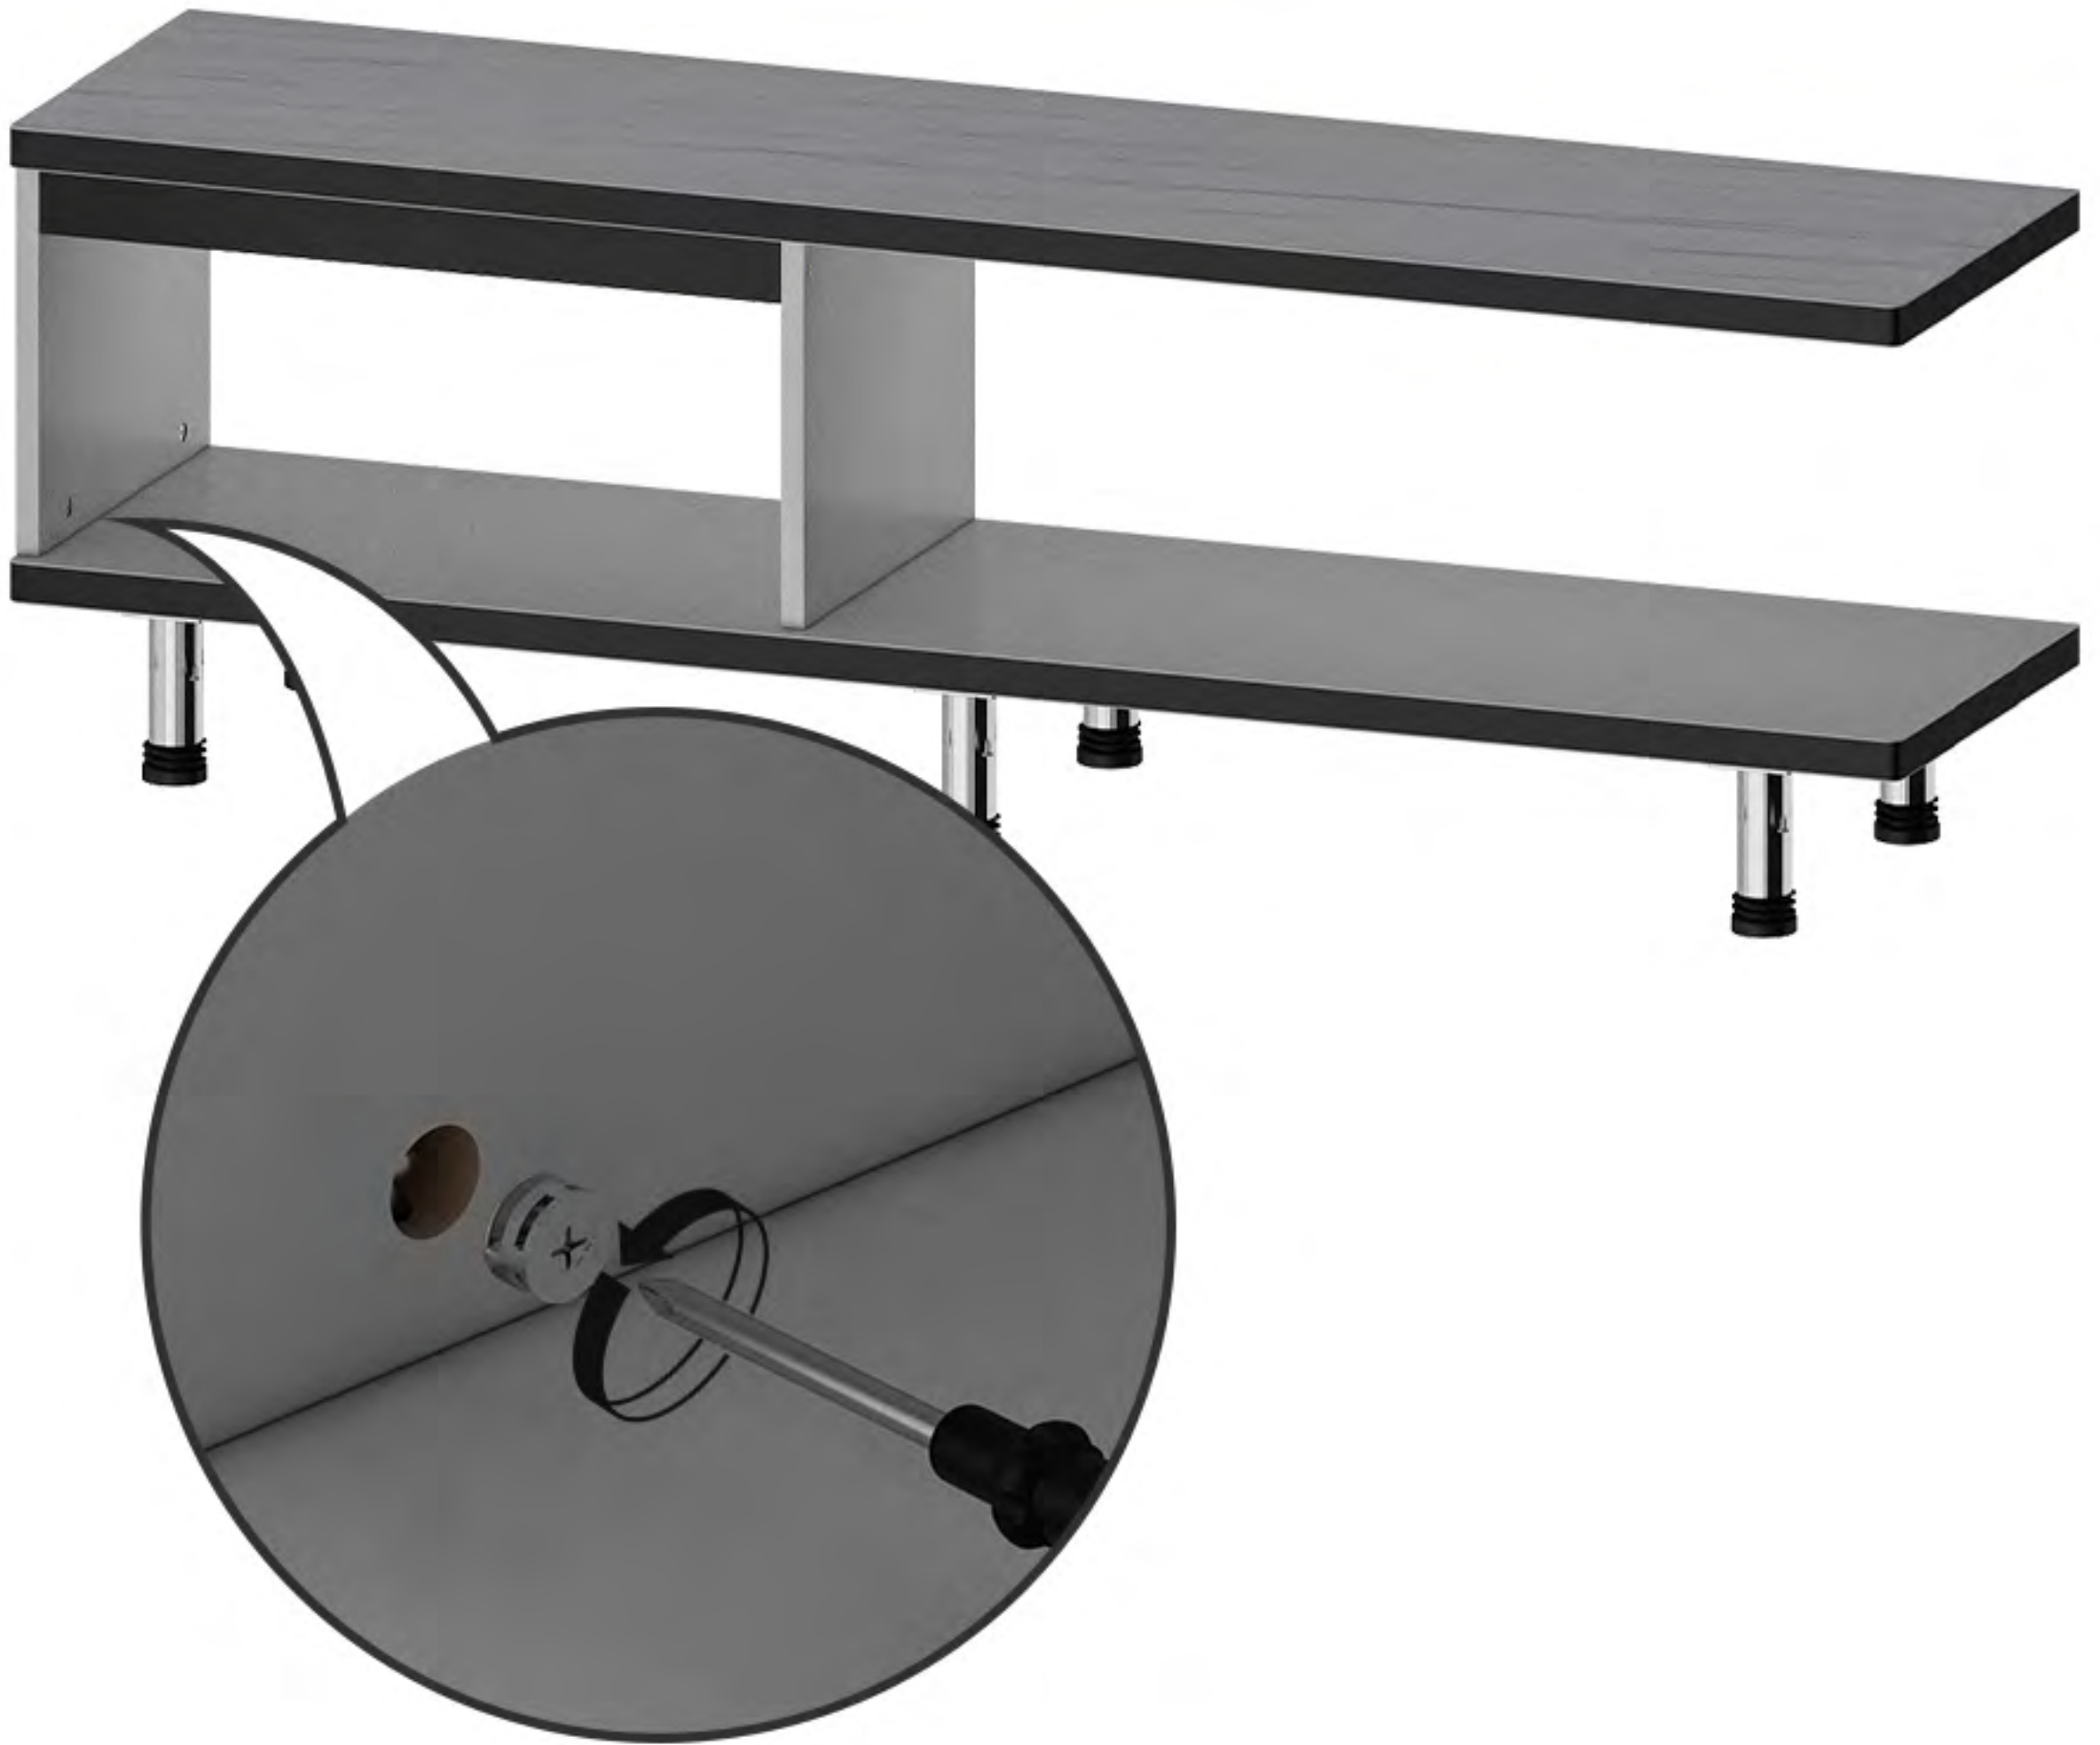

17

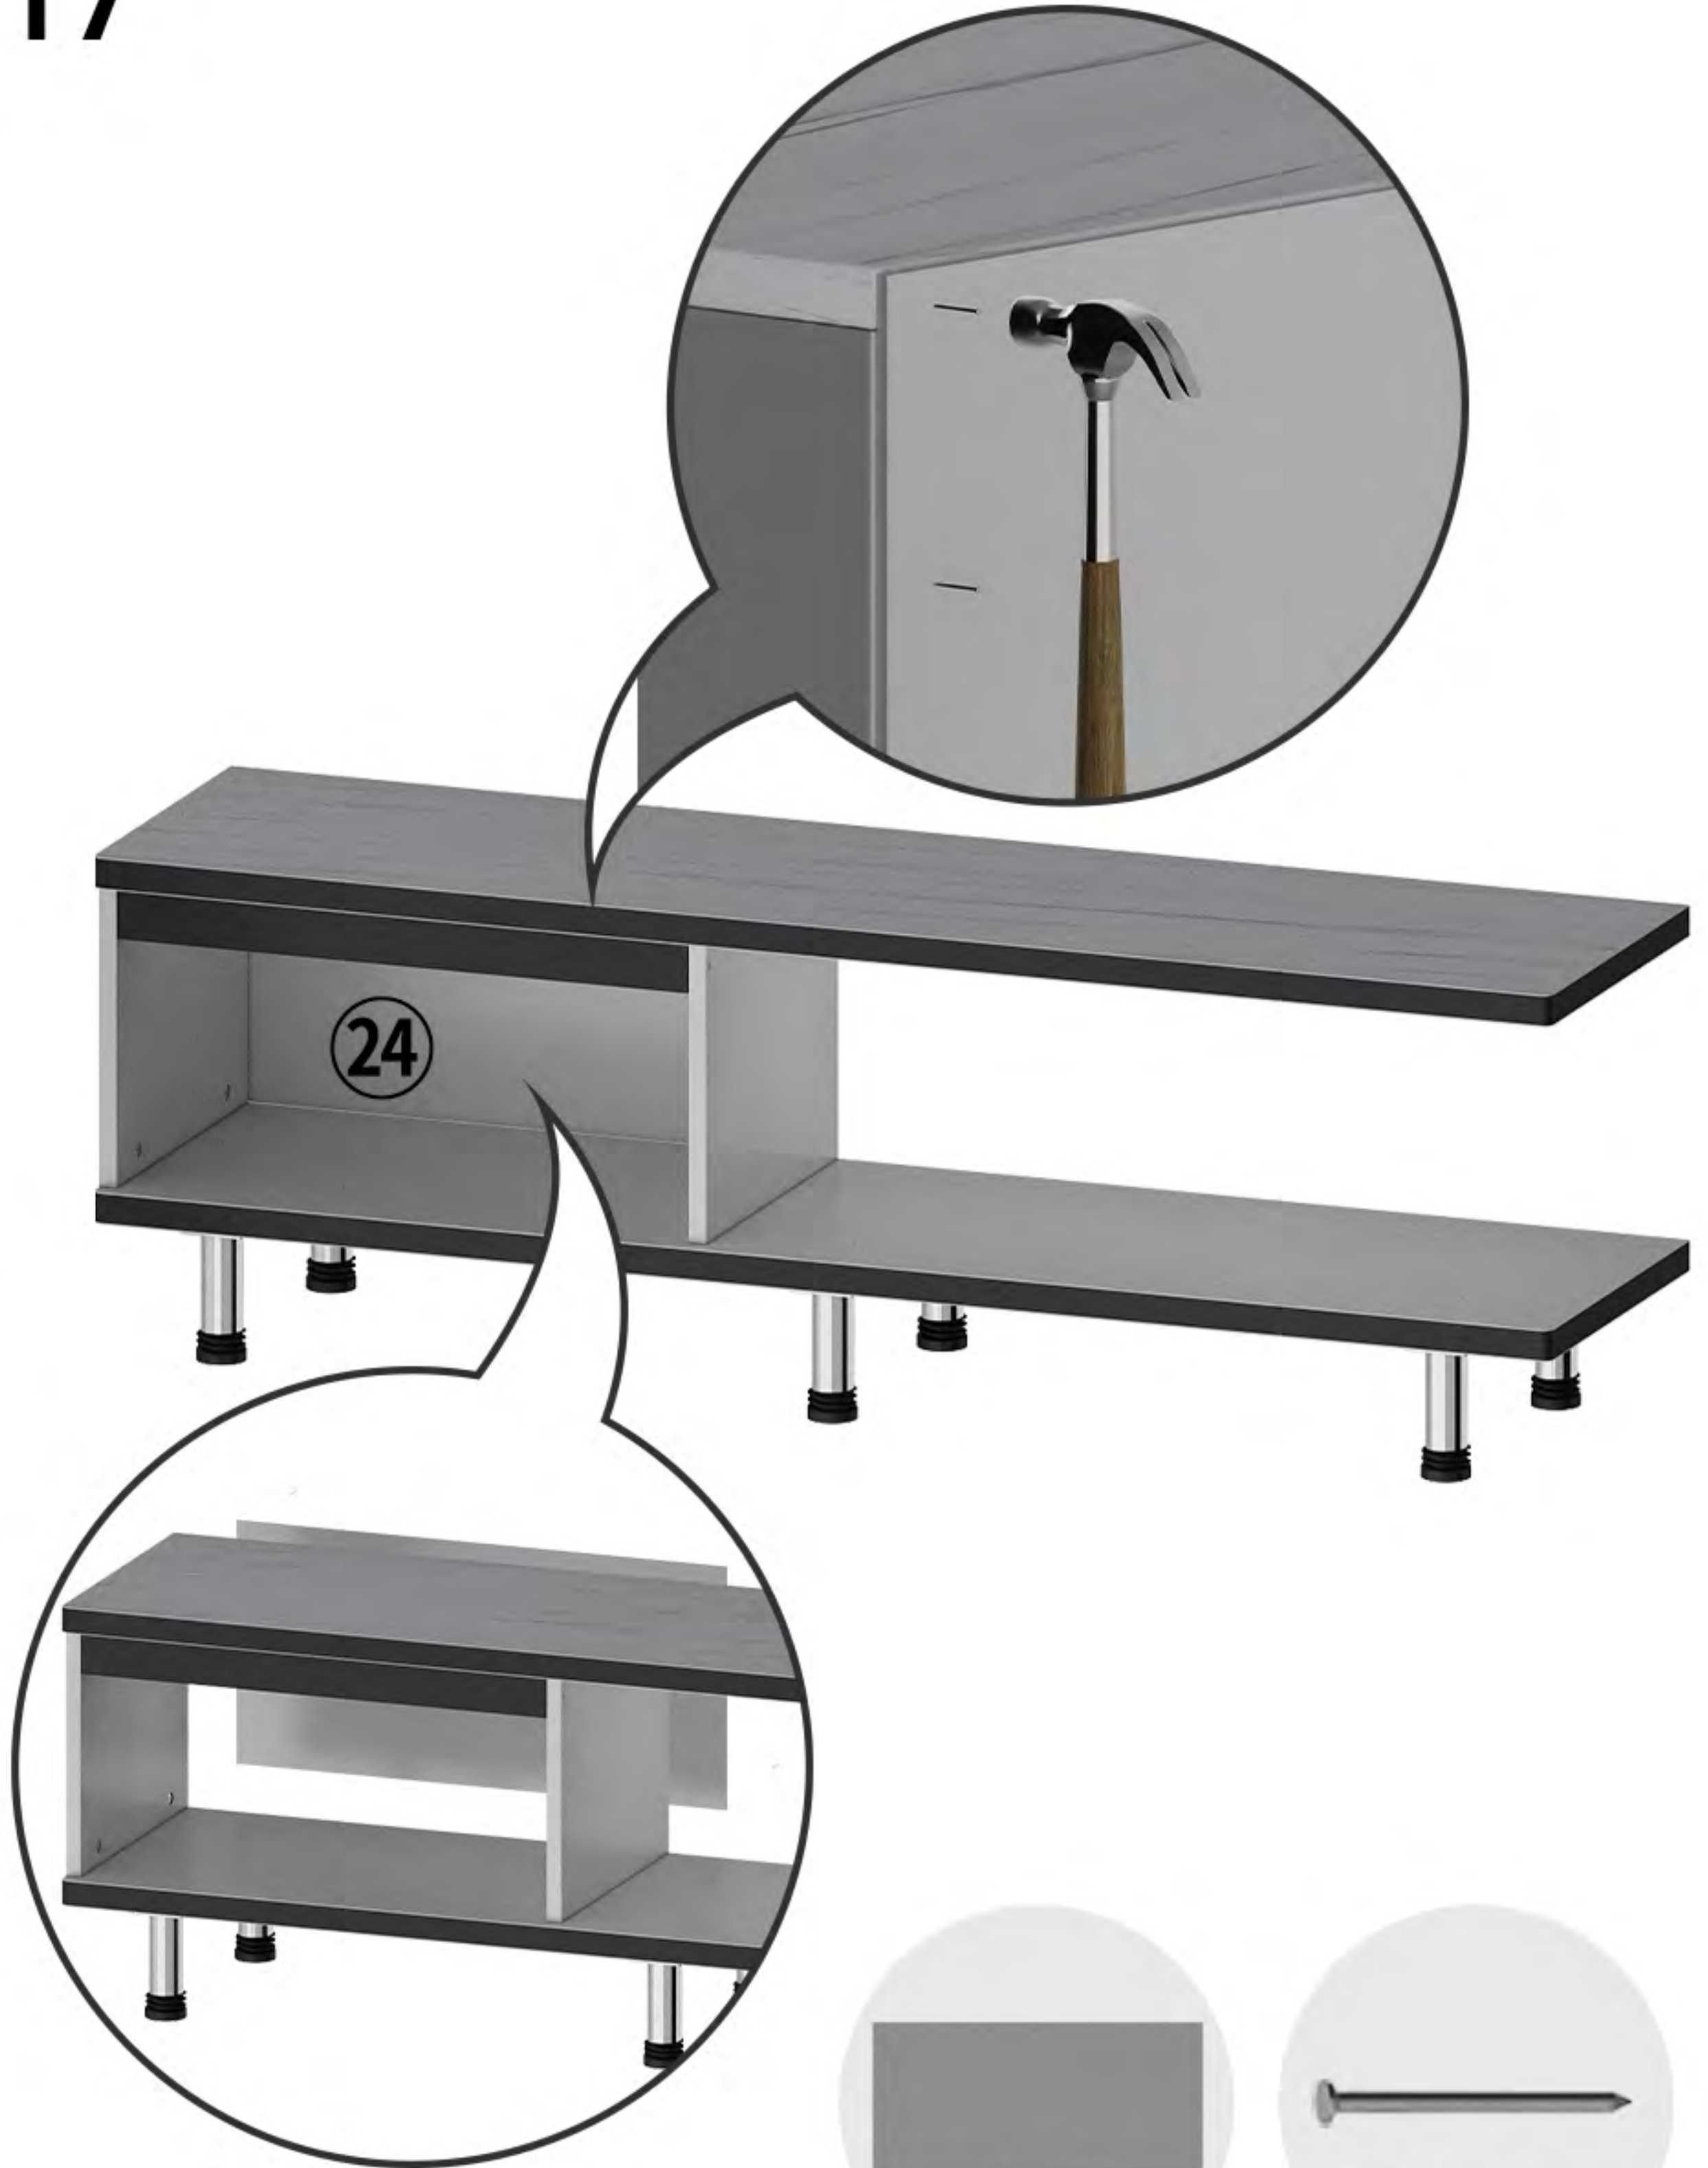

18



19

