






EDB020 Installation Instruction



Please be sure to use a manual screwdriver and refrain from using an electric drill.

				
Nuts	Wheel	Locking wheels	Glue	Wrench
A*12	B*2	C*2	D*1	E*1


Tips: Tighten the screws 70% during installation, and tighten them after everything is completed

Board name and serial number:



Board name and serial number:

<1>

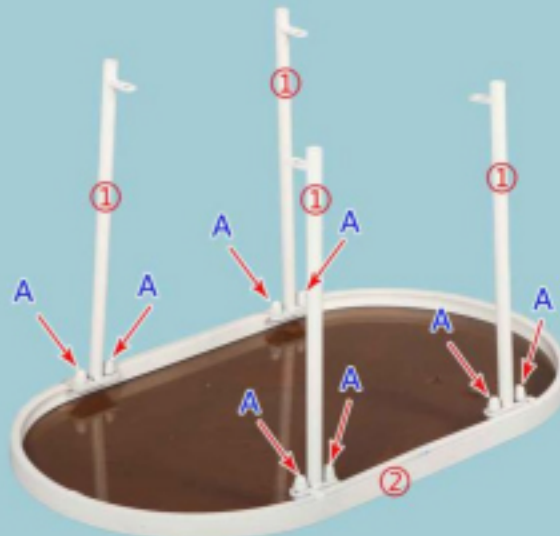


Tighten the nut clockwise with a wrench

<2>



Net brief

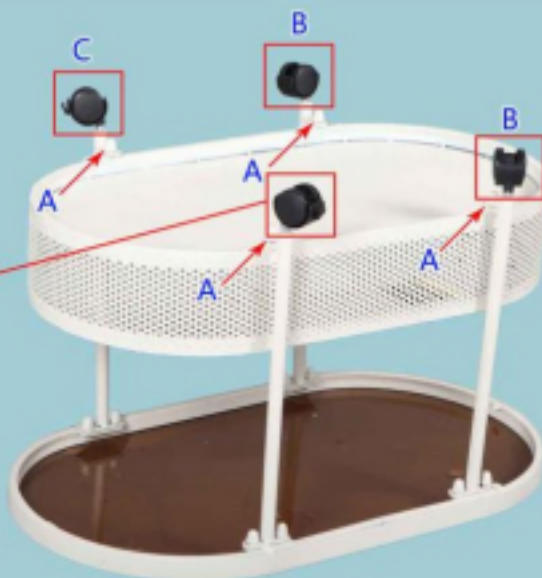

<3> Overall alignment

