



SOCE008 18CM Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.

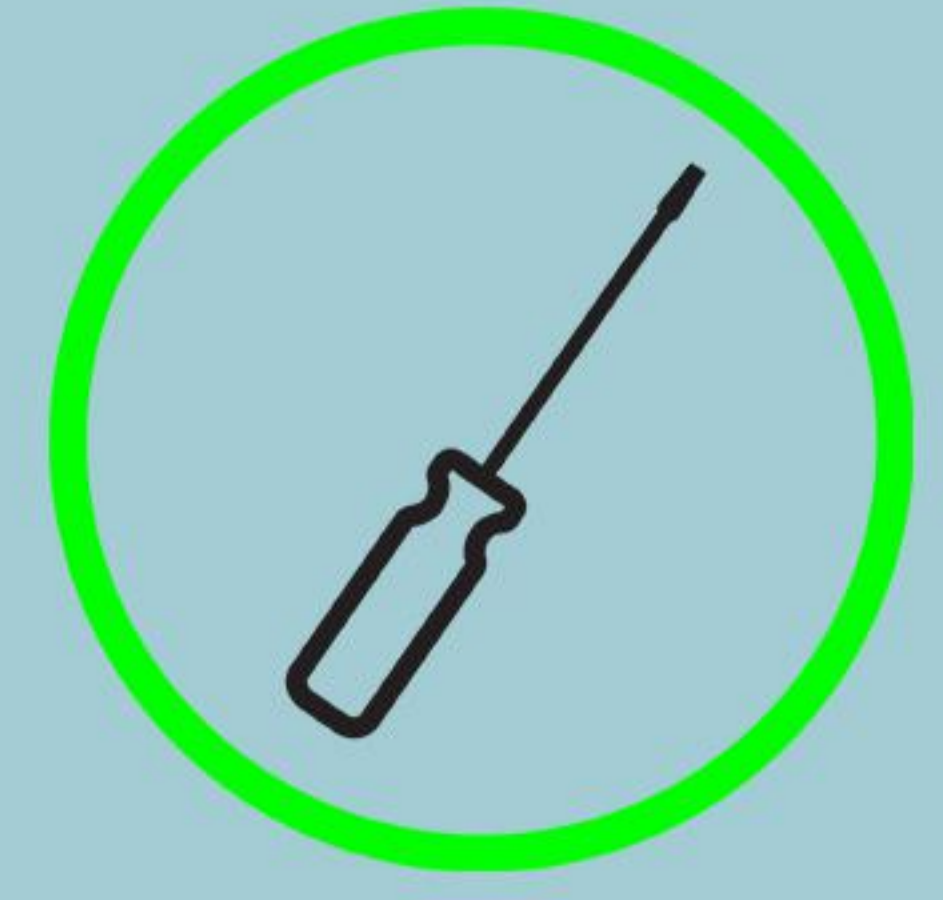


Eccentric screw	Eccentric Bolt	air hole	handle kit	handle screw	shaft	Smallest self-tapping screw	Anti-dumping device	3.5CM self-tapping screw	cork
A*26	B*20	C*3	D*3	E*6	F*6	G*52	H*1	I *4	J*6





Eccentric installation principle :**Kind tips** : Tighten the screws seven times when installing , and then tighten it after everything is done!

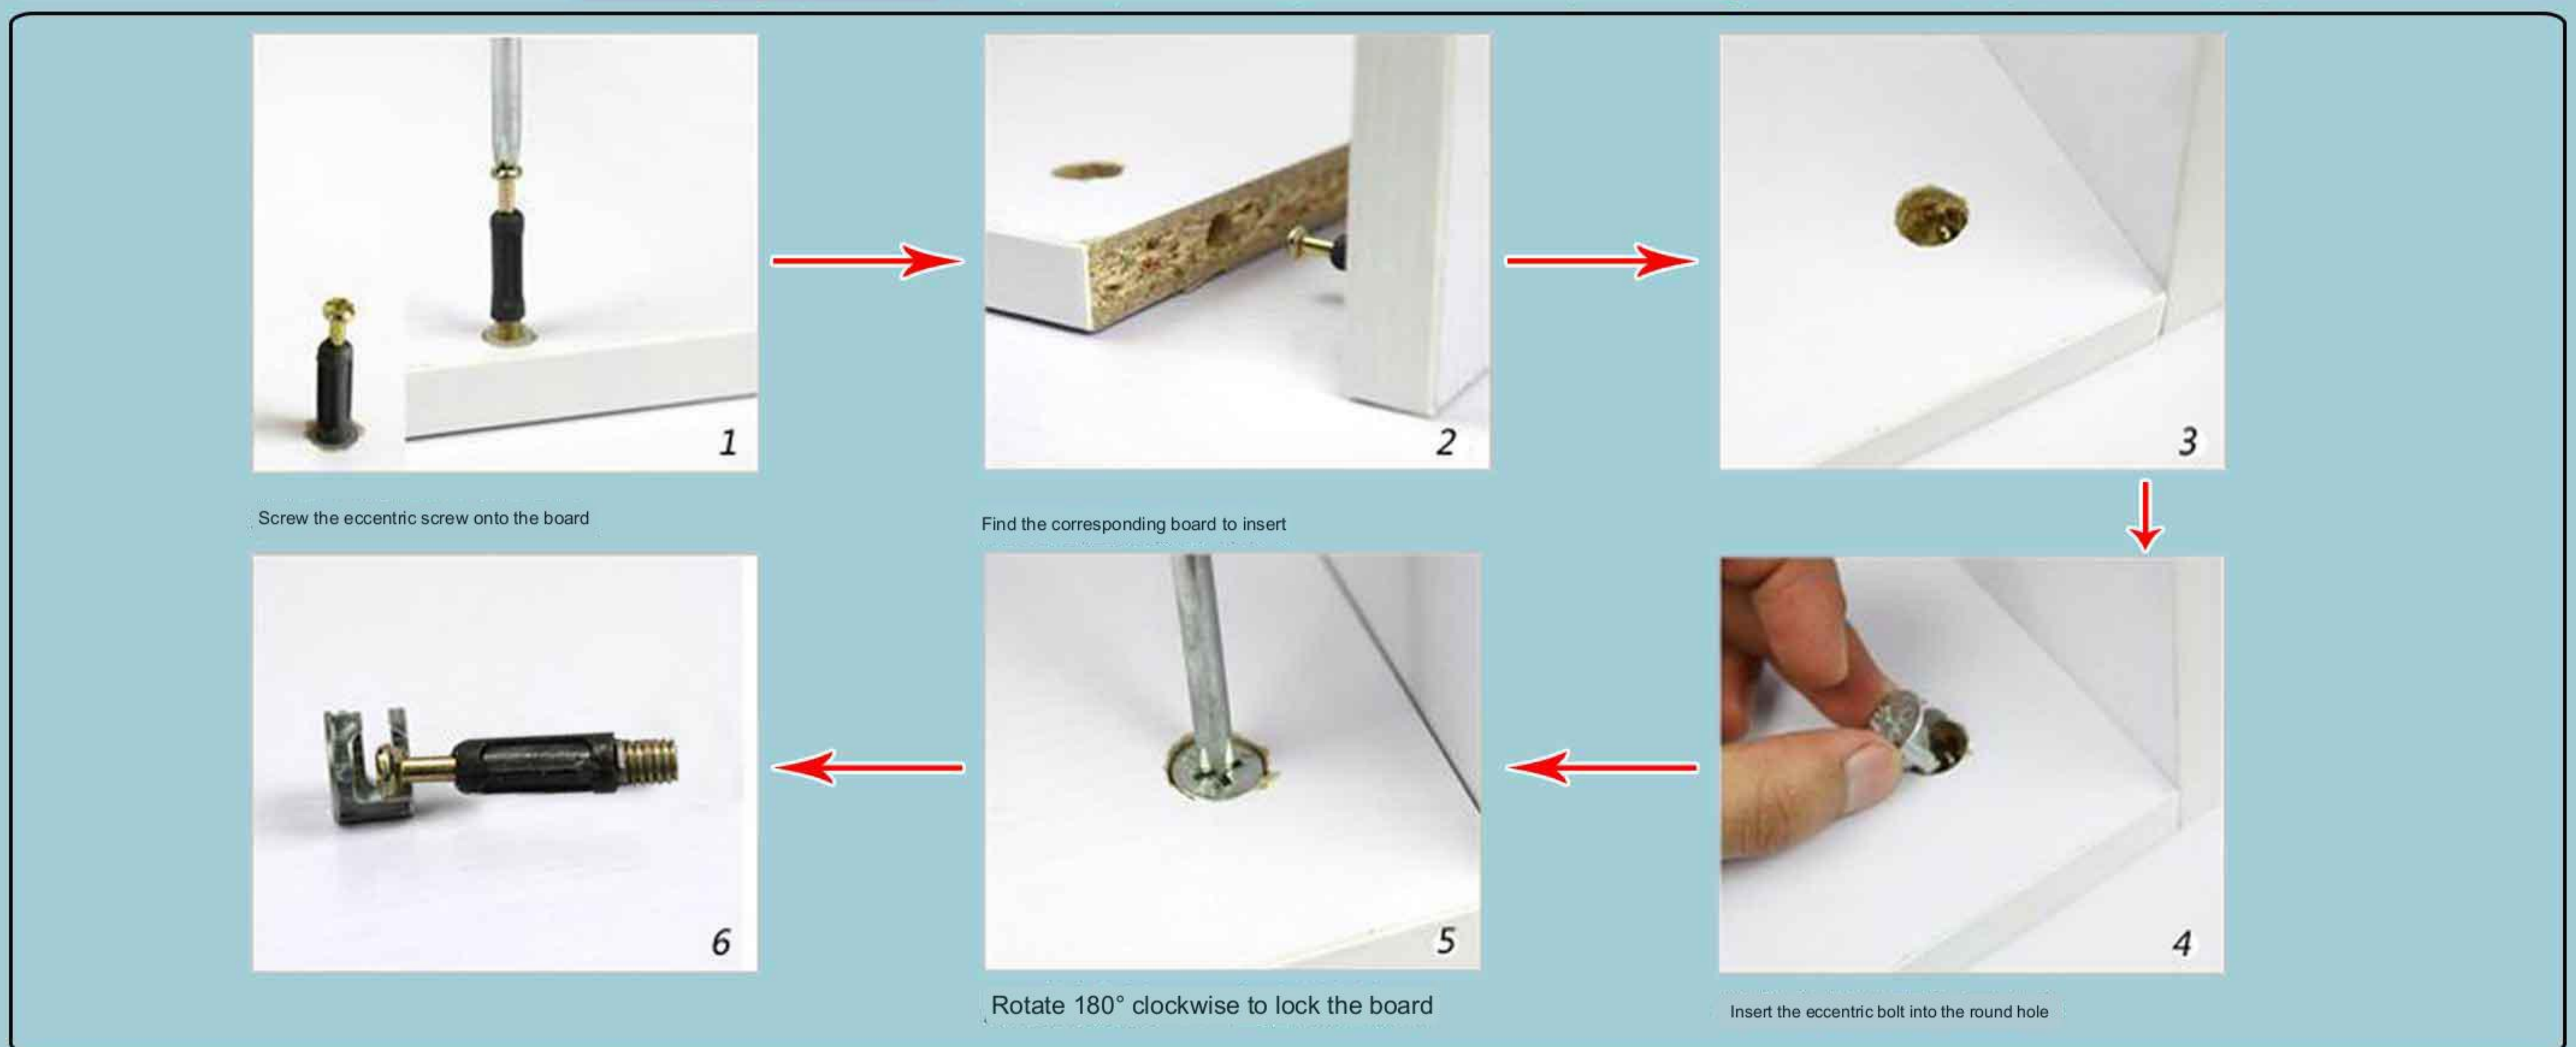

Board name and serial number:



The serial number sequence in the installation diagram is not a lack of boards, you only need to install it according to the serial number

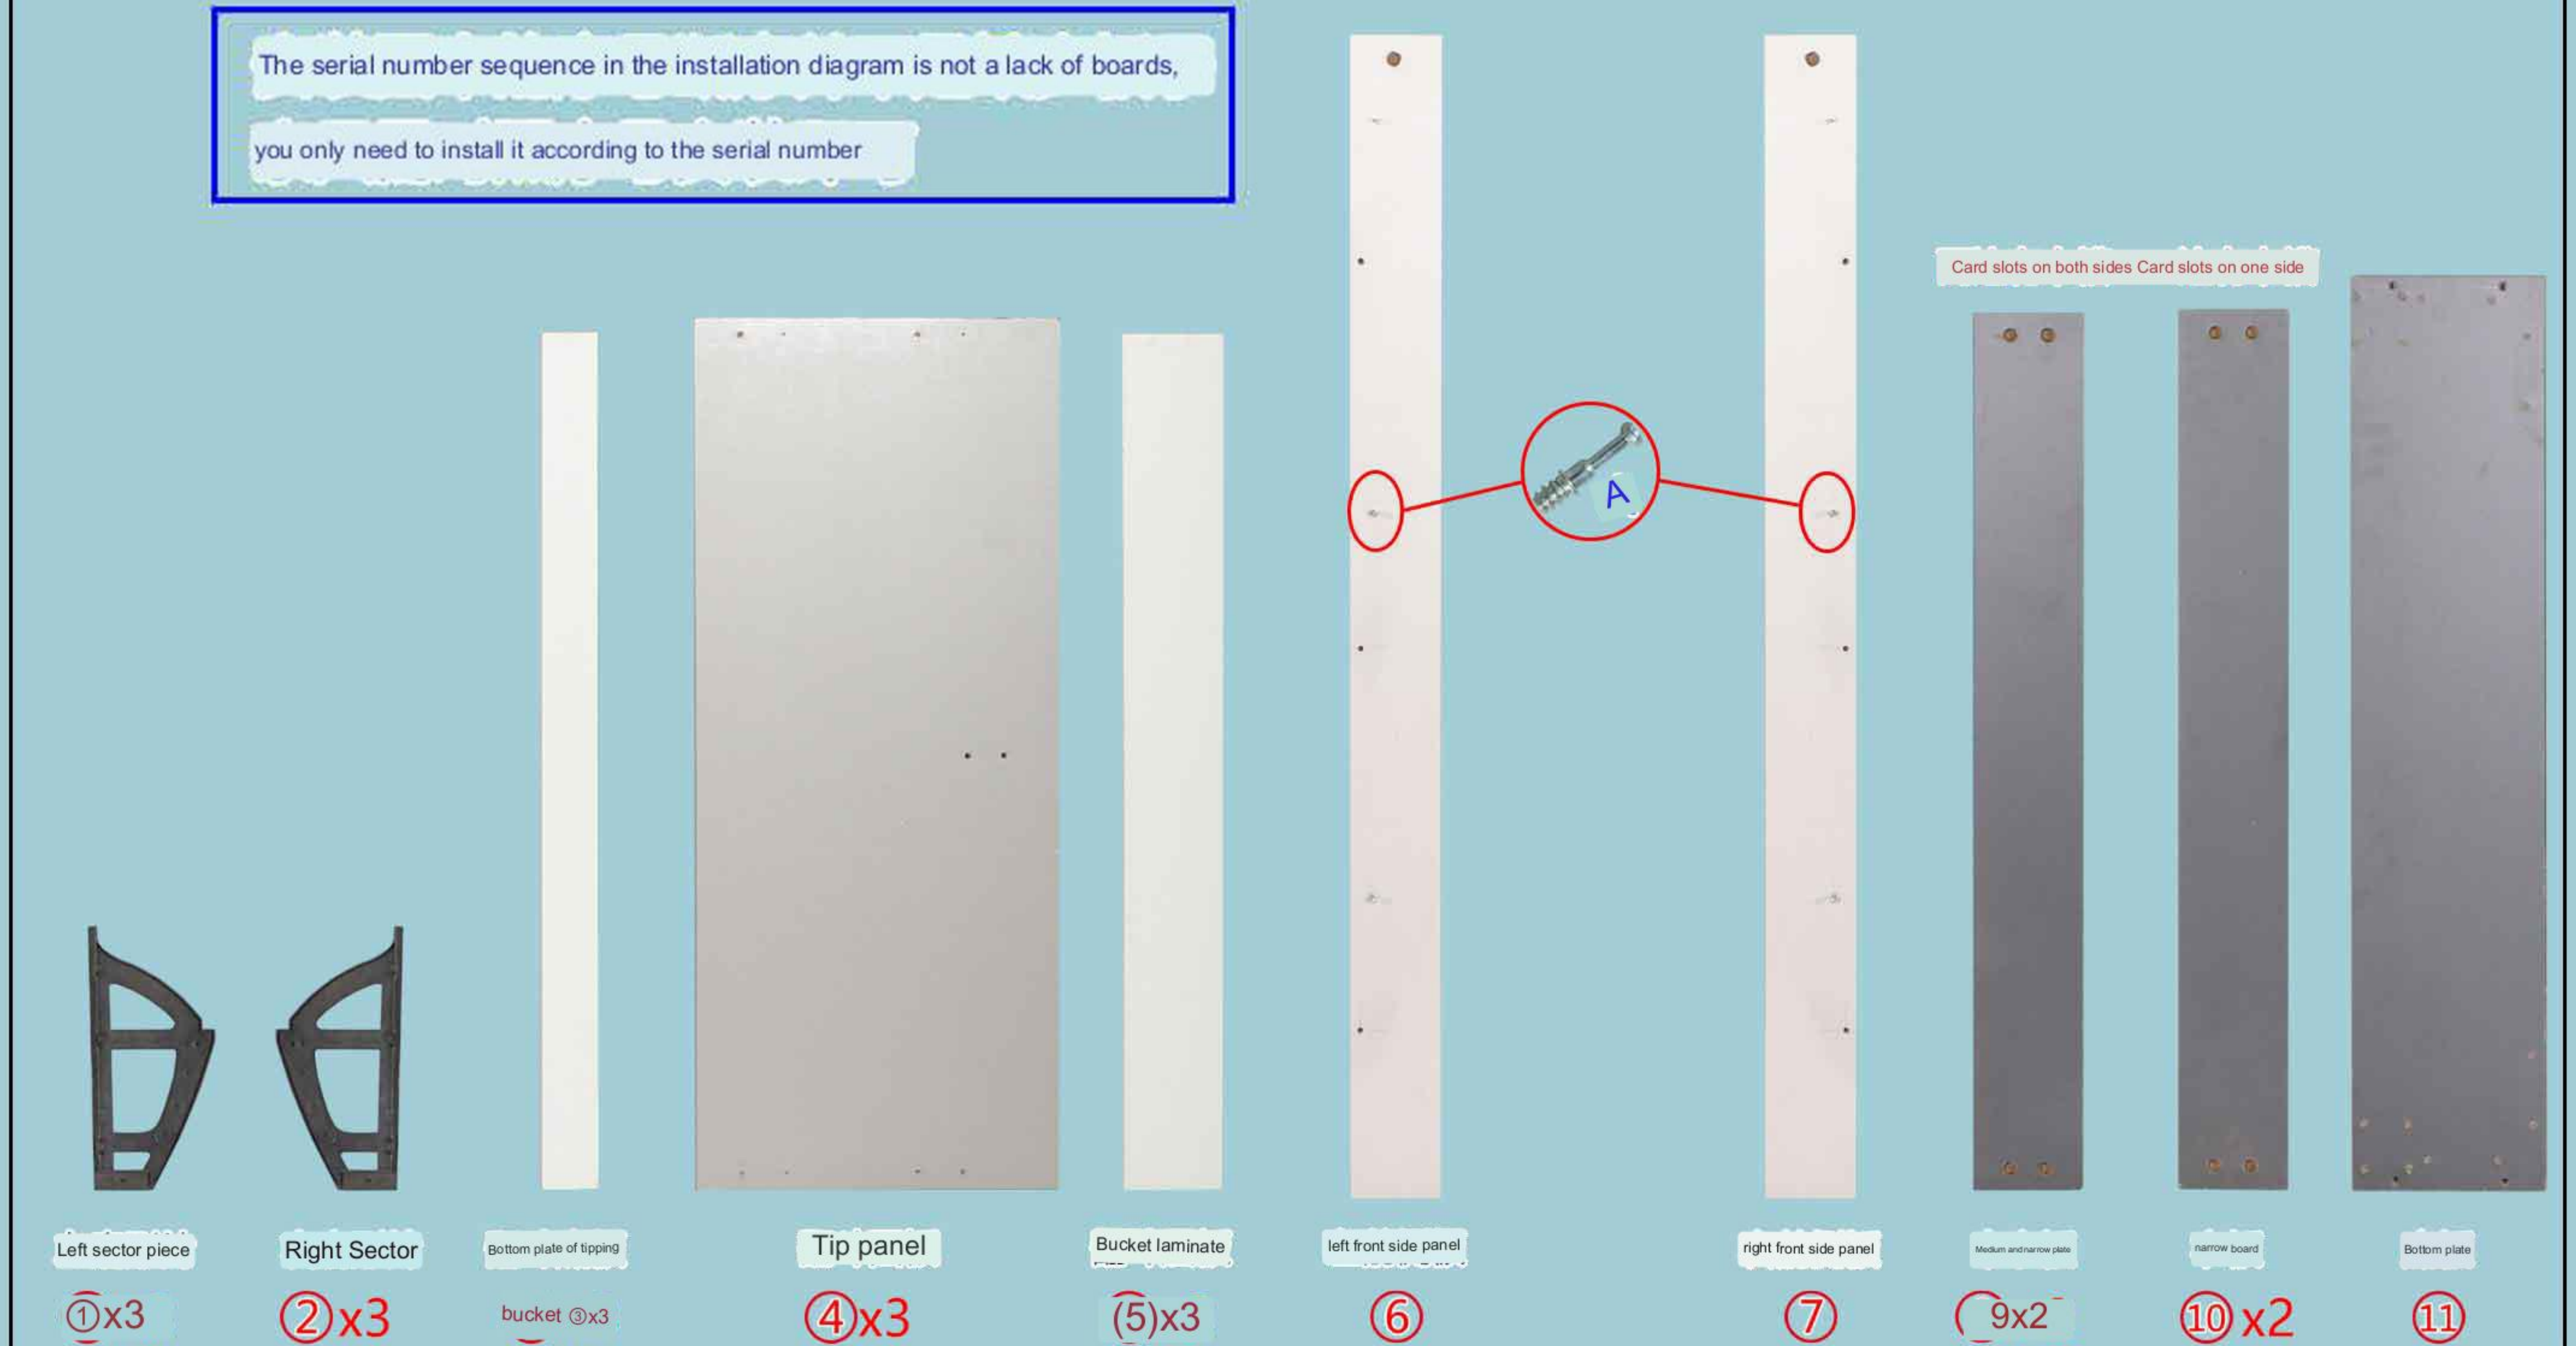

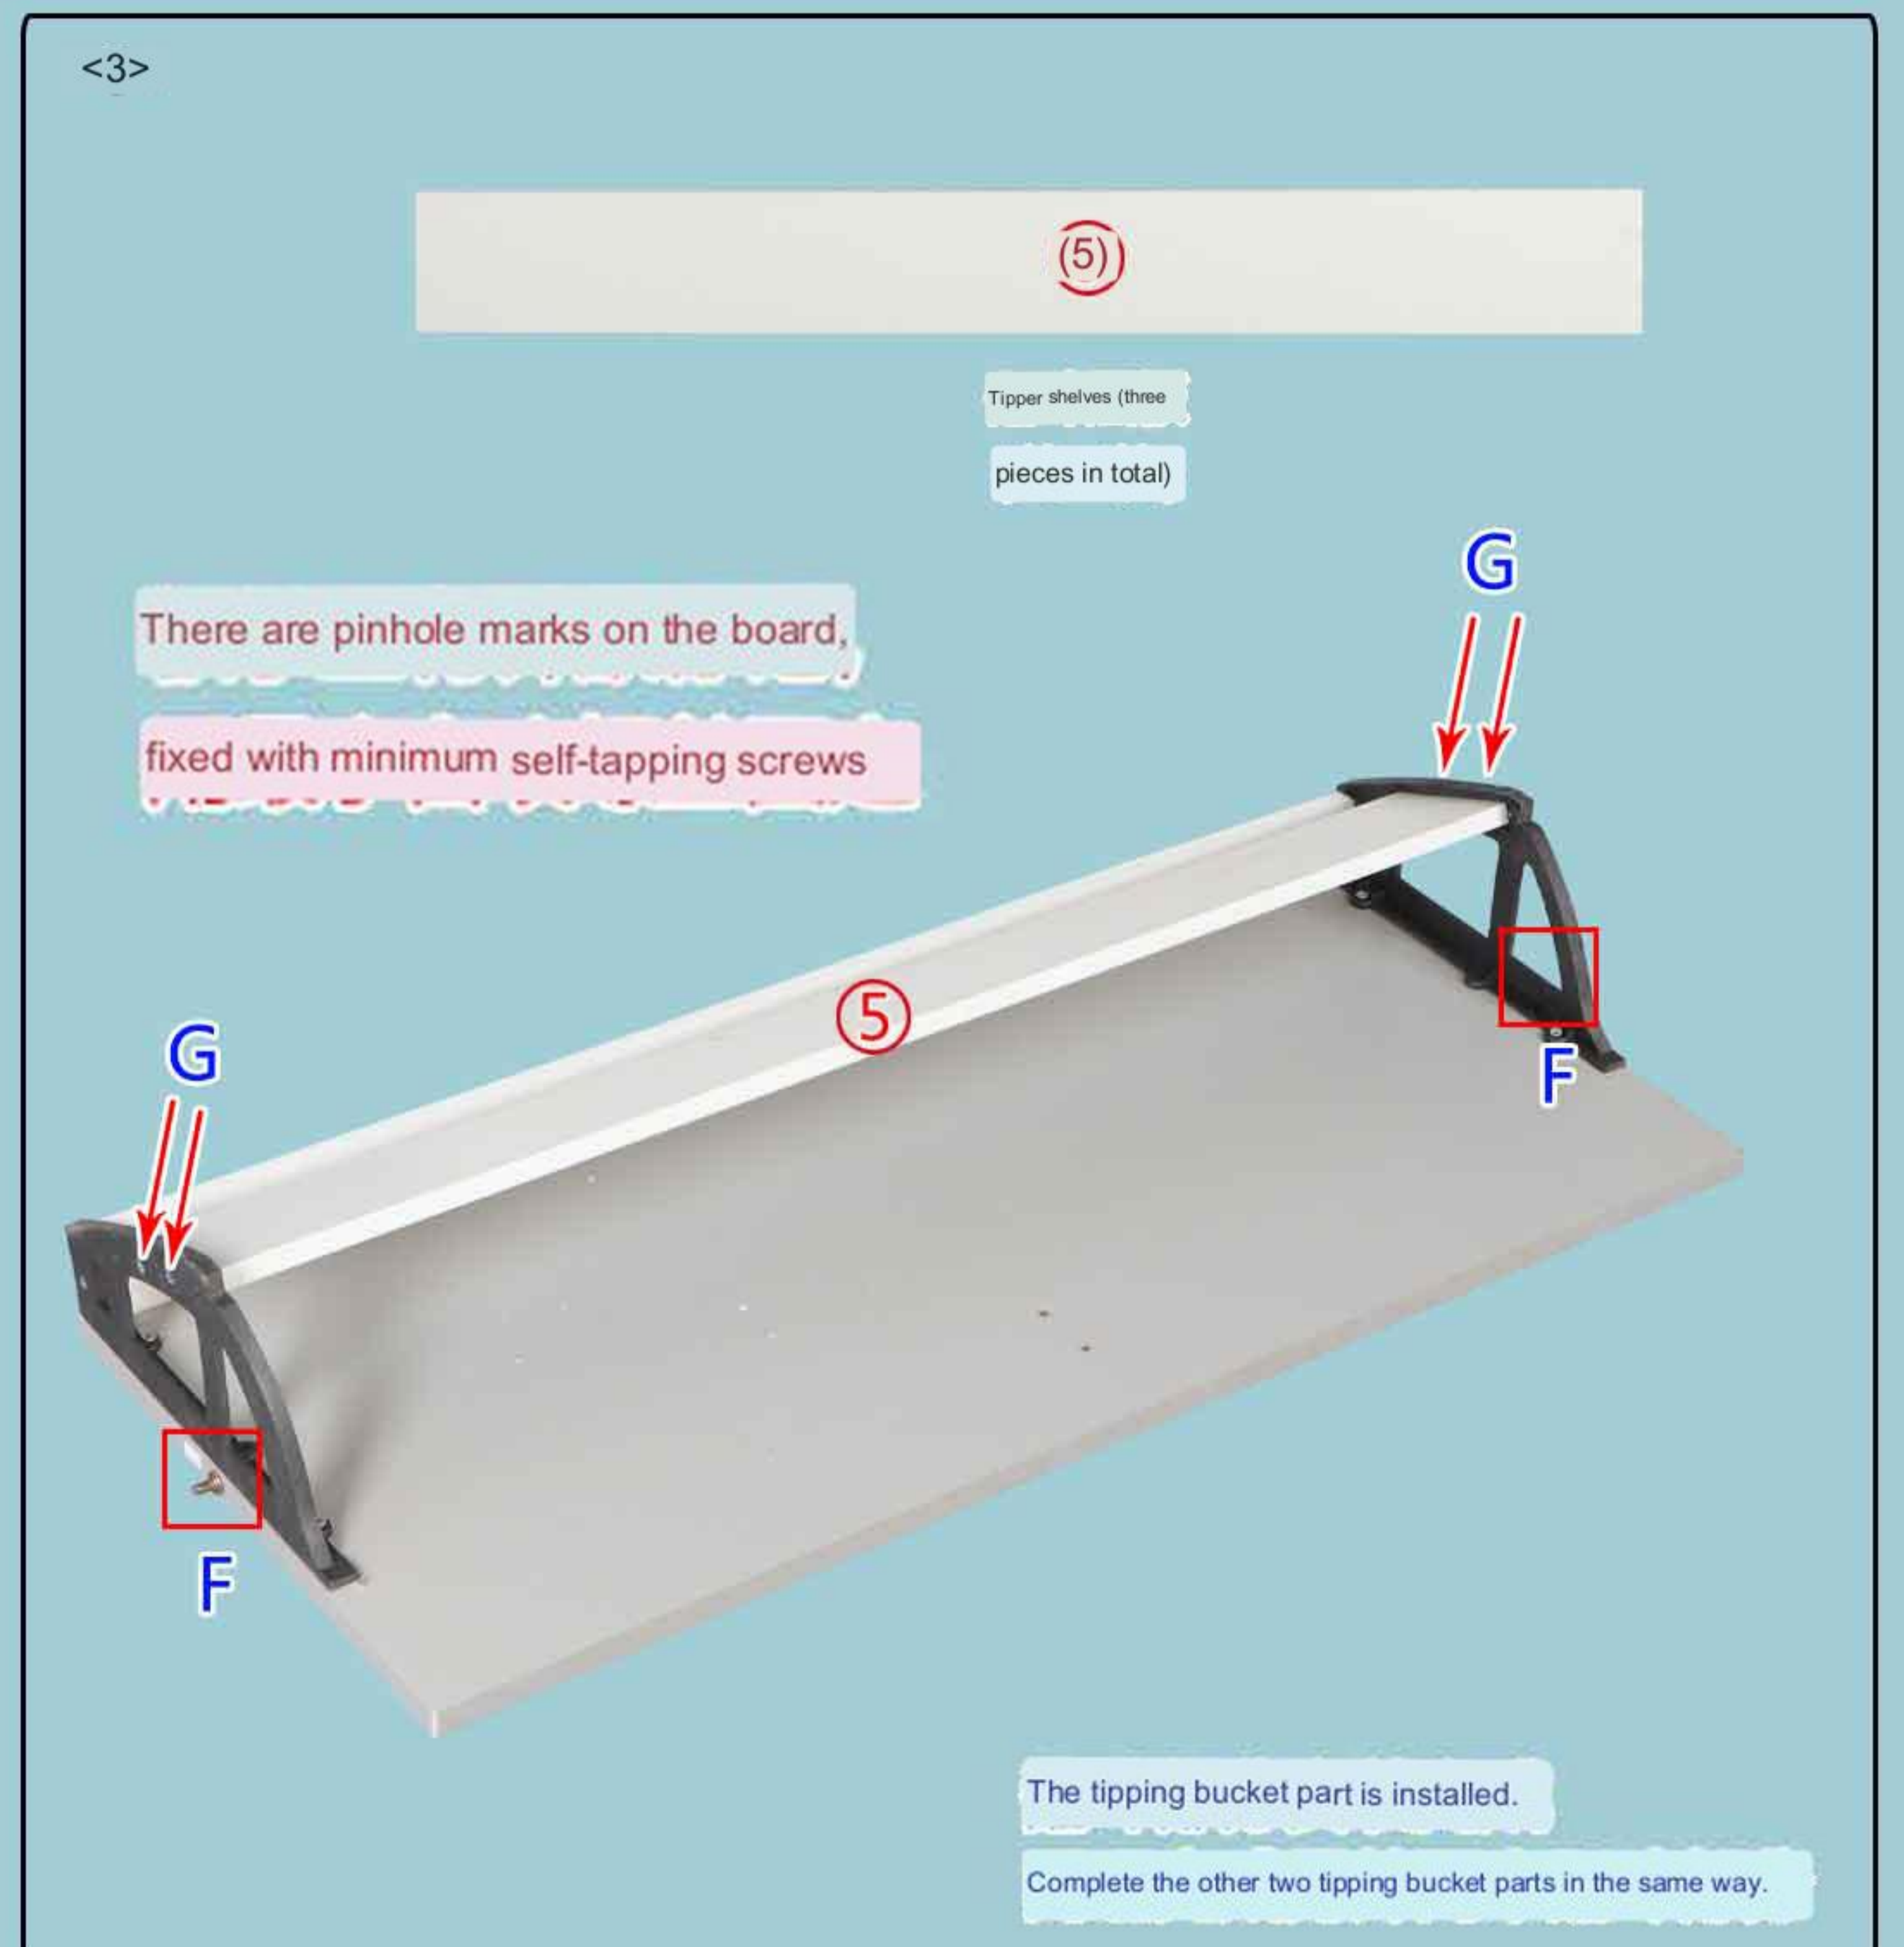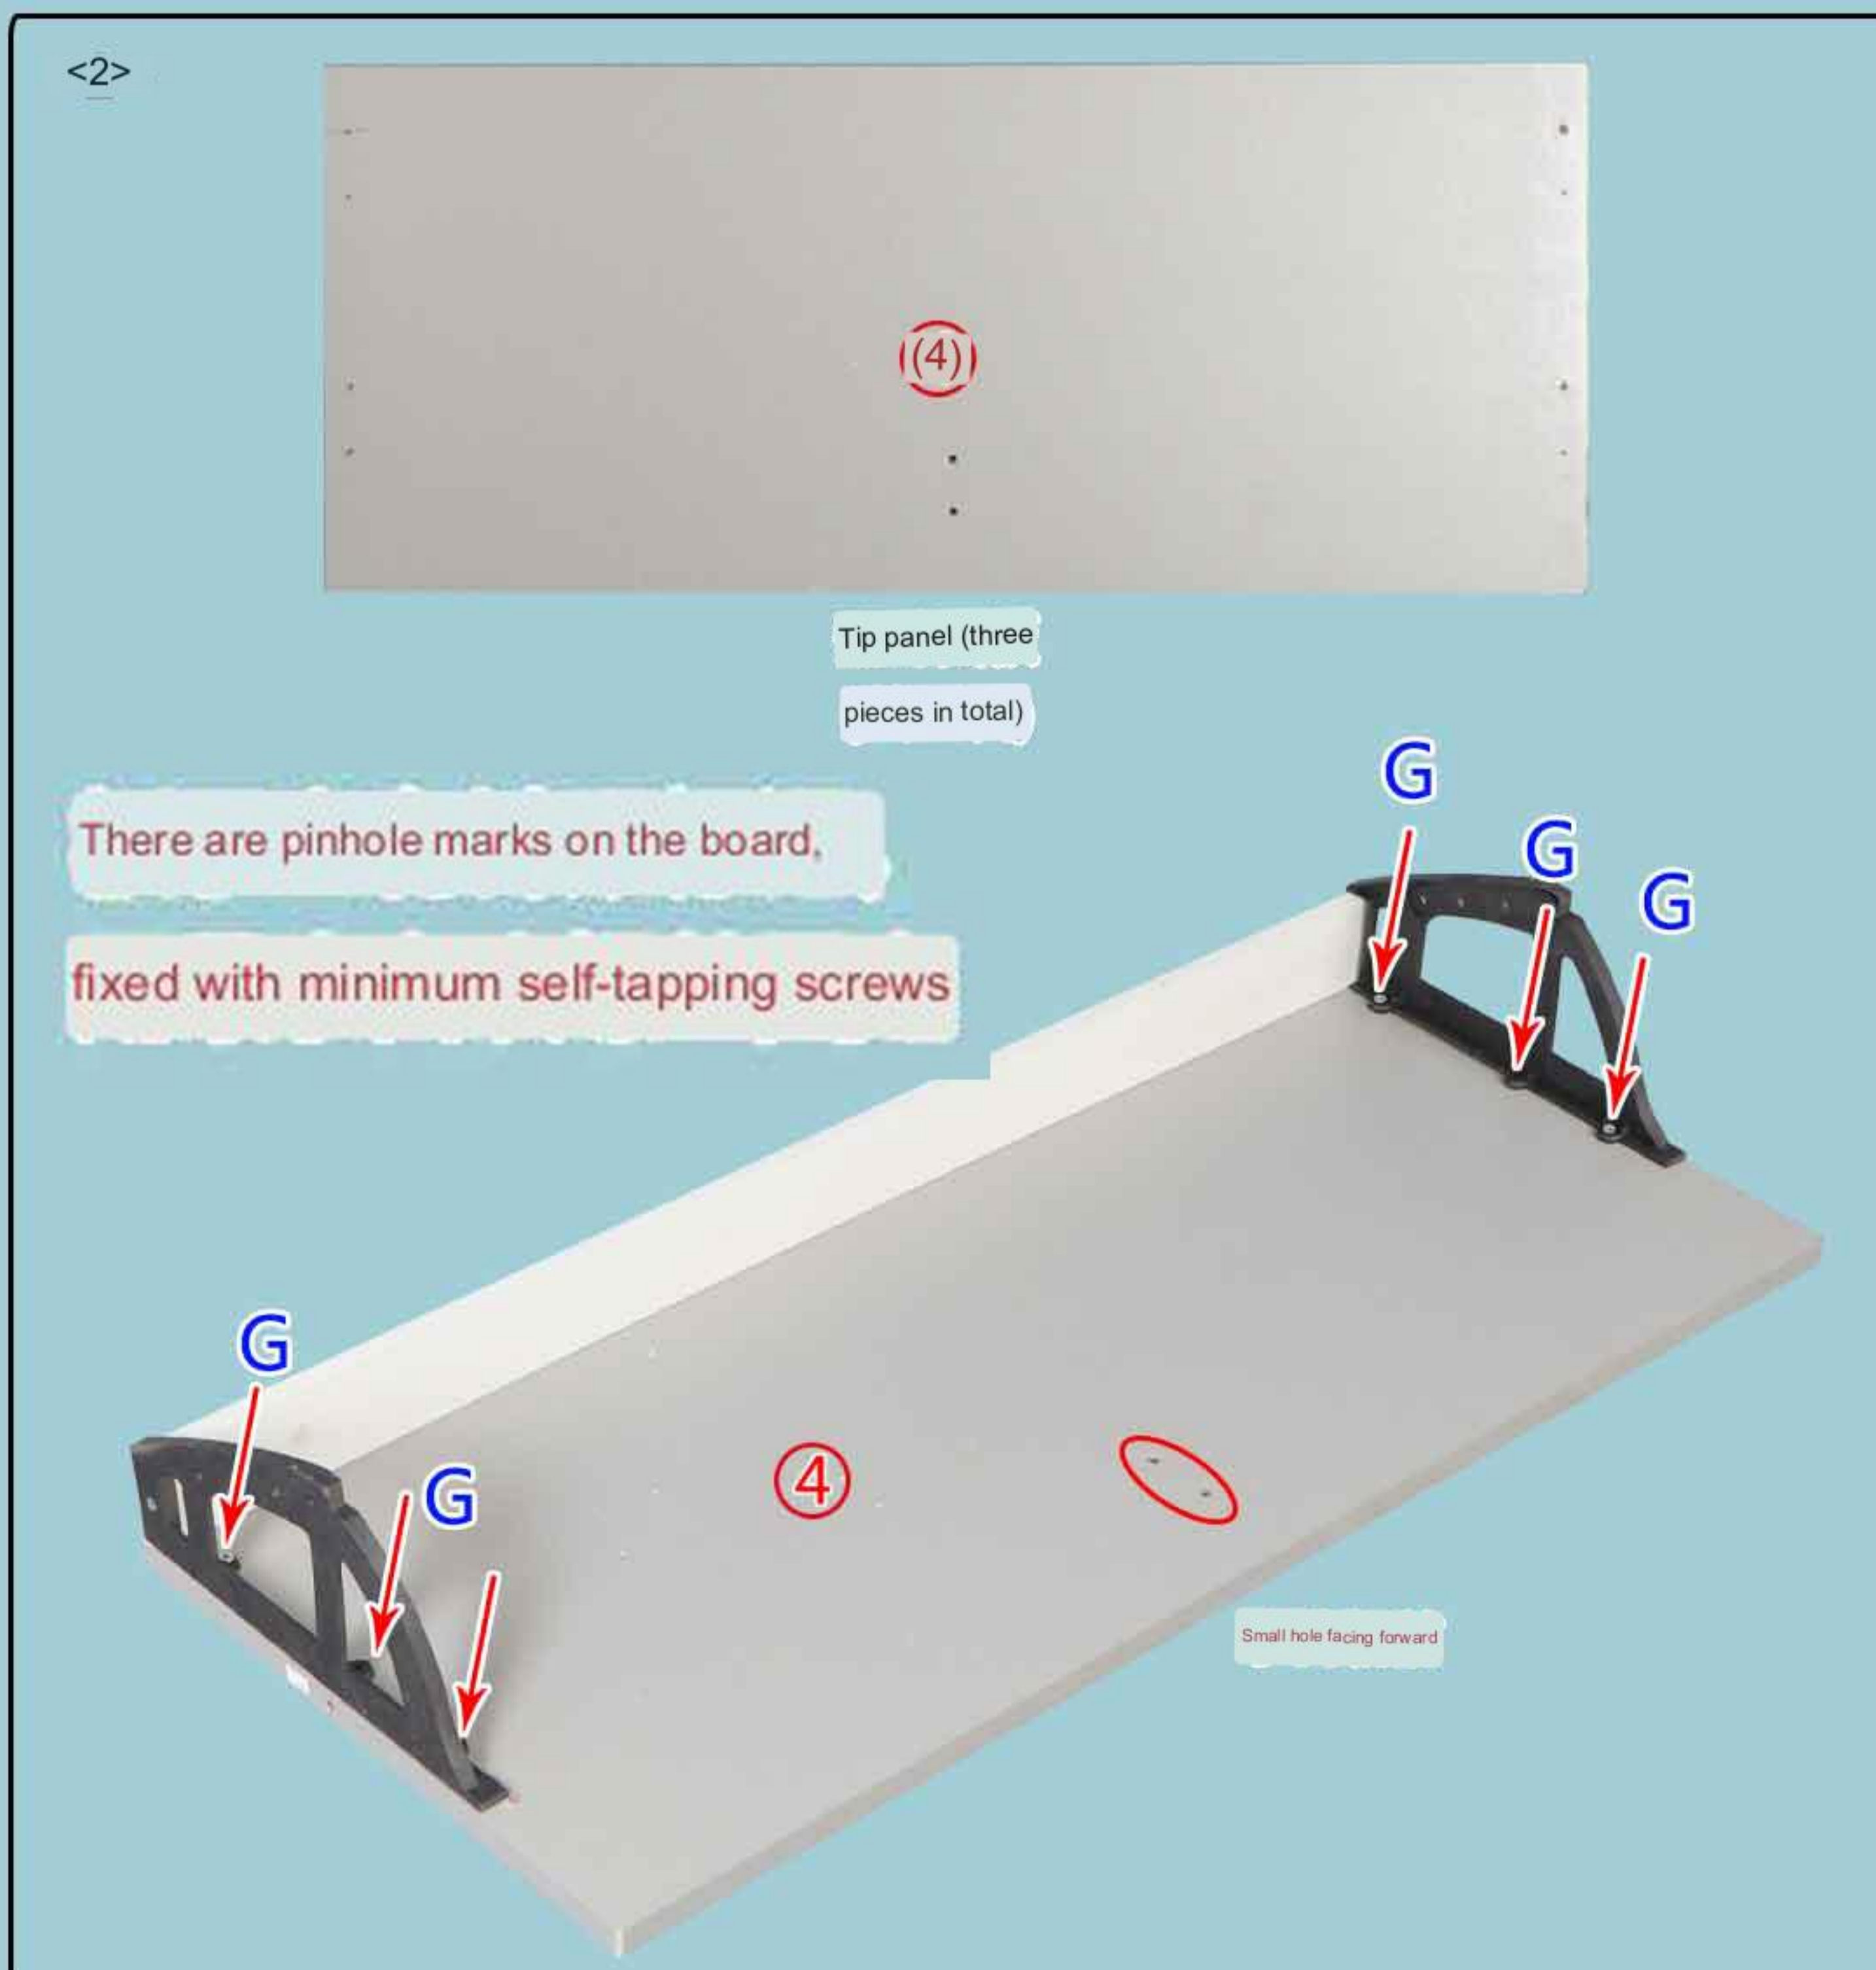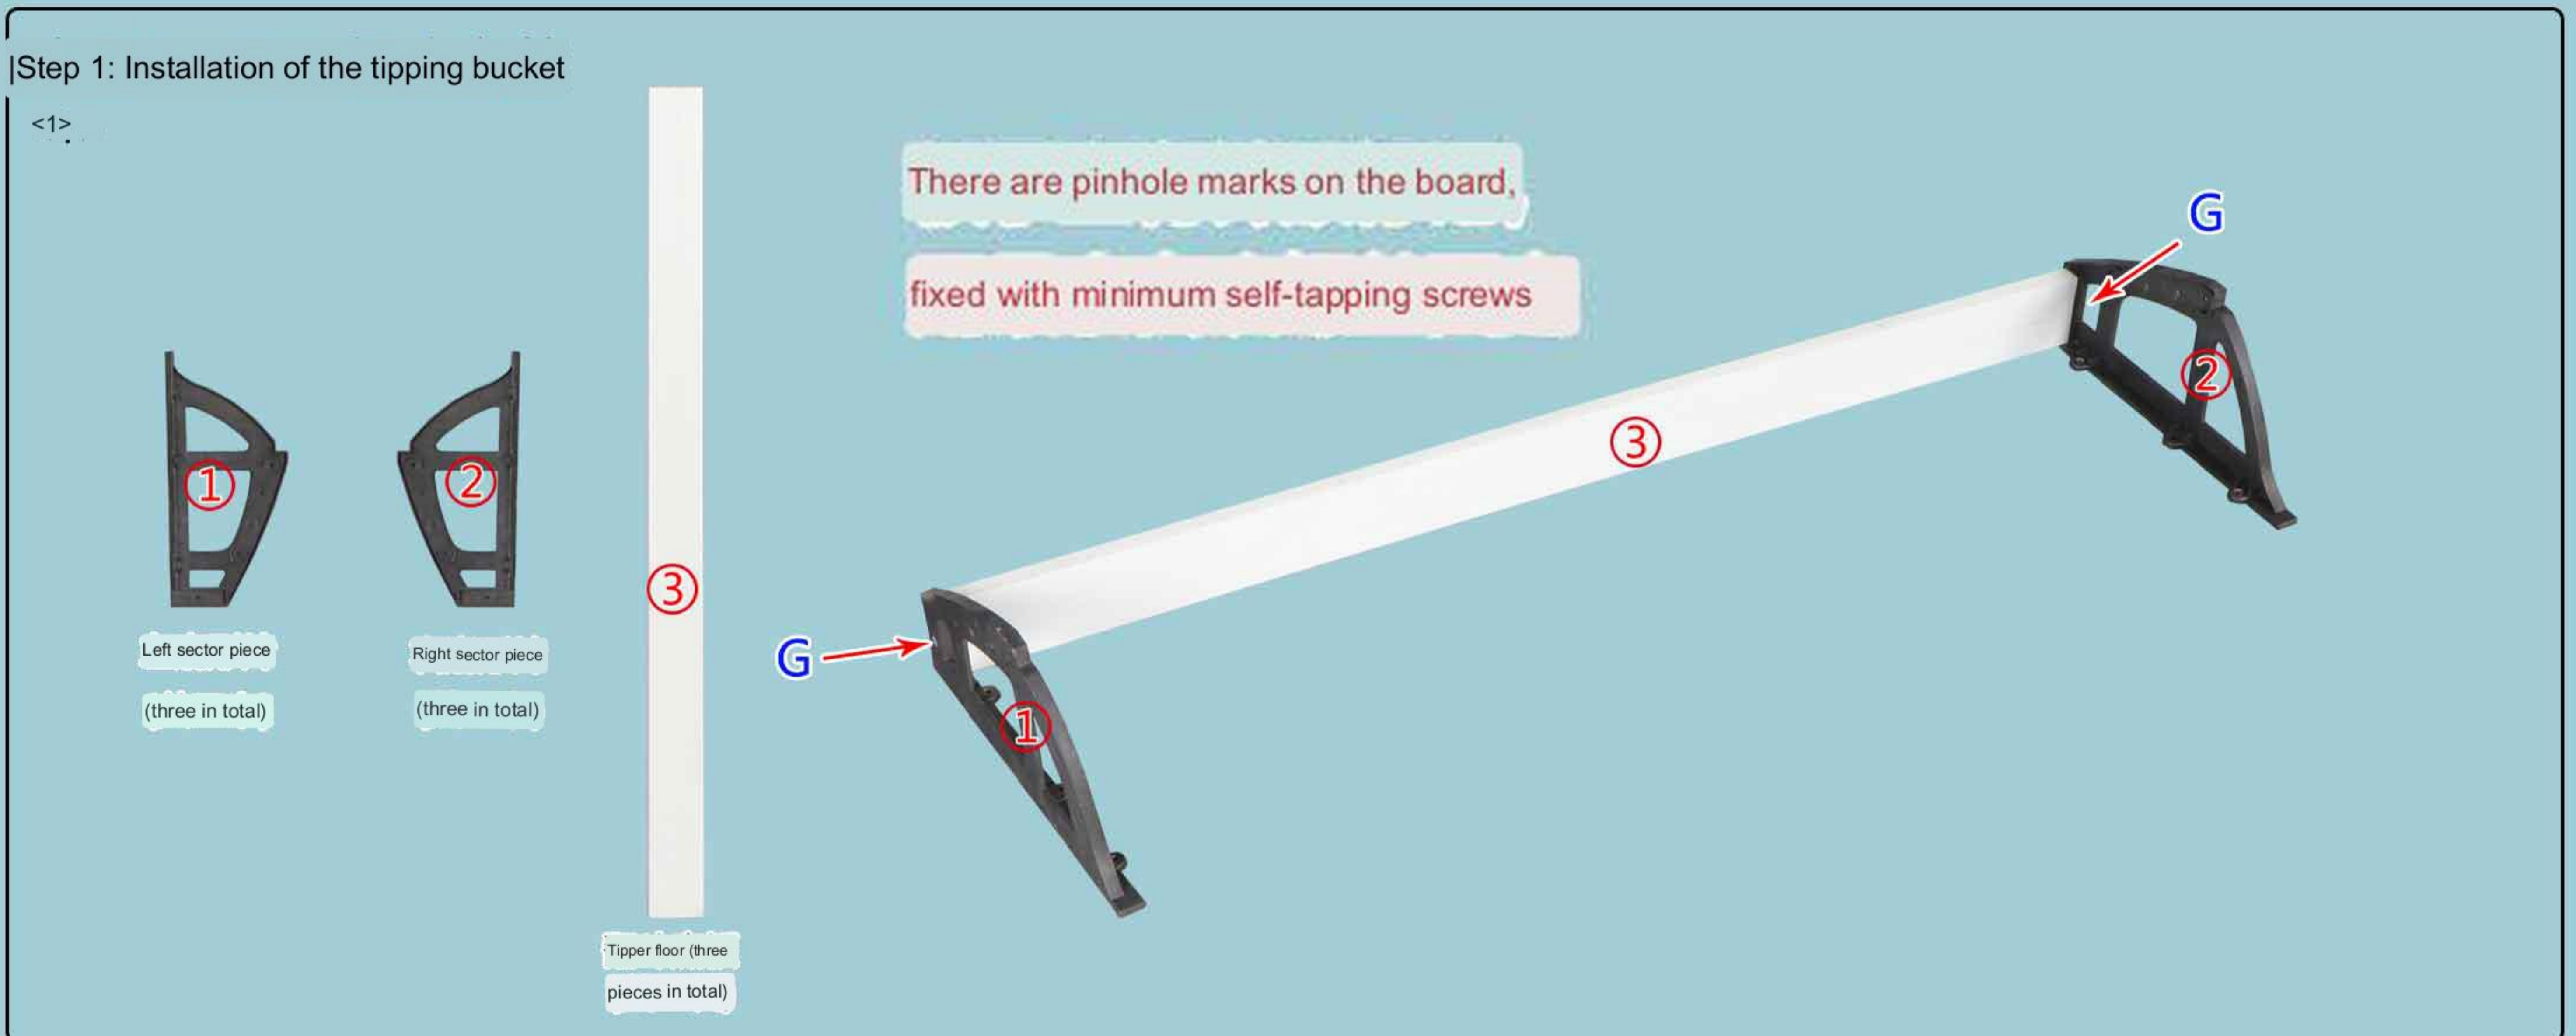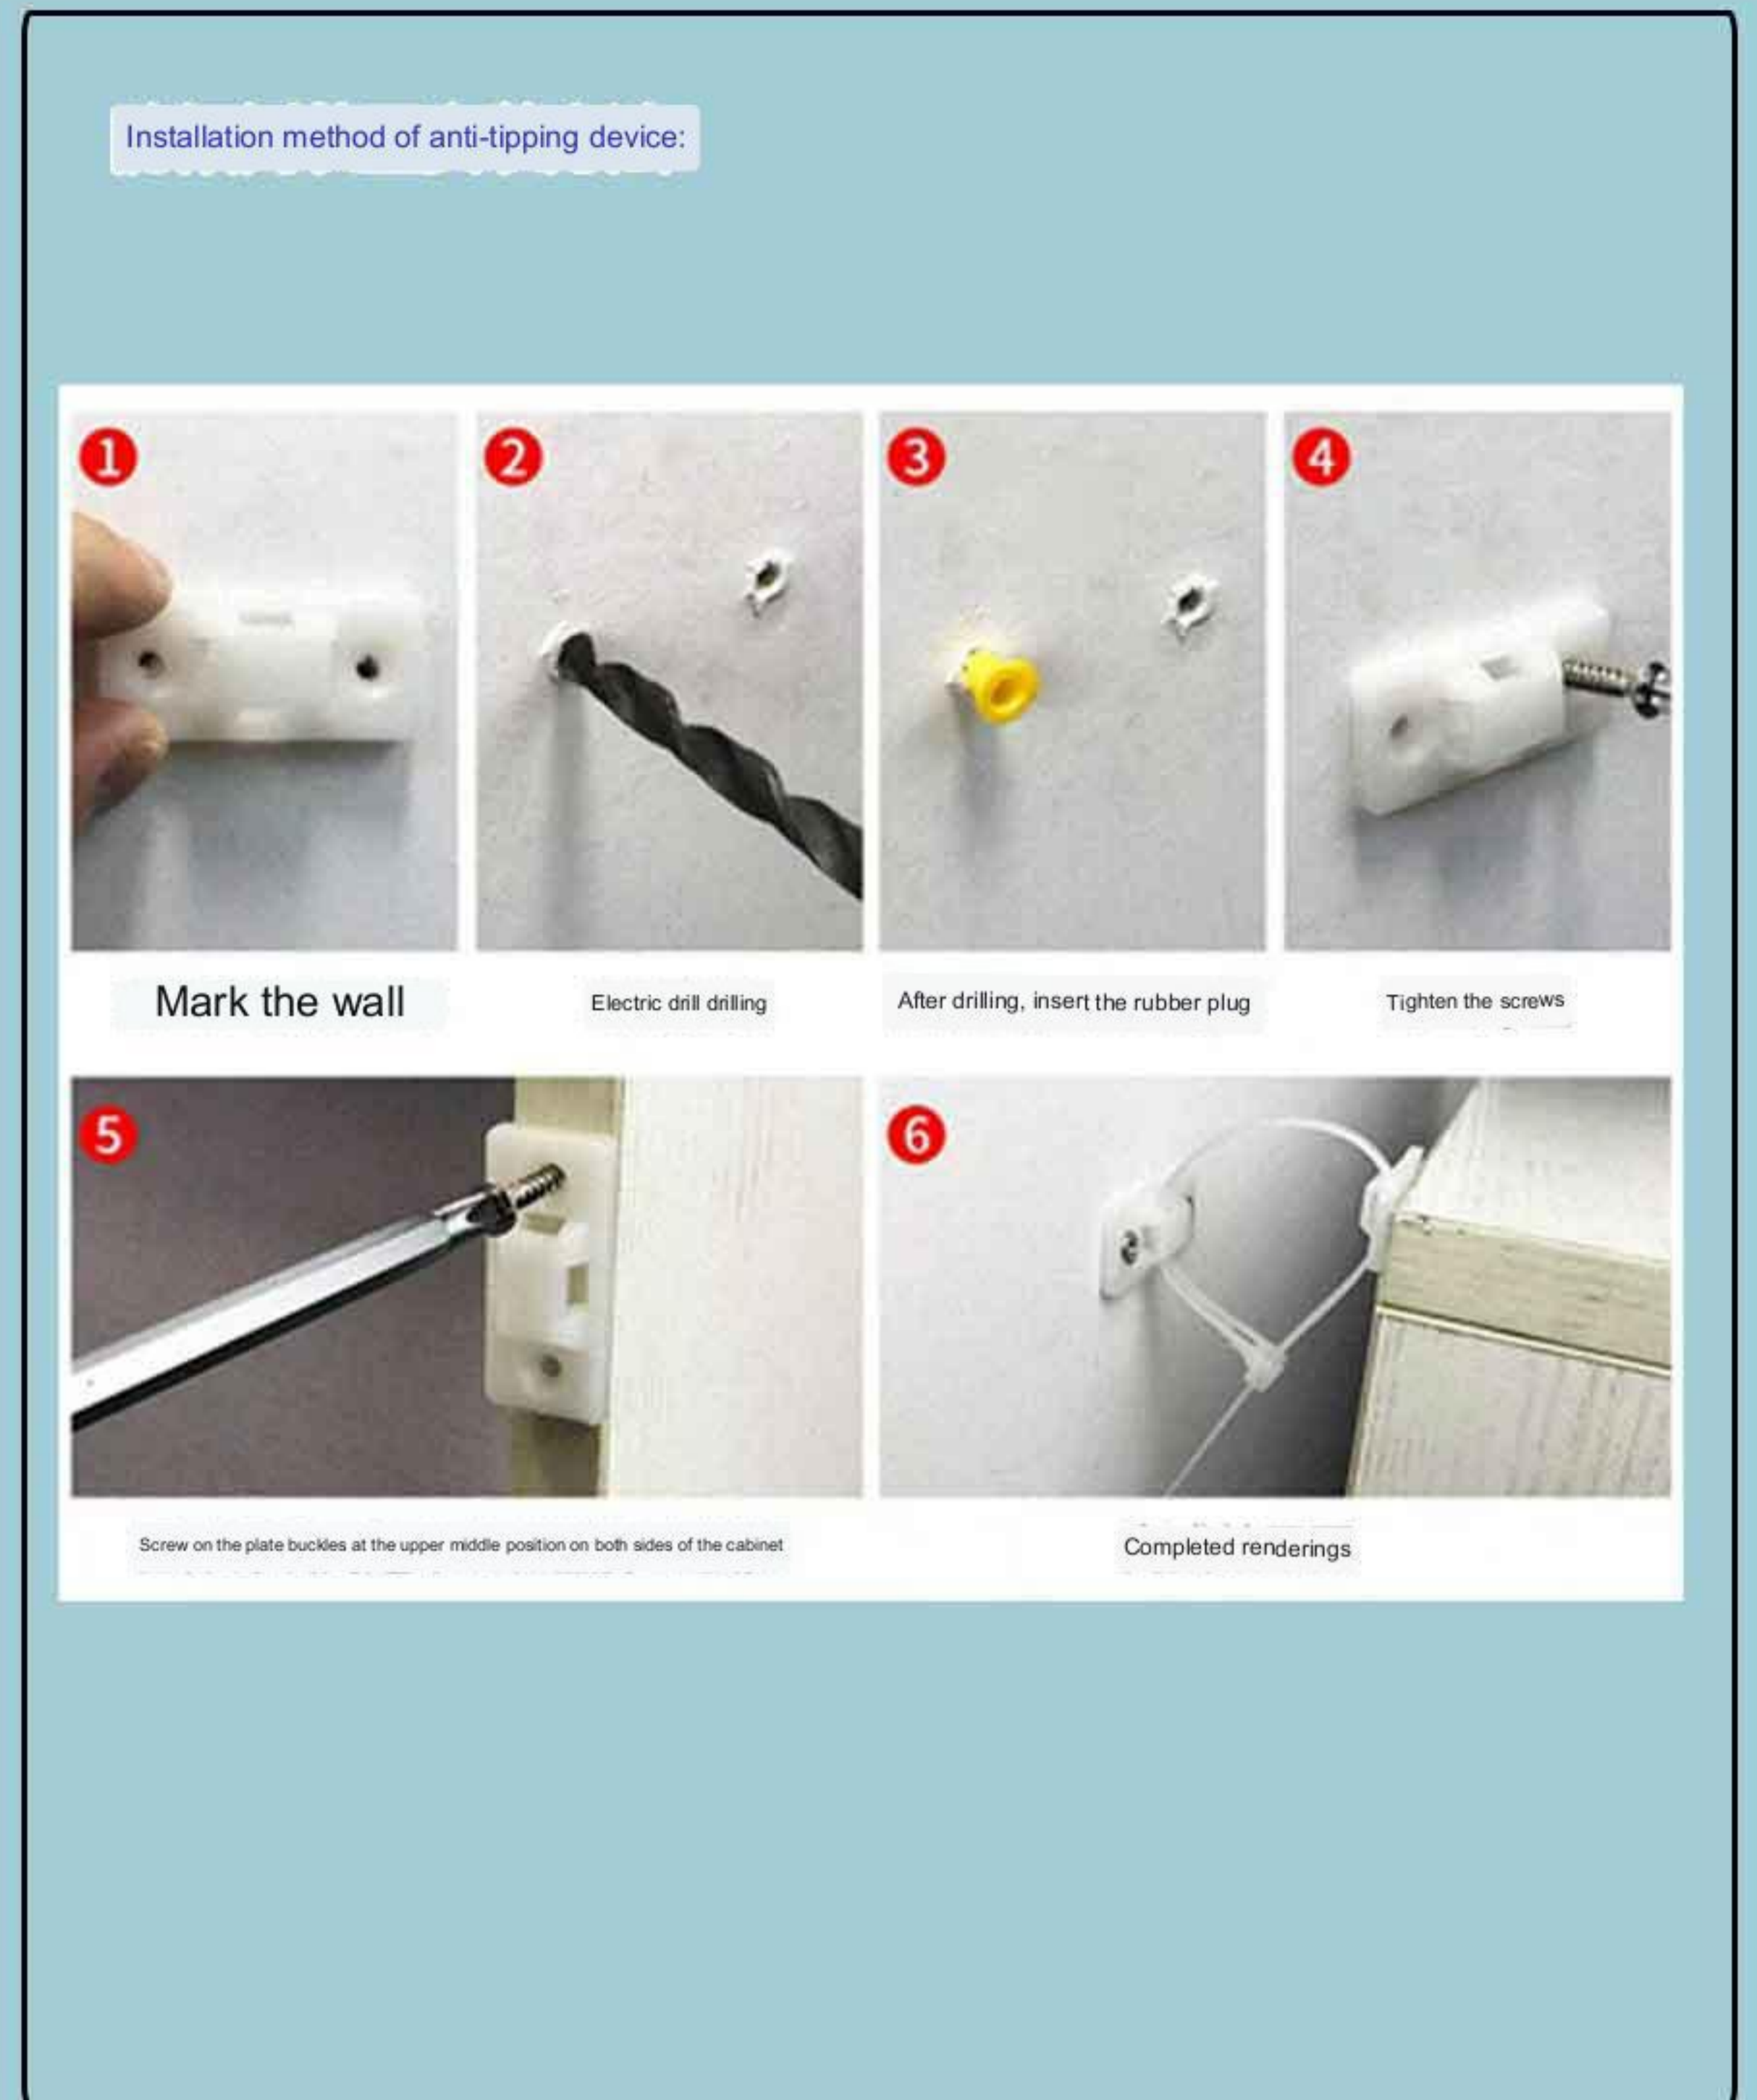


Step 2: Whole part installation

<1>

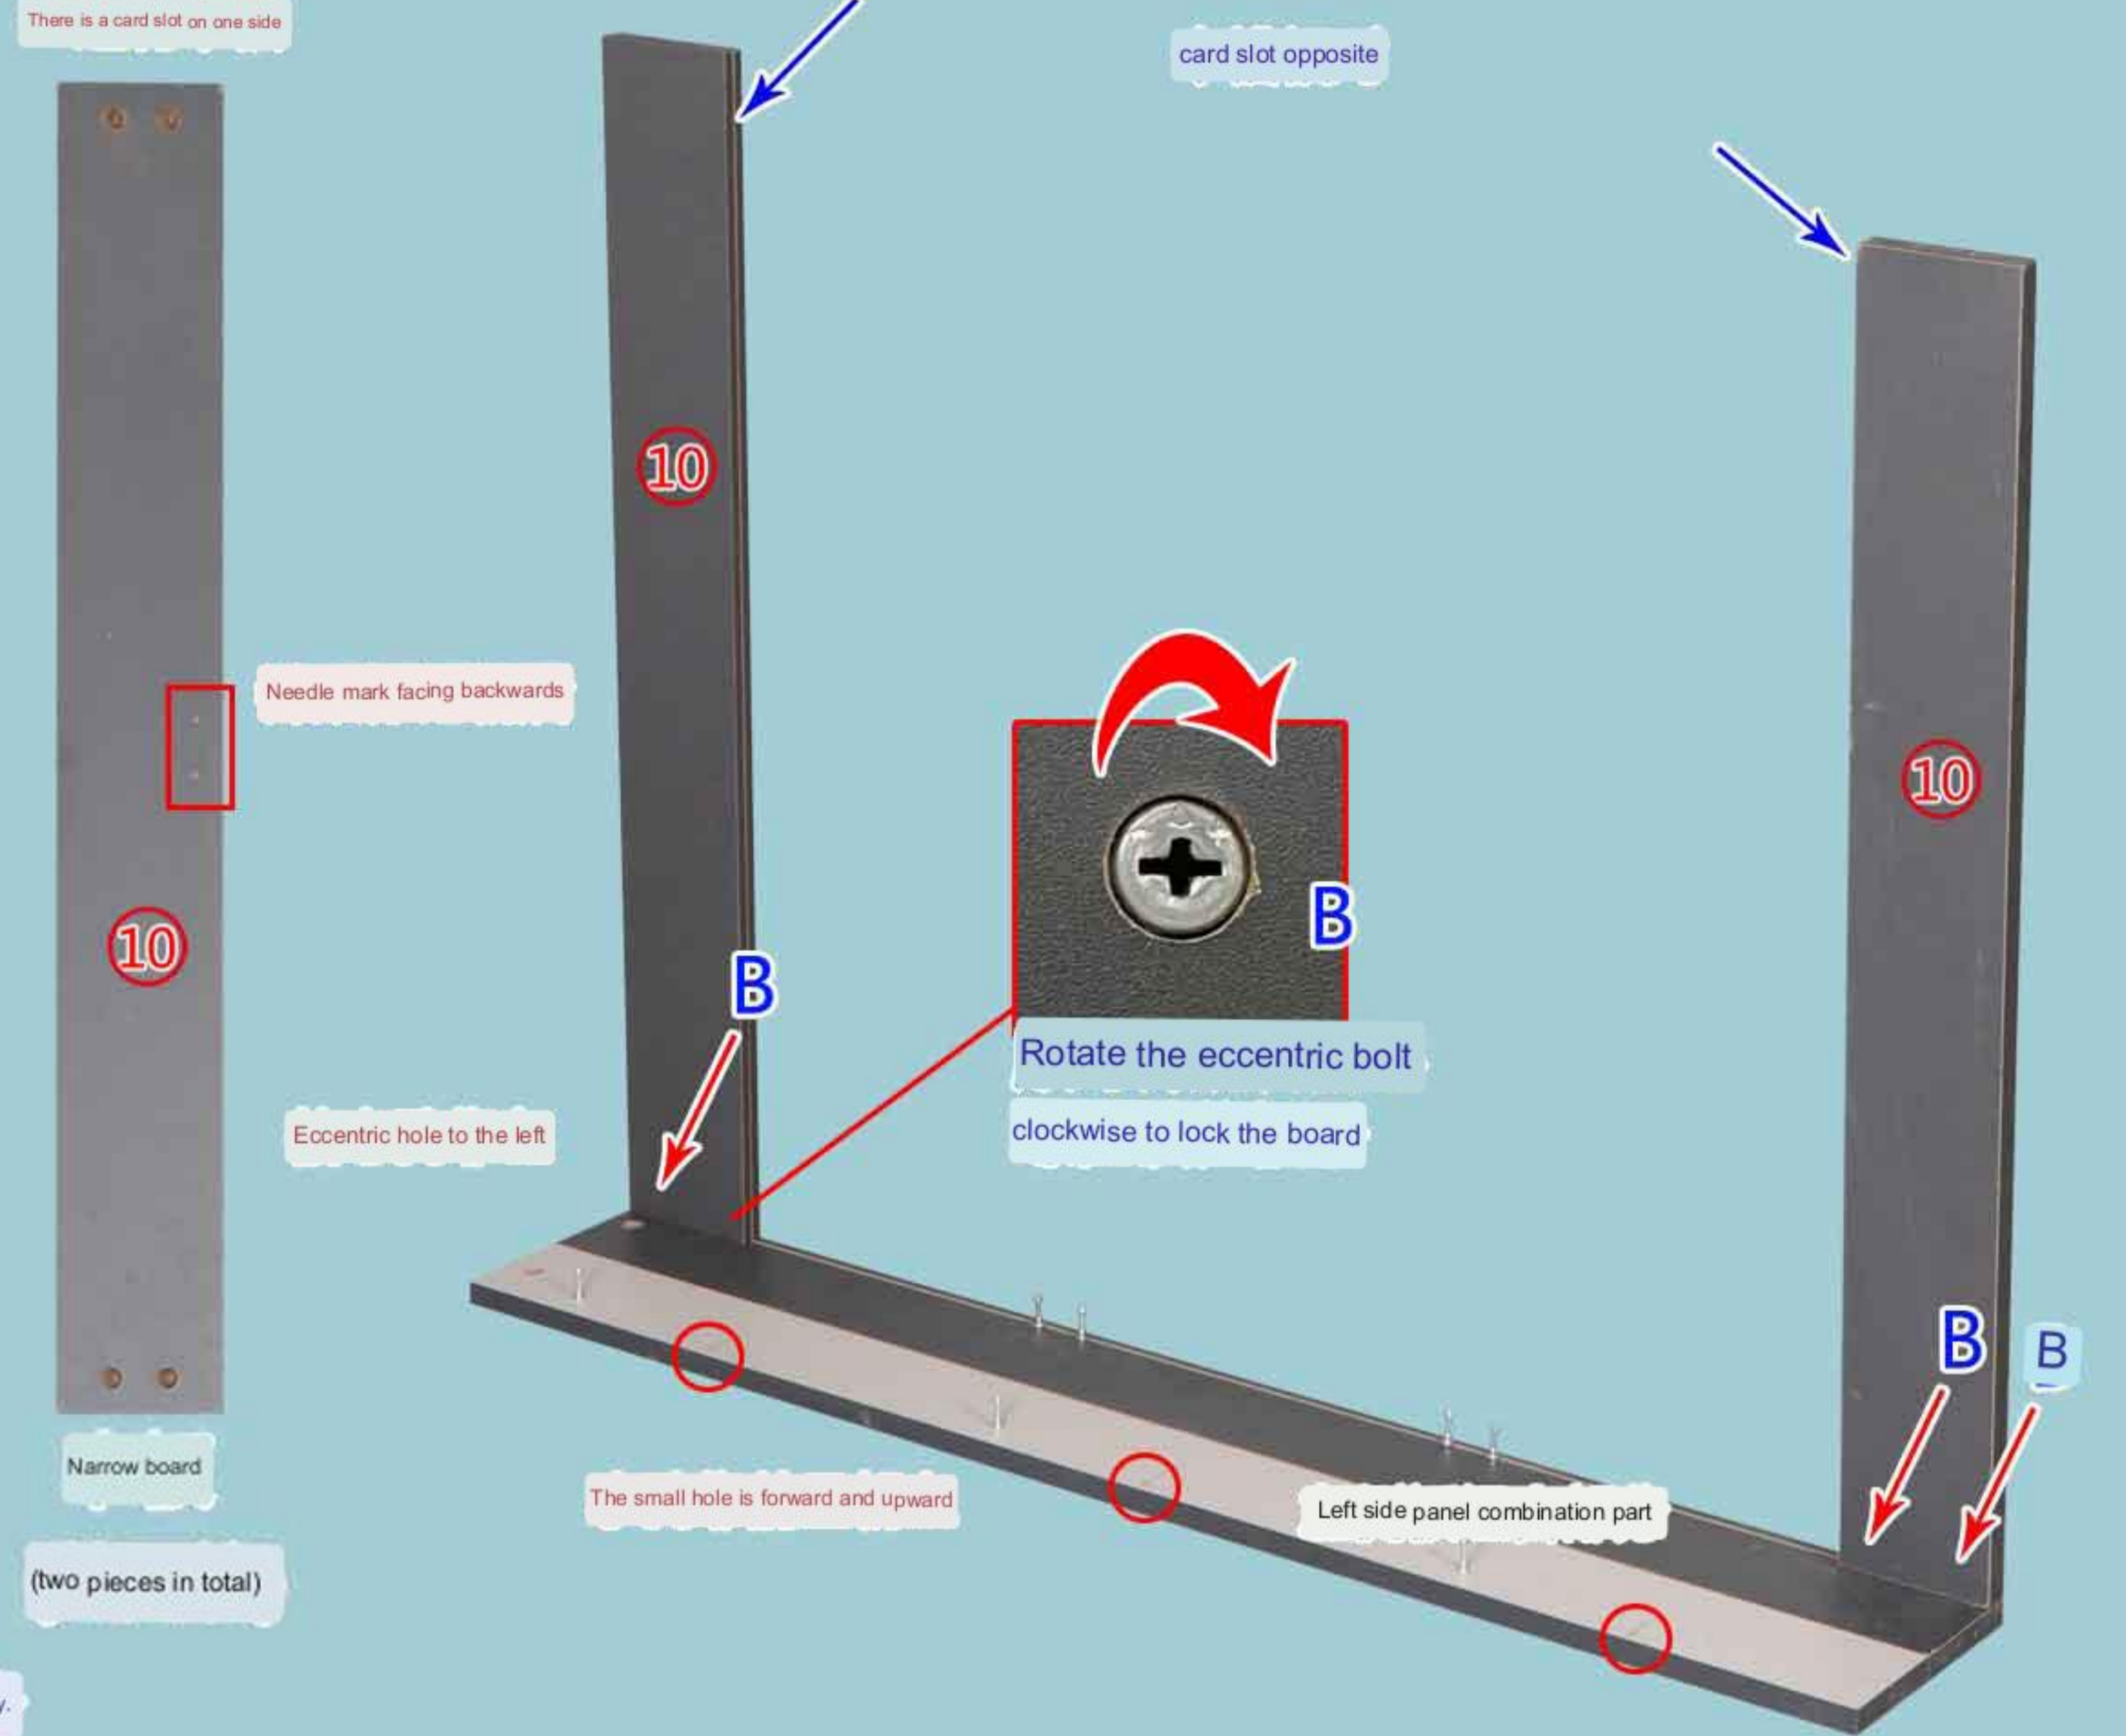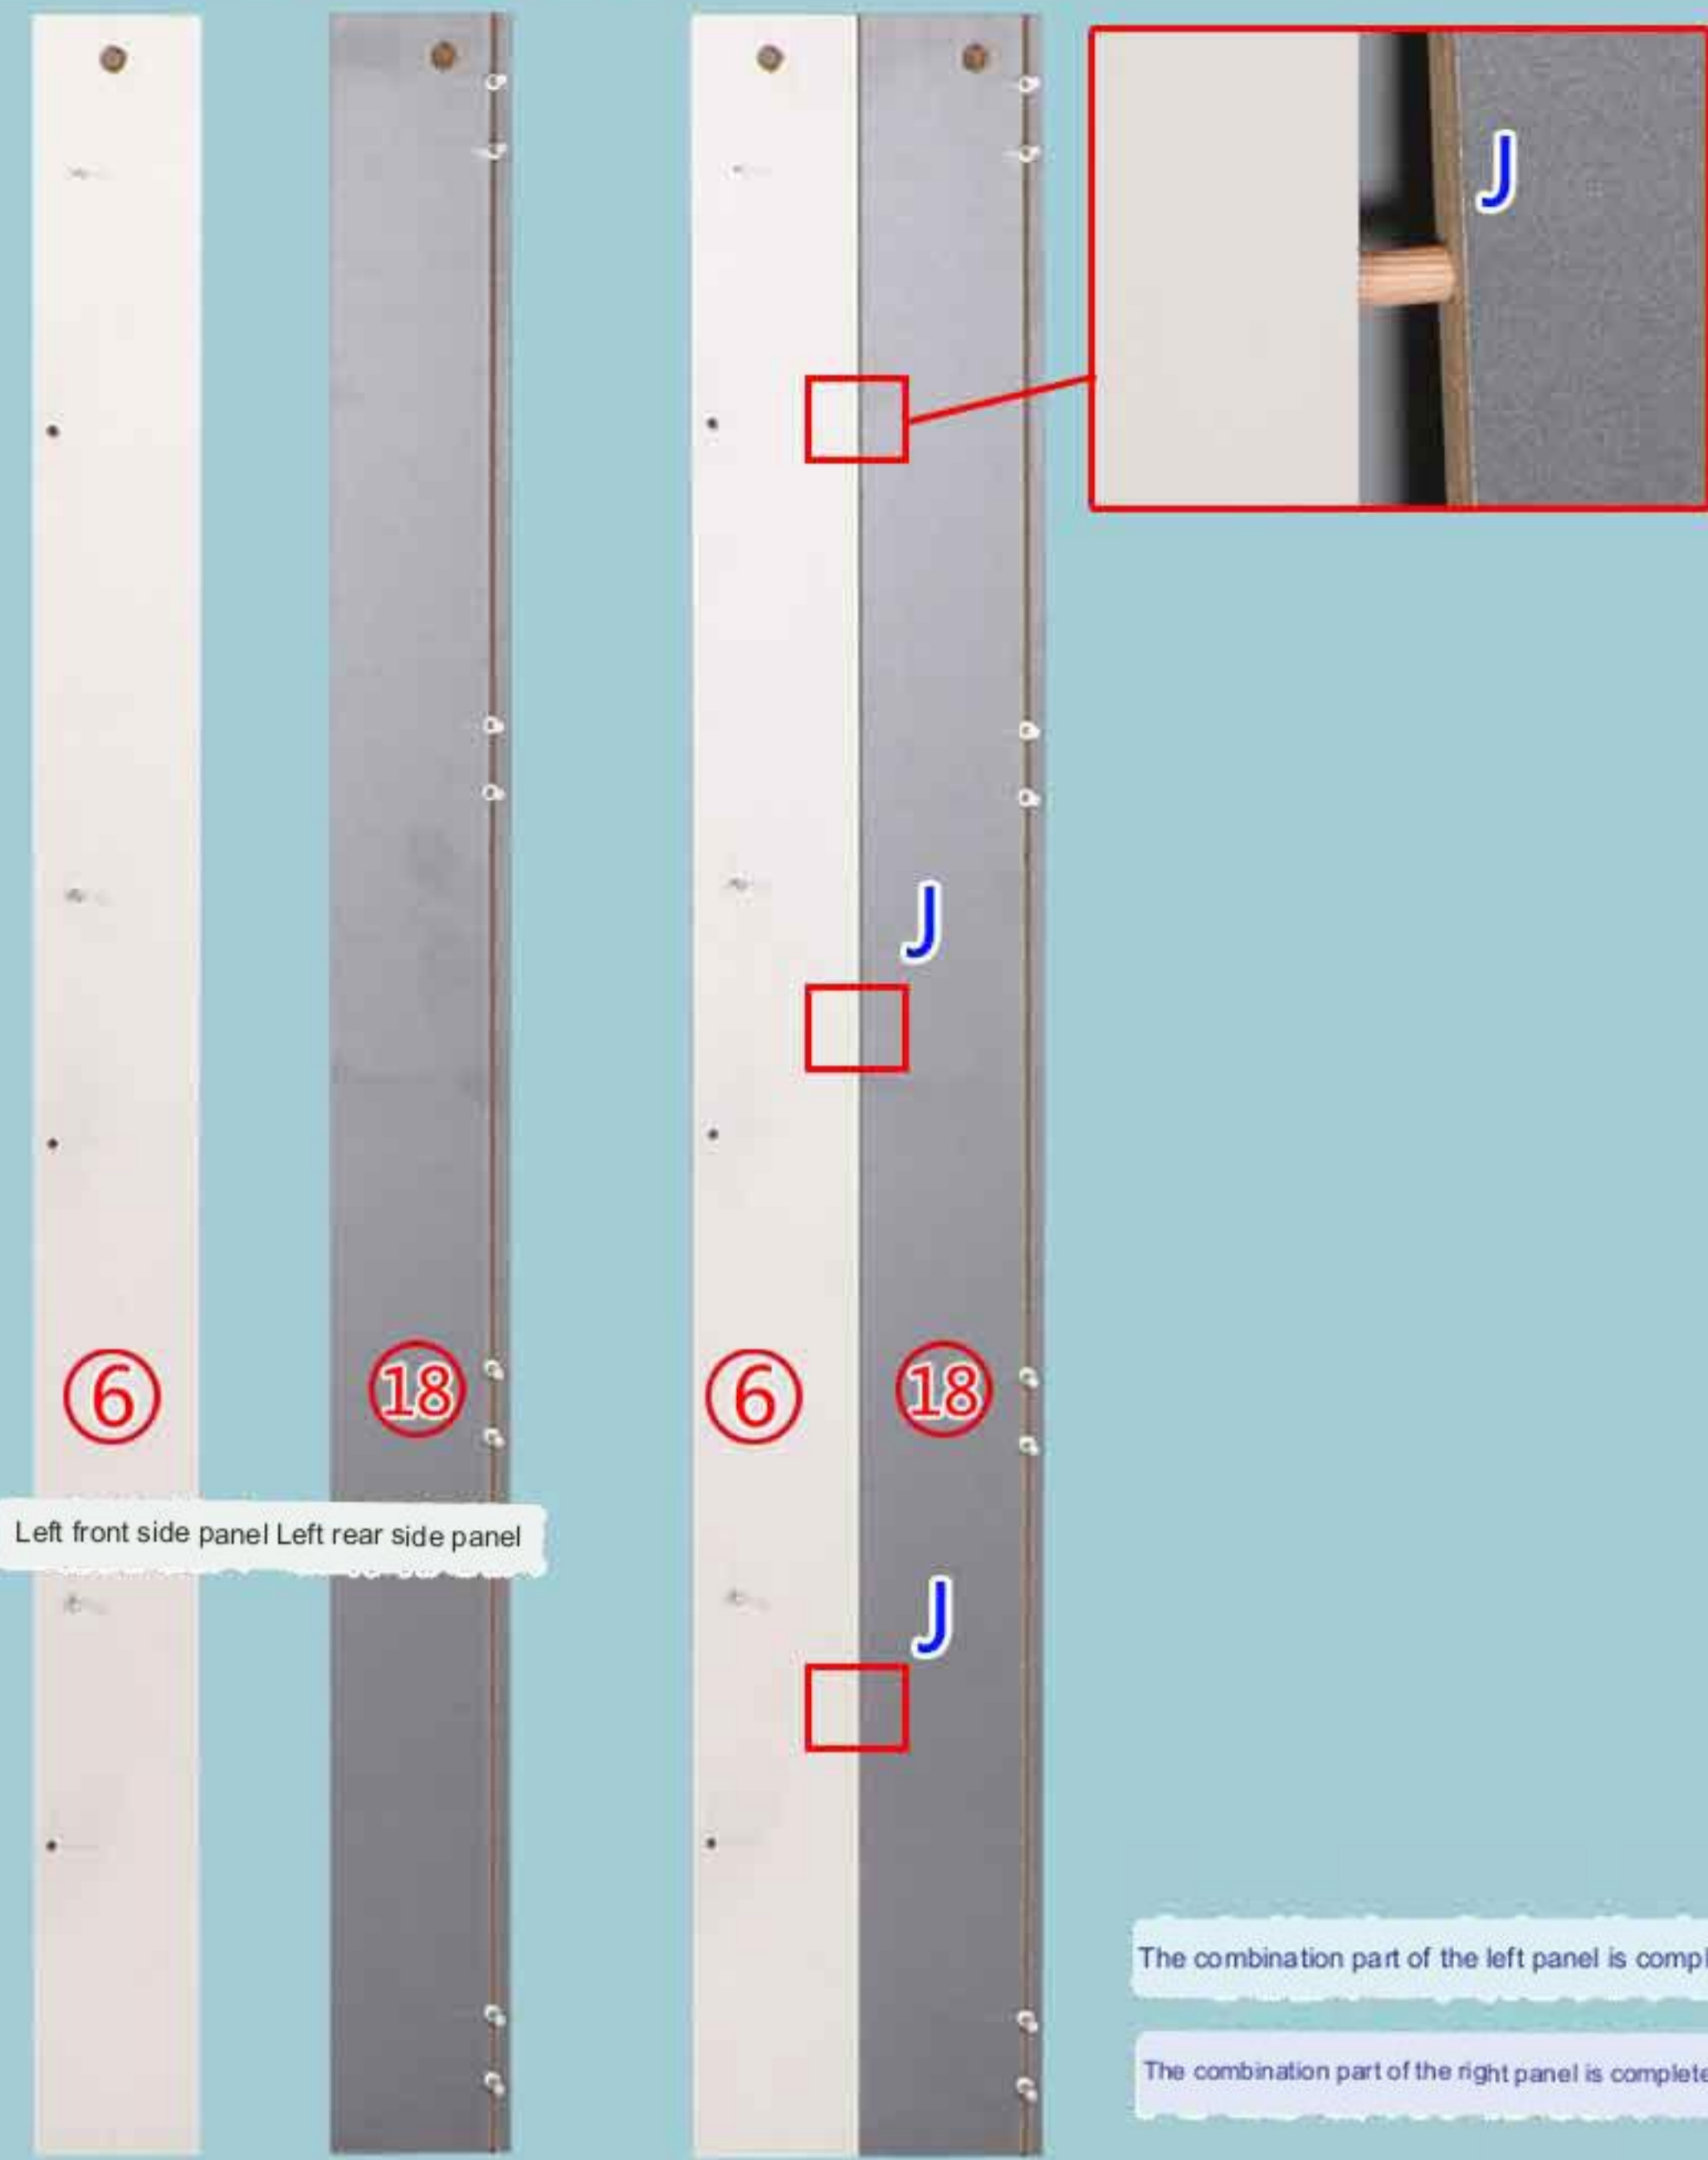


<2>

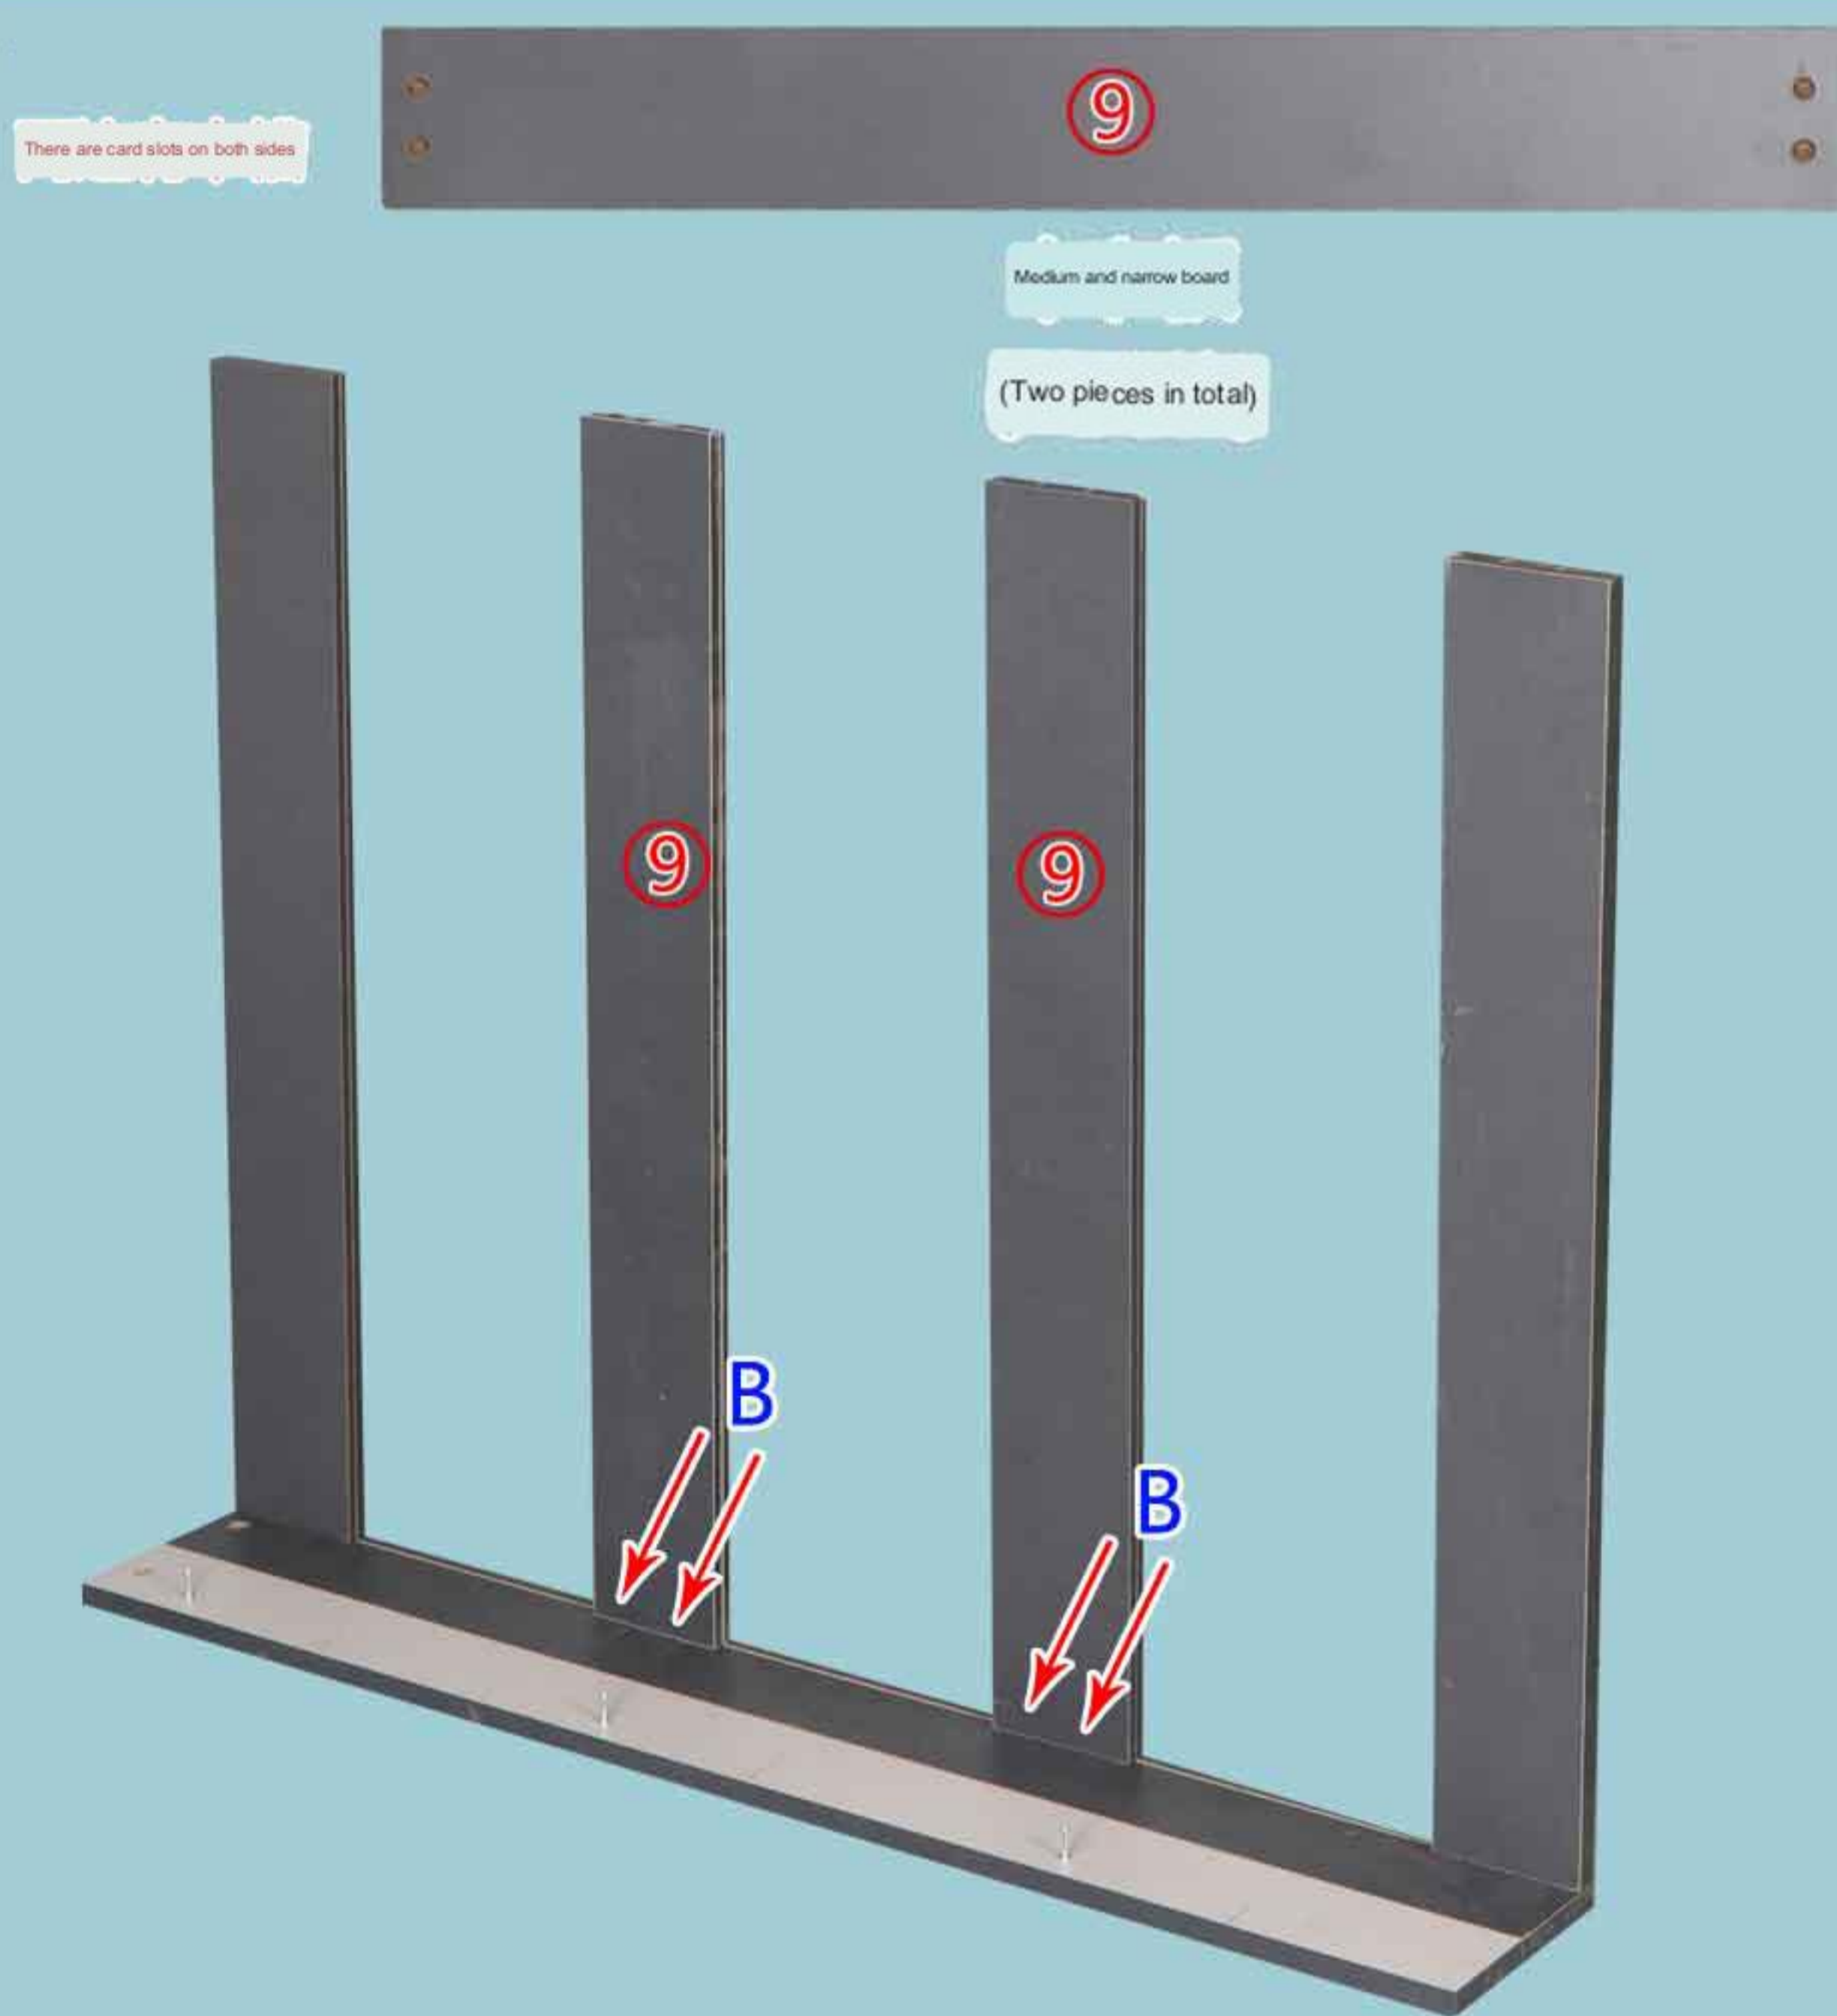

<3>



<4>

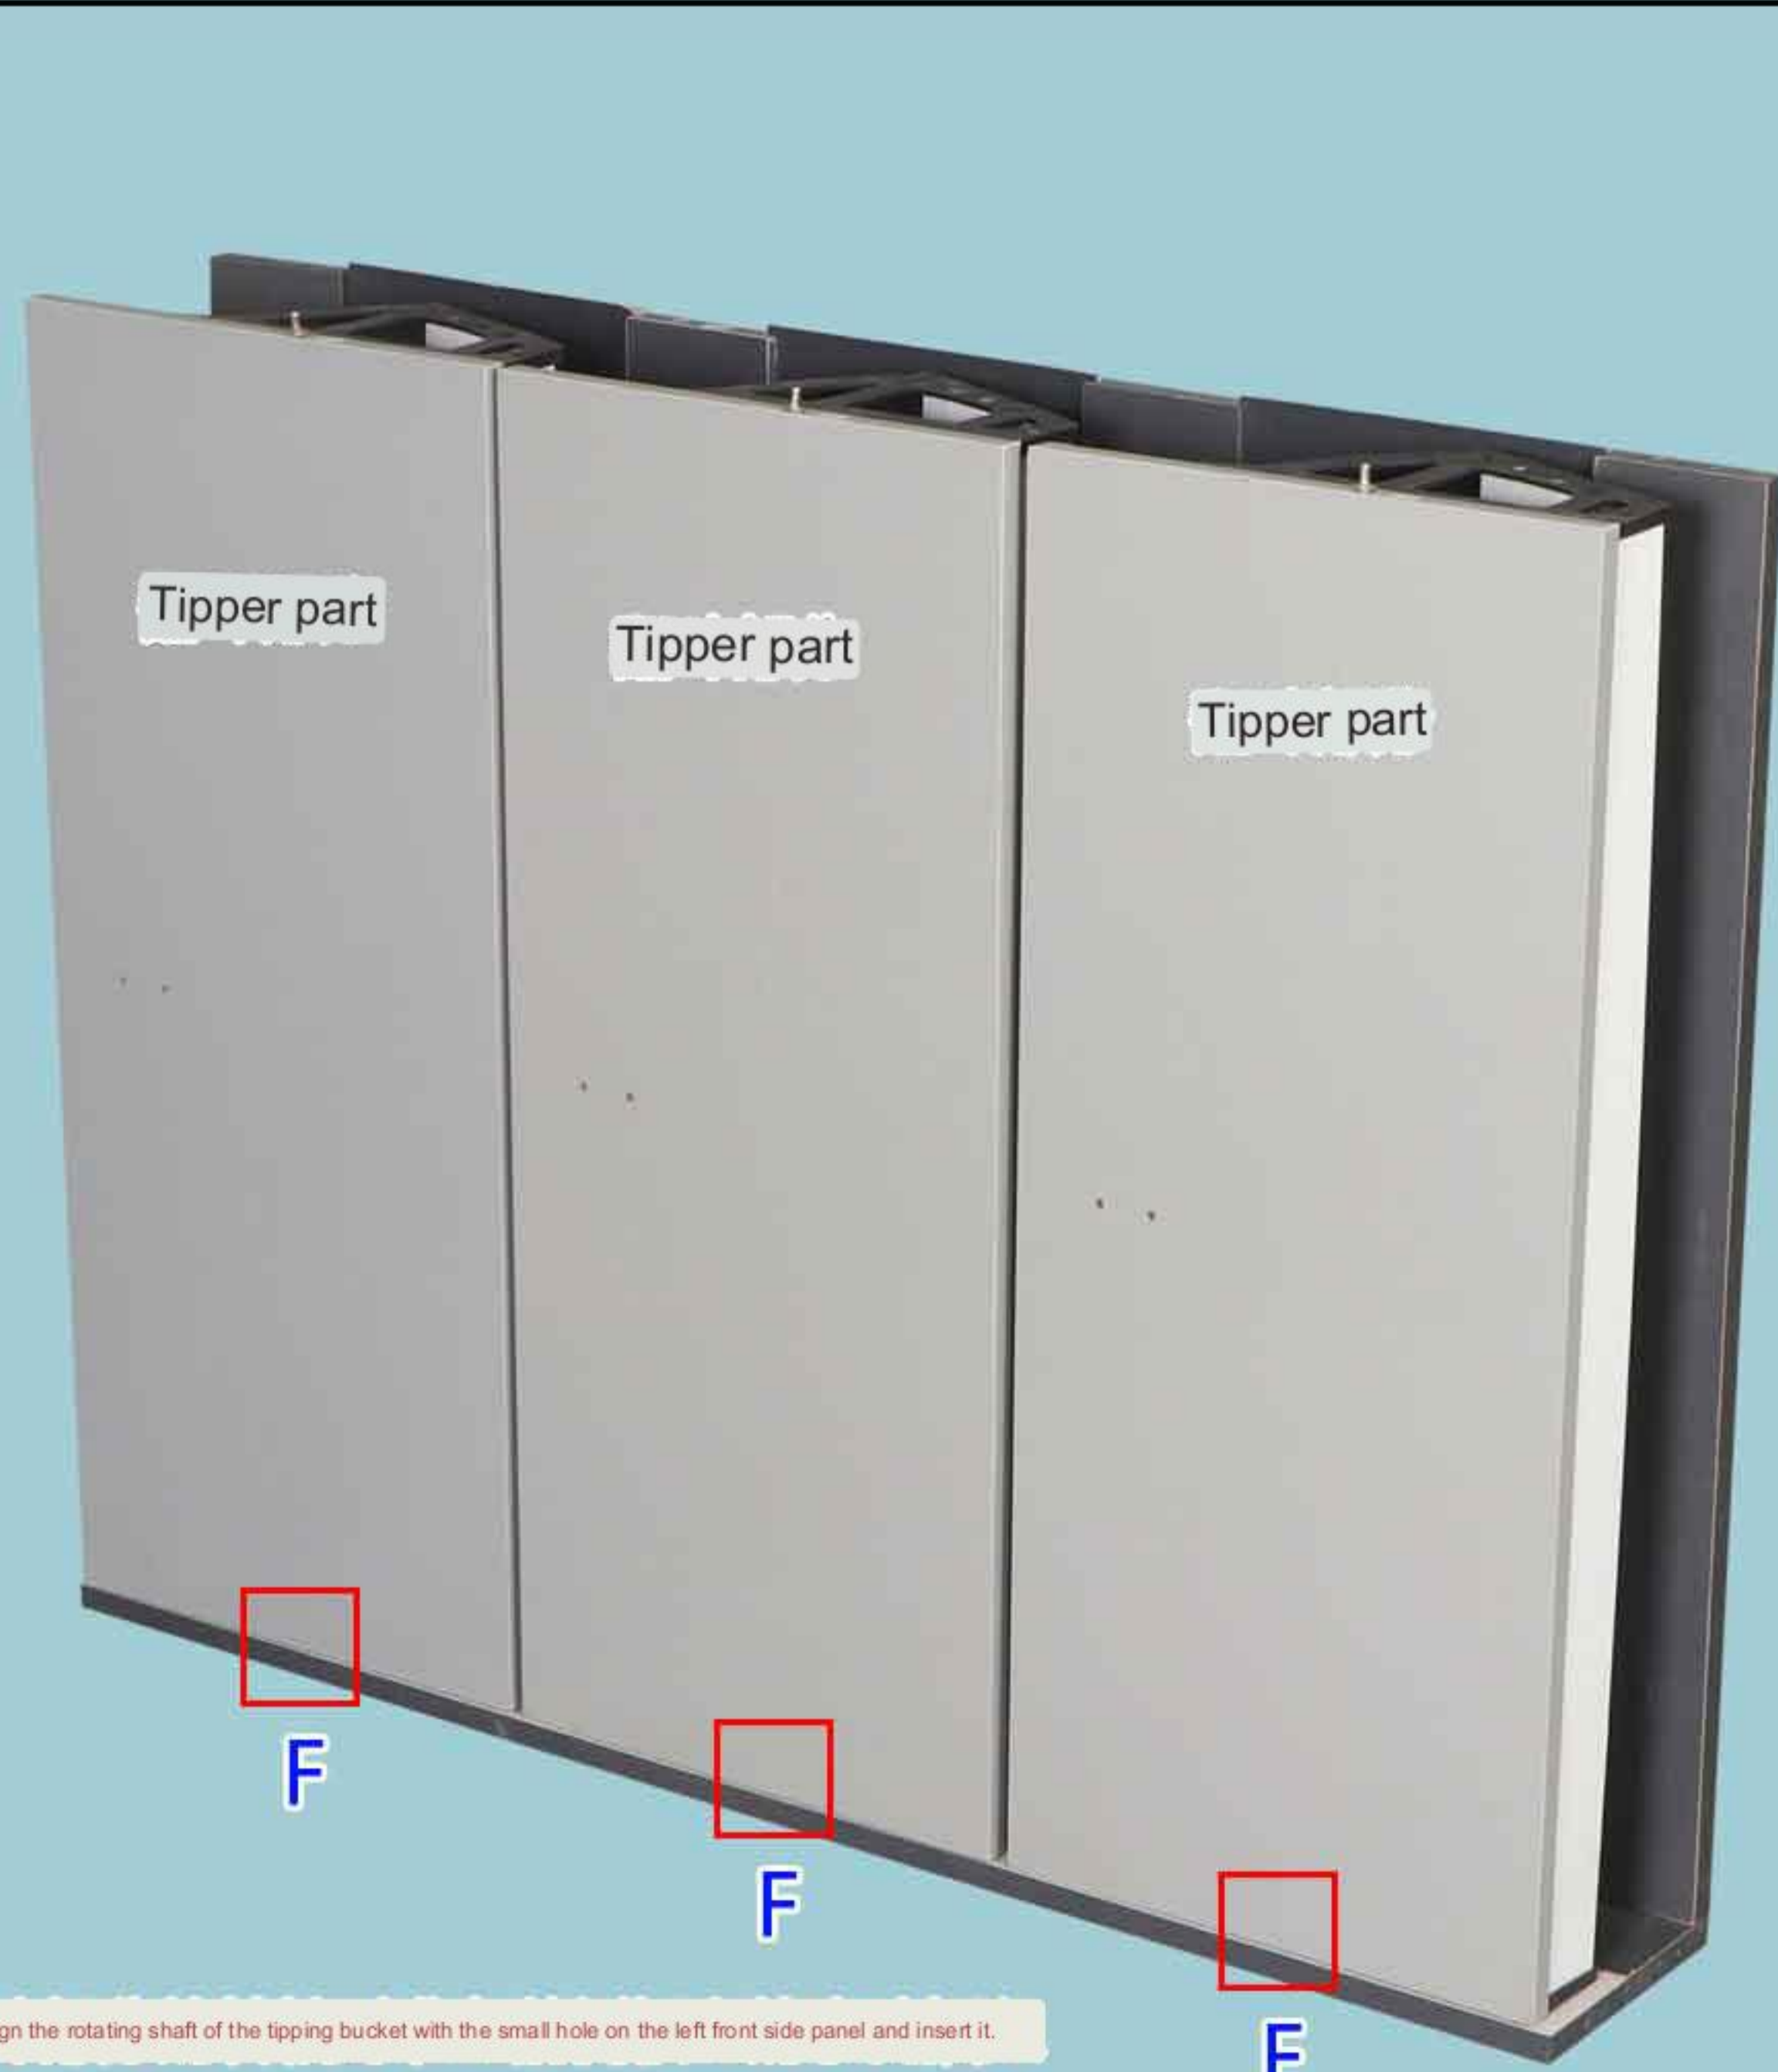

<5>

