SOCE023-120CM

Please be sure to use a manual screwdriver and refrain from using an electric drill.

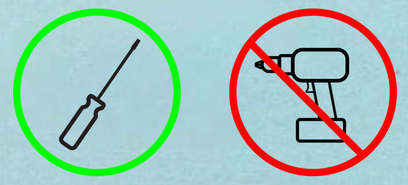

Product accessories and quantity

Eccentric piece installation steps

Overall partial installation

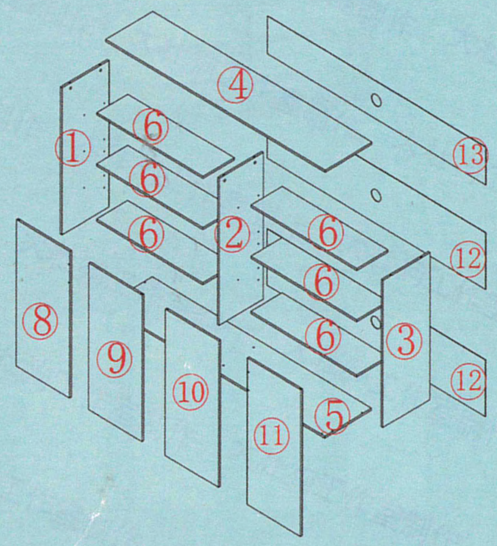

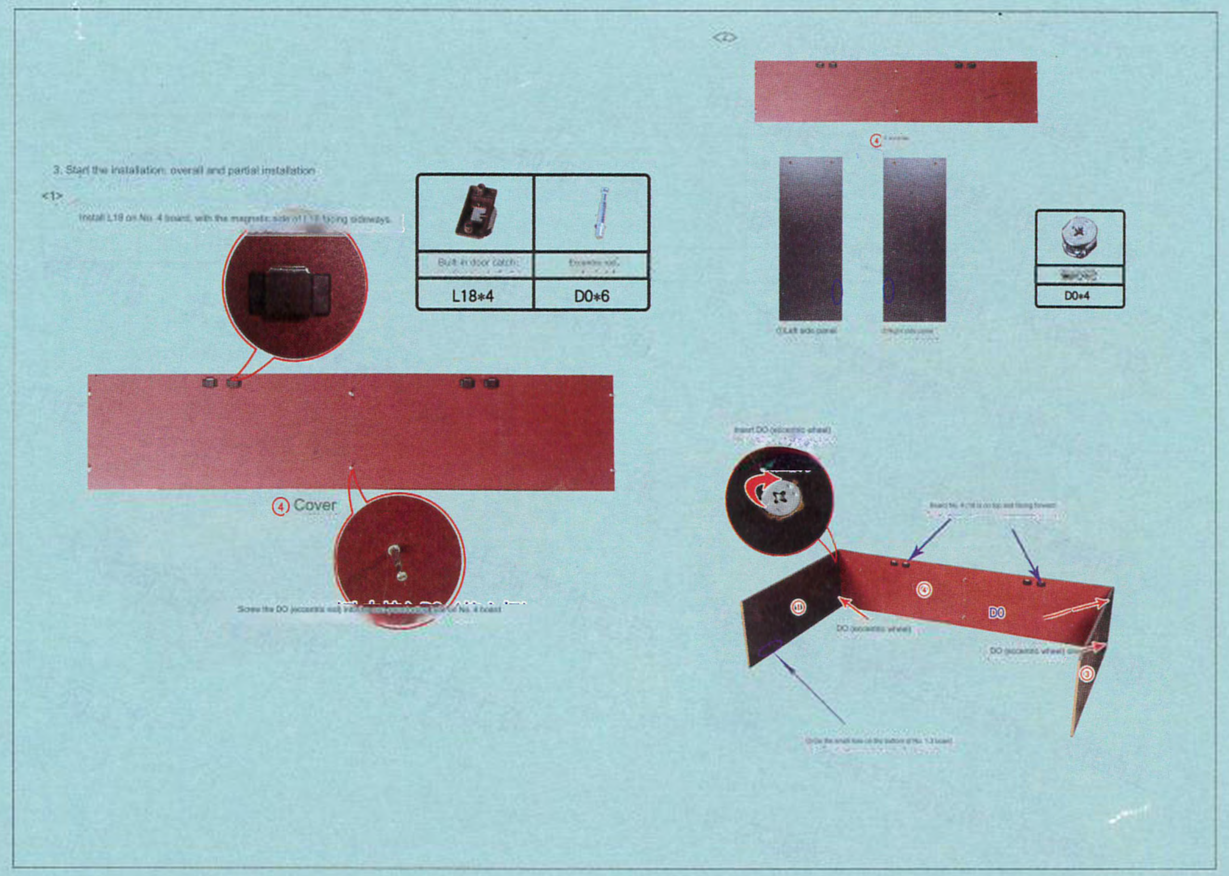

1. Product accessories and quantity (It is recommended to put more spare screws)

4435 self-tapping screws	4+14 handle screws small nails		Metal feet
B3*15 (includes 1 spare)	B14*5 (including 1 spare)	K20*34 (spares included)	M24*4
Expansion and cushioning wheel	Embedded door catch (metal/plastic)	Door hinge handle	Single hole door hinge (shaft)
D0*11 (includes 1 spare)	L18*4 147(gold) /J49(black) 2		L19*4
Pin surface pin	2.5*12 self-tapping screws	Door hinge	Hex bolt
K0*30 (Contains 2 spares)	A1*34 (includes 2 spares)	K2*4	M44*1
Hexagon nut	screwdriver (Flat head or cross)		
K11*3	1		

2. Installation steps of eccentric parts

Screw the eccentric rod to the board

Find the corresponding board and insert it

find round hole

Insert the eccentric wheel into the round hole

Rotate 180° clockwise to lock the board left and right

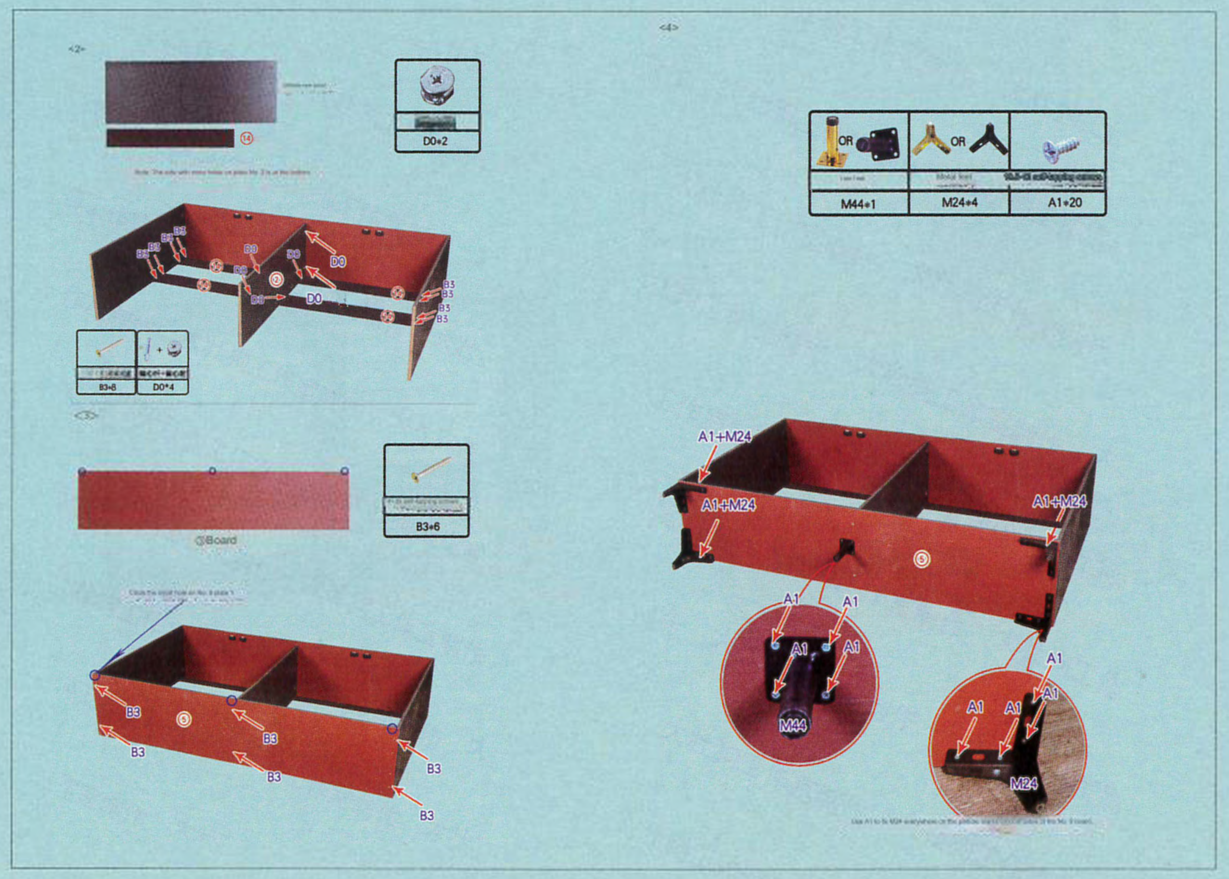

Kind tips:

1. Please distinguish the boards according to the drawings when installing.

Product color is not subject to instructions.

2. Tighten the screws 70%, and then tighten them after everything is completed!

3. Some boards have a red side, and the red side faces down or inward.

4. Please read all the drawings before proceeding with installation.

5. If there are extra screw accessories, they are spare screws provided by the manufacturer!

<5> Whole flip

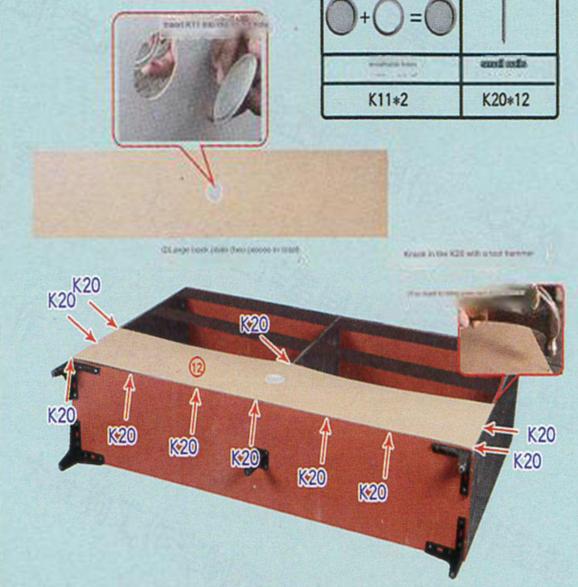

<6>

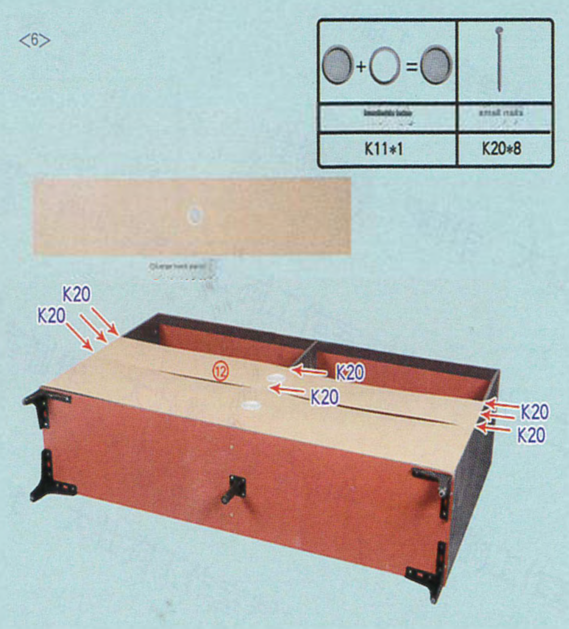

<9>

Place plate 6 on K0

<10>

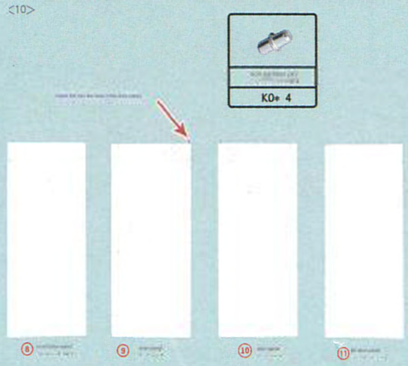

<11>

<7>

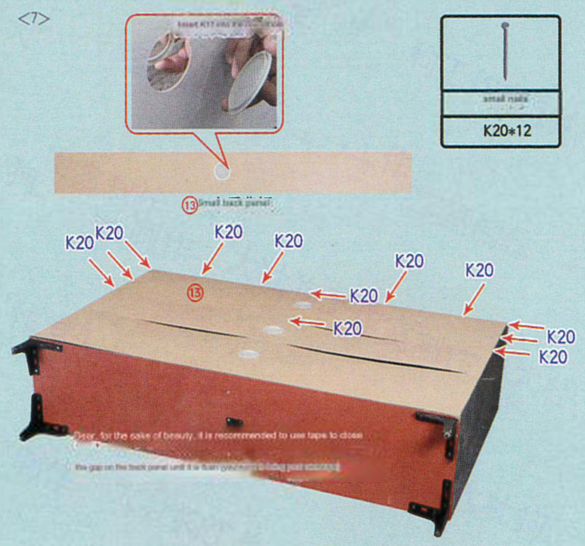

<8>
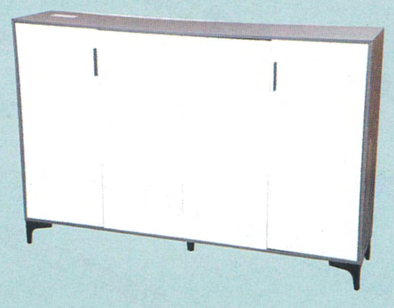
<12>