BS015 Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.

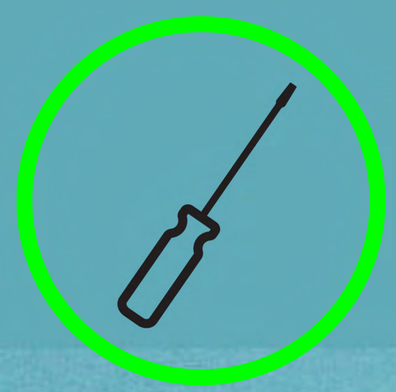

3.5CM self-tapping screws	Eccentric screw	Eccentric bolt	cork
A*44	B*4	C*4	D*1

Warm reminder: When installing the screws, tighten them 70%, and then tighten them again after everything is completed!

Installation principle of eccentric parts:

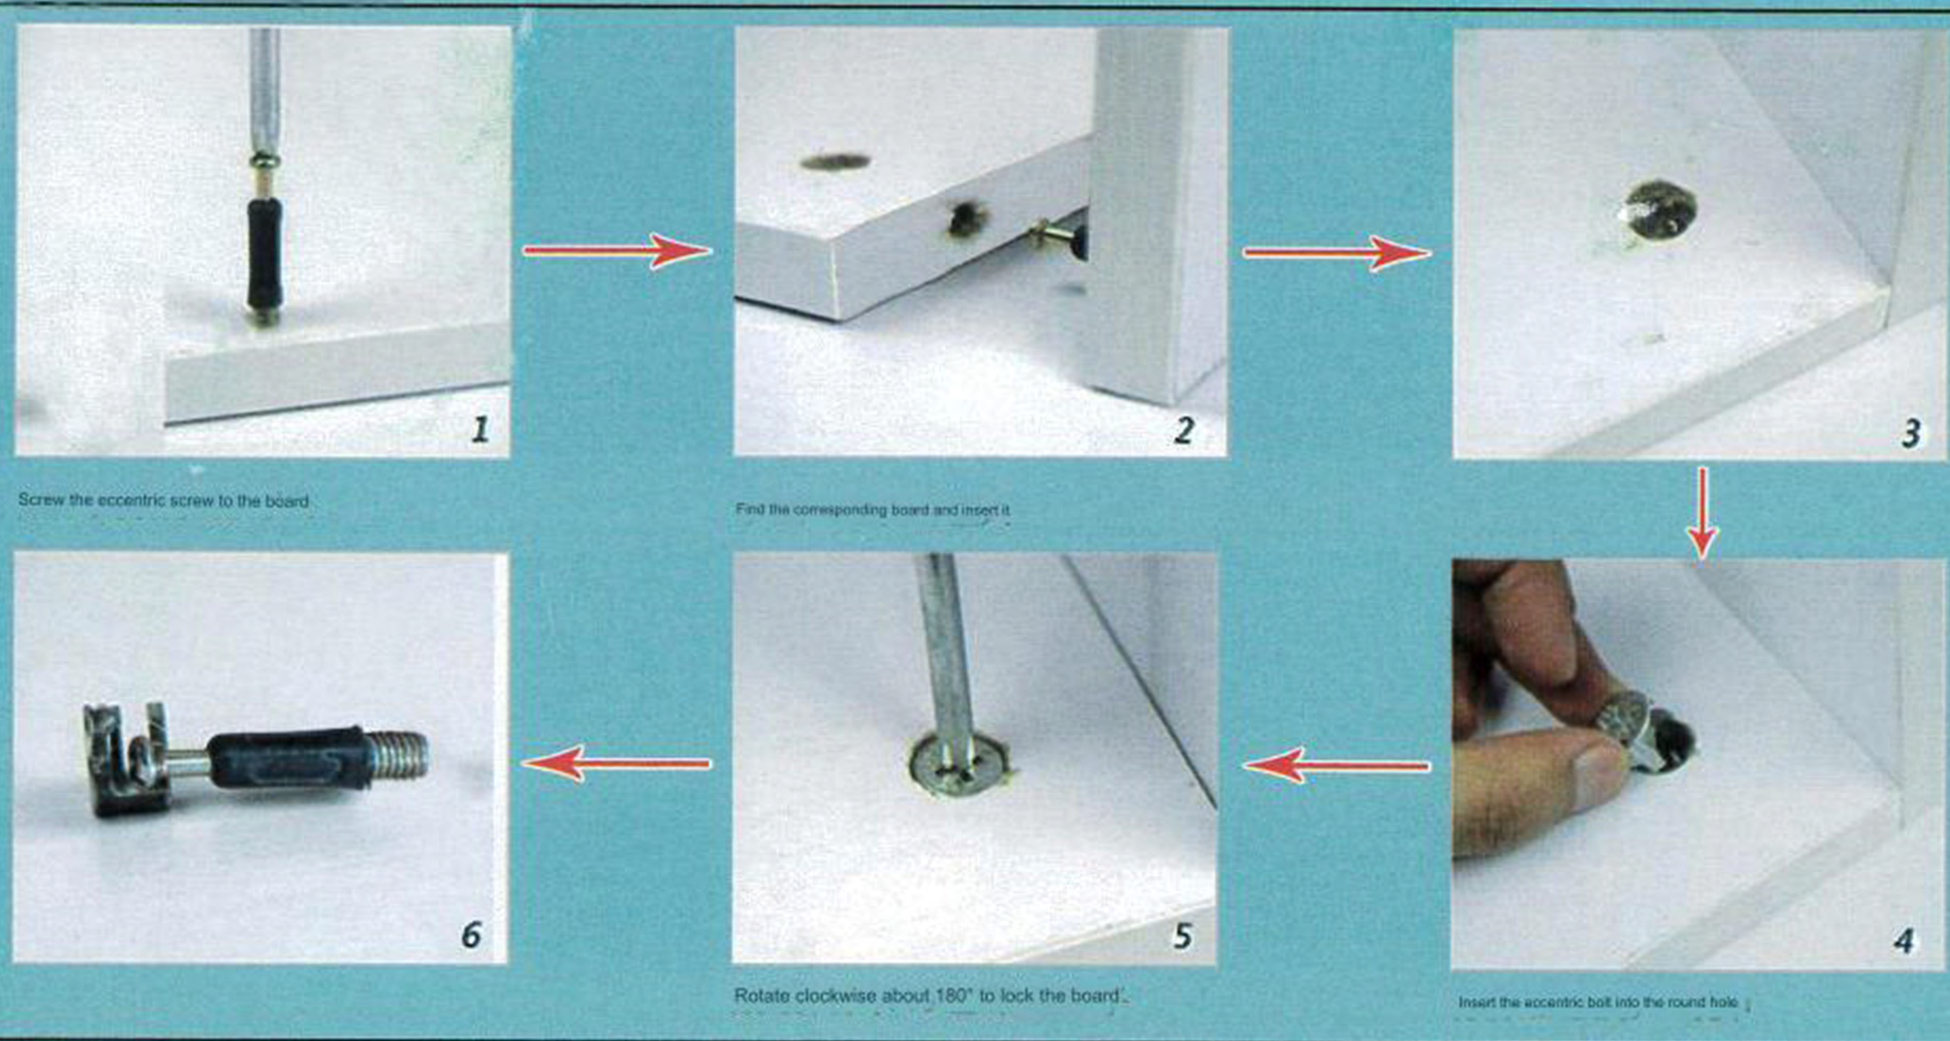

installation steps:

Board name and serial number:

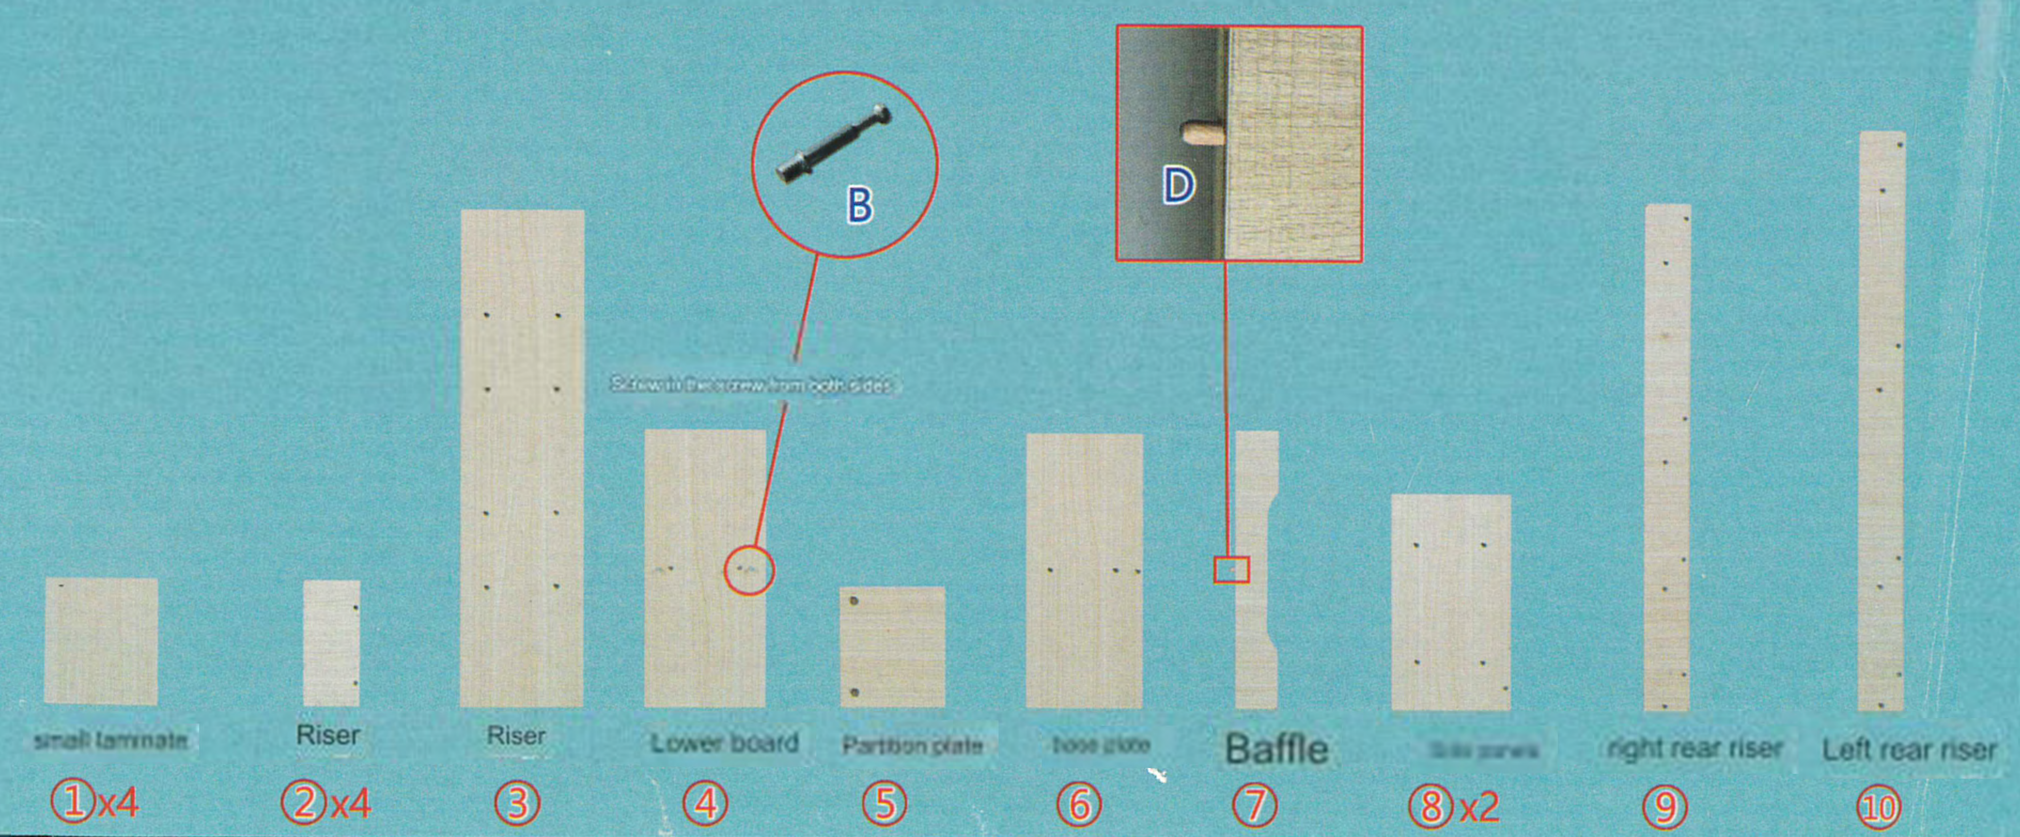

Step 1: Install the laminate and vertical panels

<1>

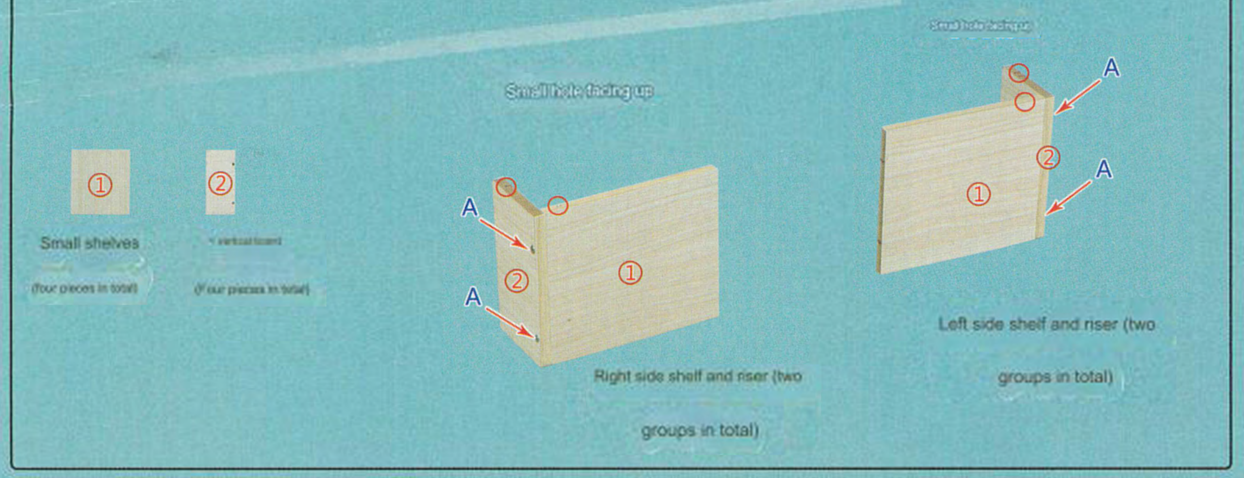

<5>

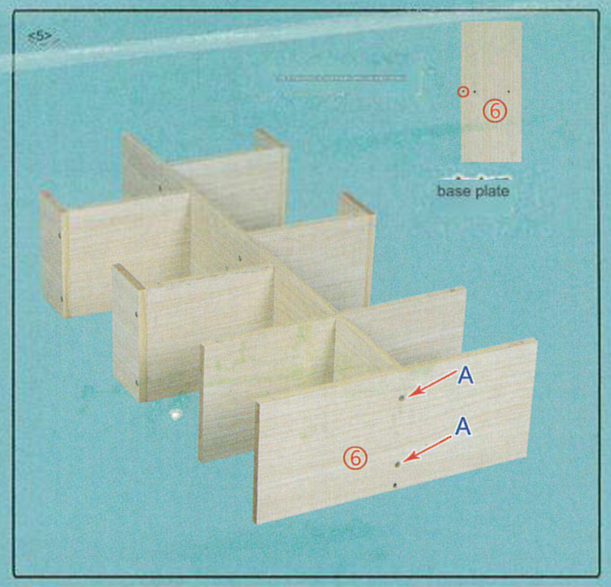

<6>

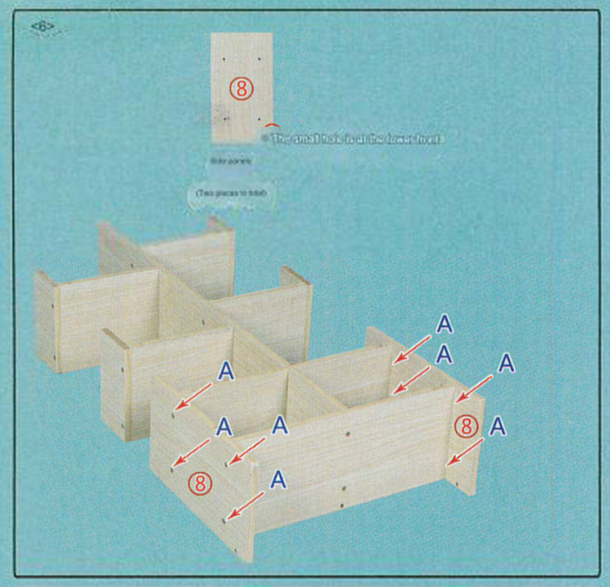

Step 2: Overall partial installation

<1>

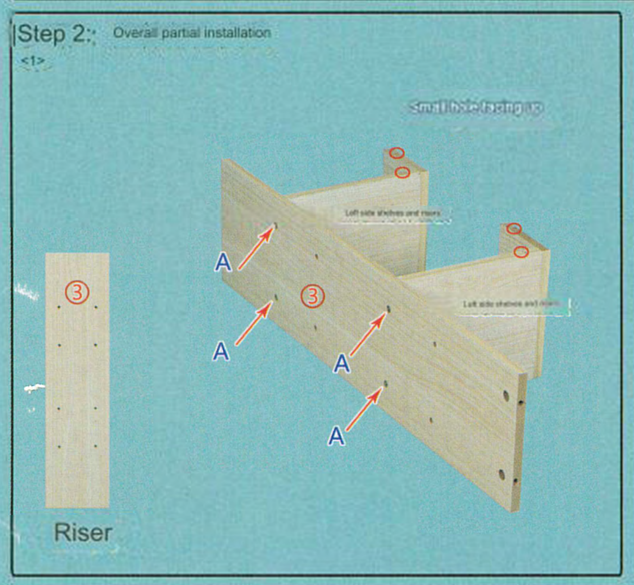

<2>

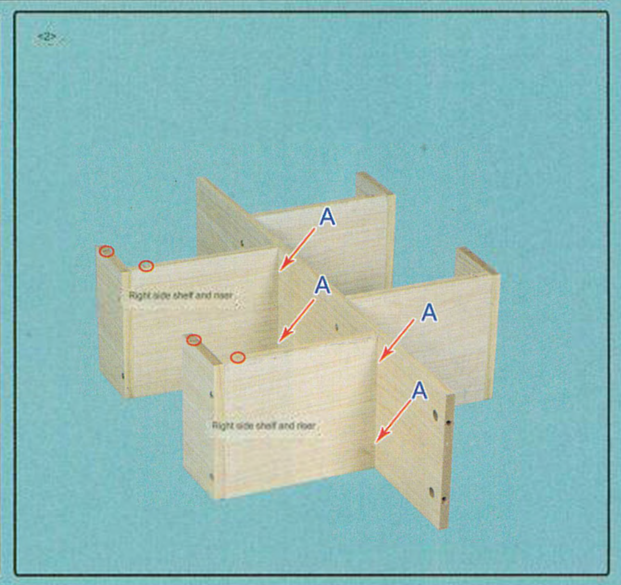

<7>

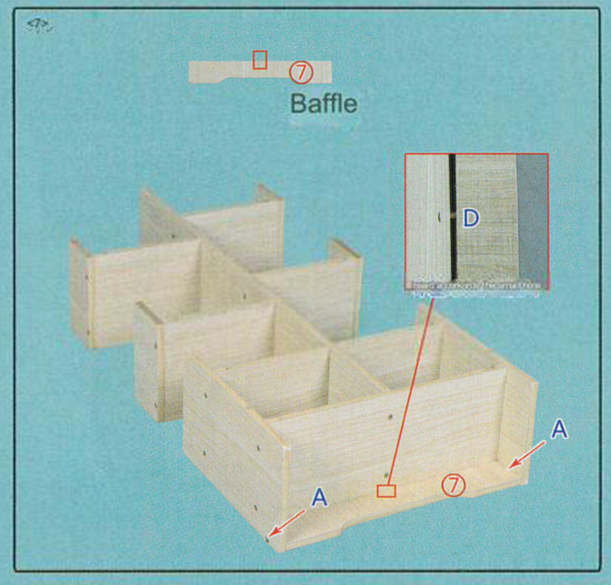

<8>

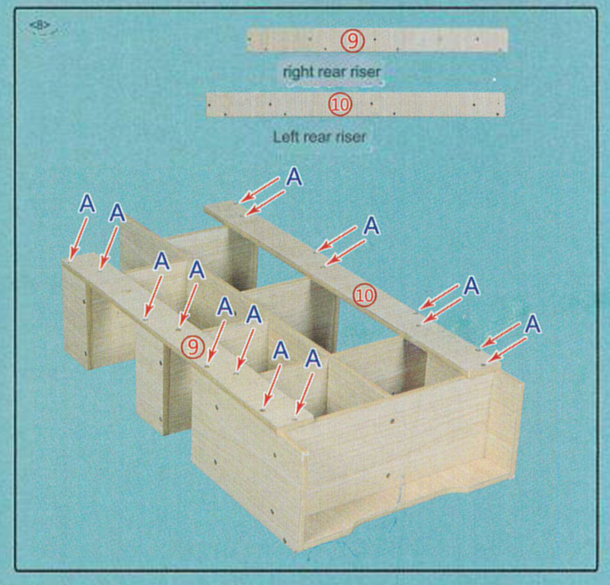

<3>

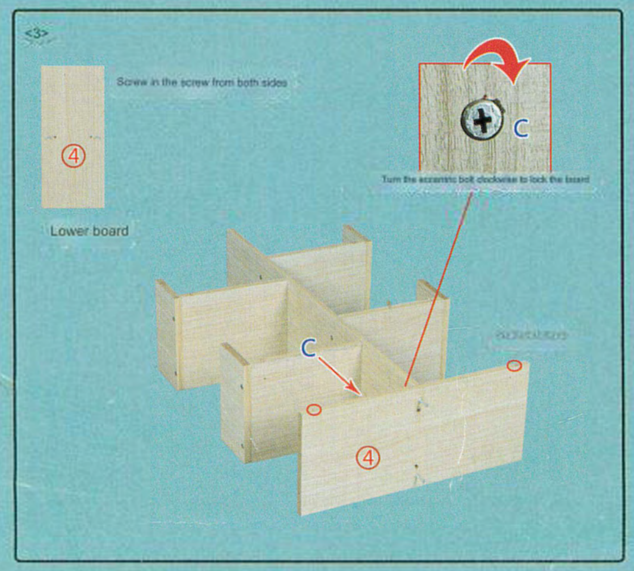

<4>

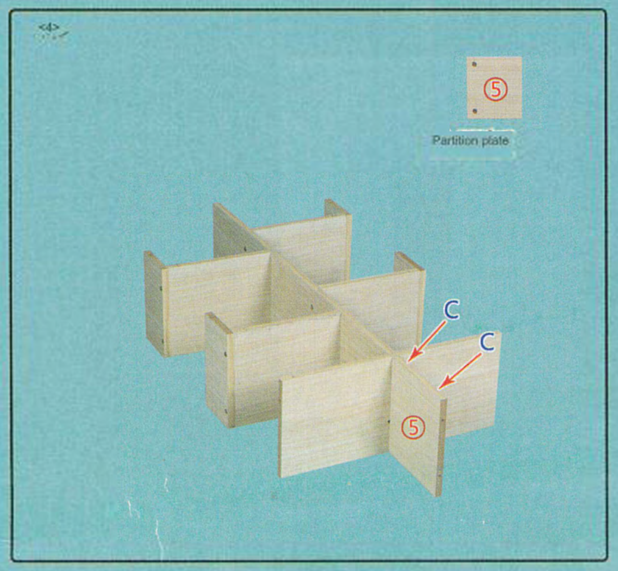
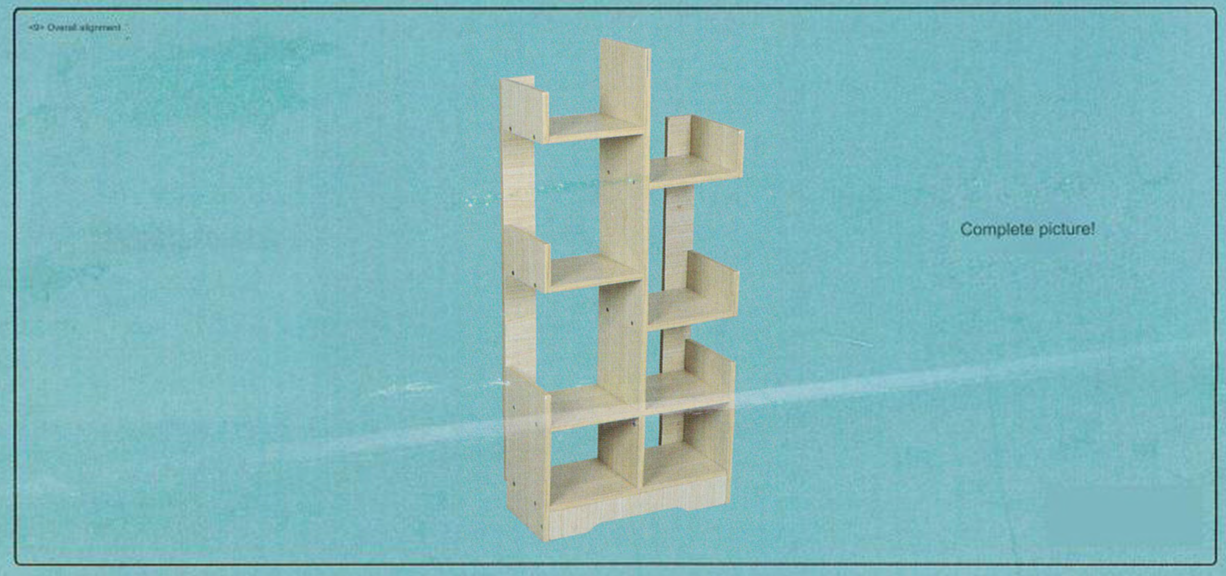
<9> Overall alignment