CBD013 Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.

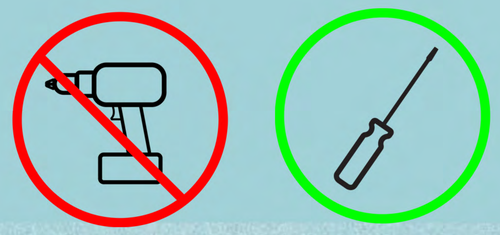

Product accessories and quantity

	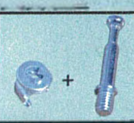			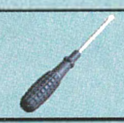
4*35 self-tapping screws	Eccentric wheel + eccentric rod	iron shelf pin	small nails	screwdriver
B3×50	D0× 7	K0×3	K20×10	1

Kind tips: 1. When installing, please refer to the drawings to distinguish the boards. The color of the product is not subject to the instruction manual; 2. Tighten the screws 70%, and then tighten them after everything is completed!

3. Some boards have a red side, and the red side faces down or inward.

Installation principle of eccentric parts:

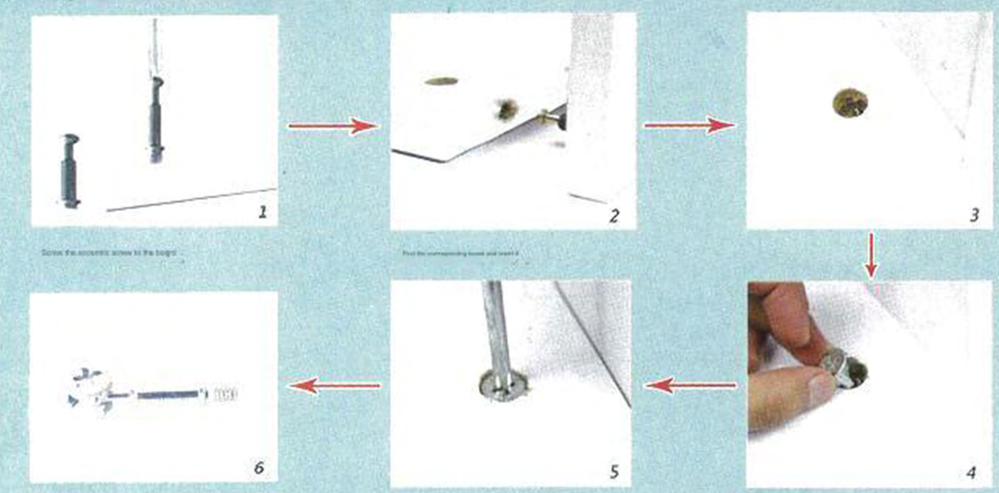

Screw the eccentric screw to the board

Find the corresponding board and insert it

Insert the eccentric bolt into the round hole

Rotate clockwise about 180° to lock the board

Start the installation; Step 1: The drawer is installed as follows:

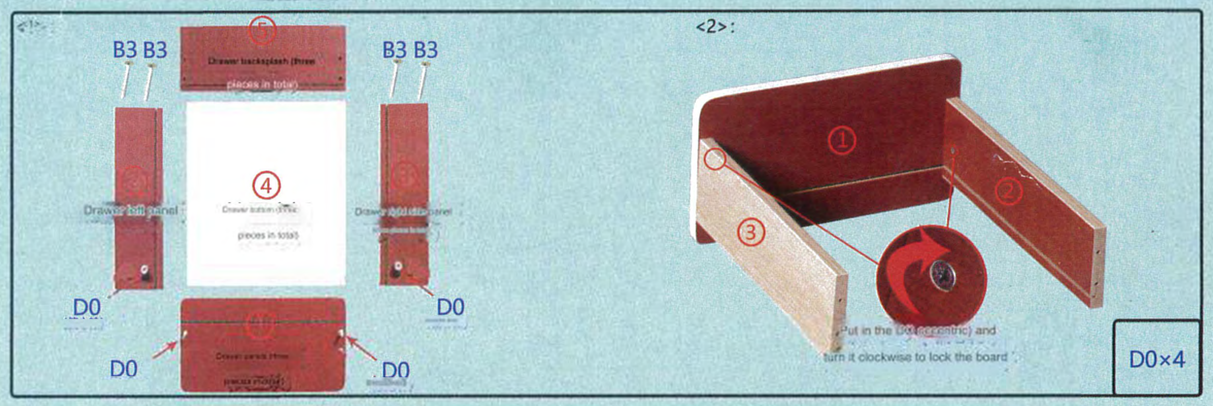

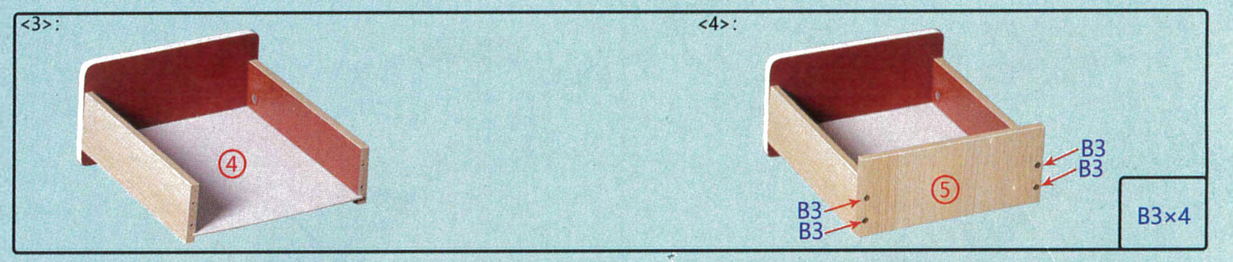

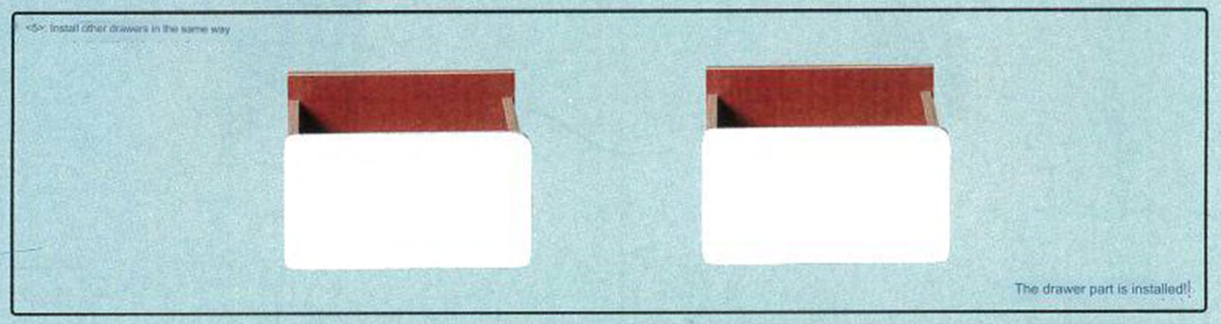

Product name and serial number:

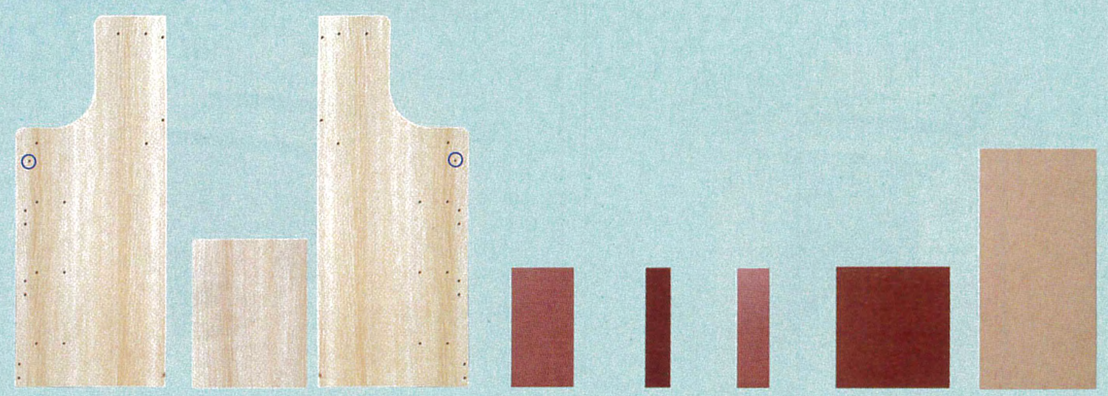

⑥ Left side panel ⑦ Cover ⑧ Right side panel ⑨ Laminate (four pieces) ⑩ Small stopper (pieces in total) ⑪ Front baffle ⑫ Rear riser ⑬ back panel

Step 2: The overall installation is as follows:

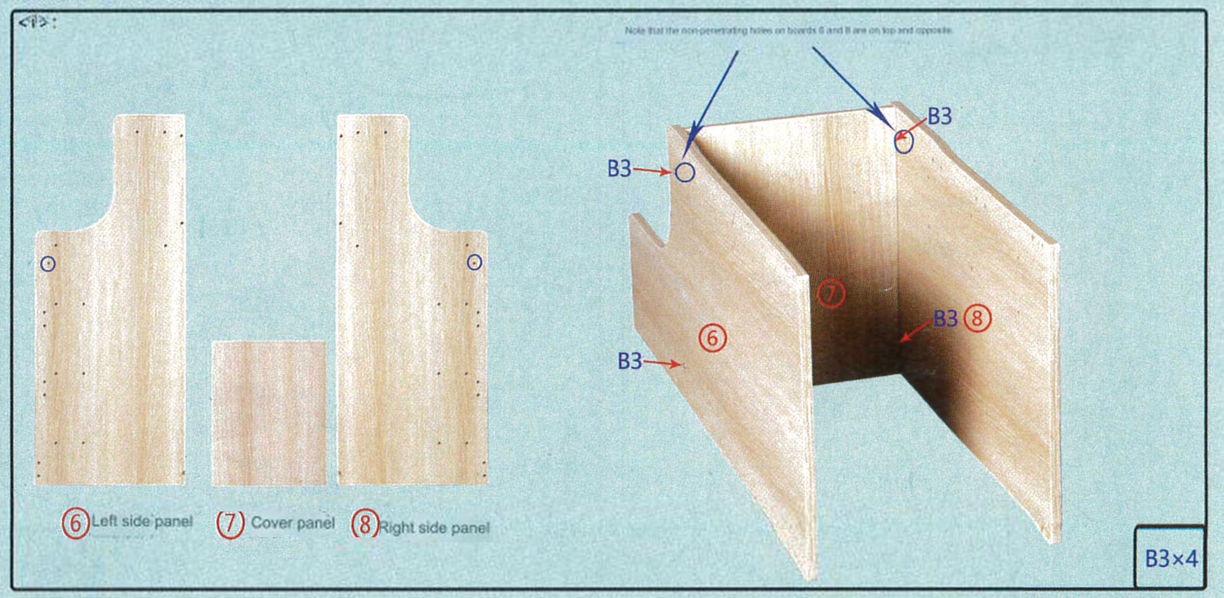

<2>:

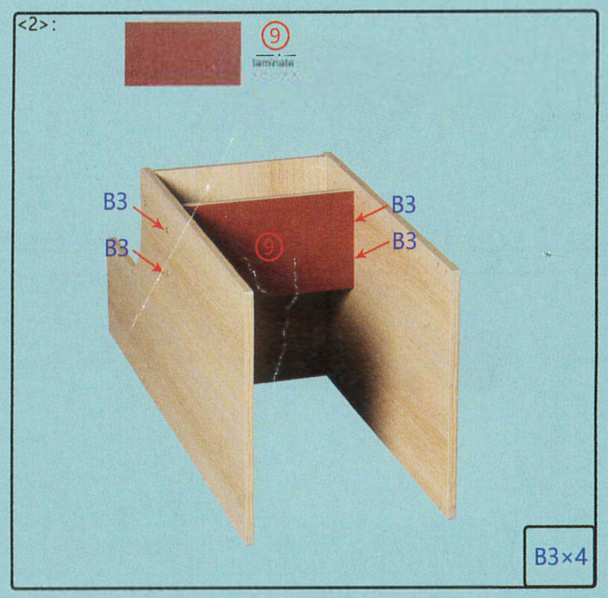

<3>:

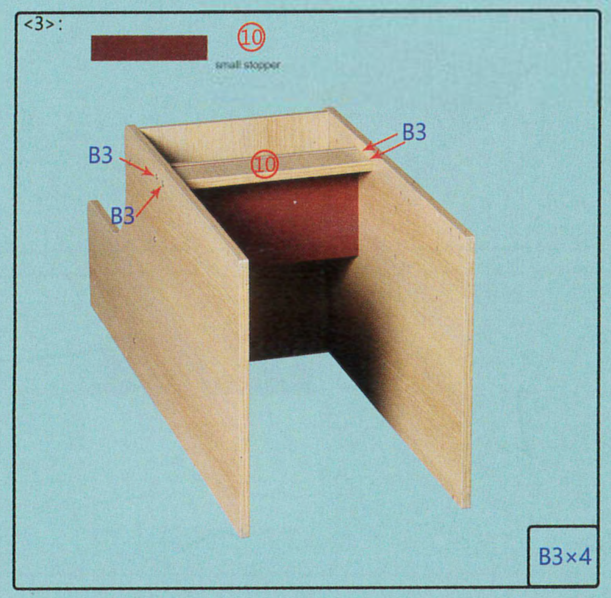

<8>:

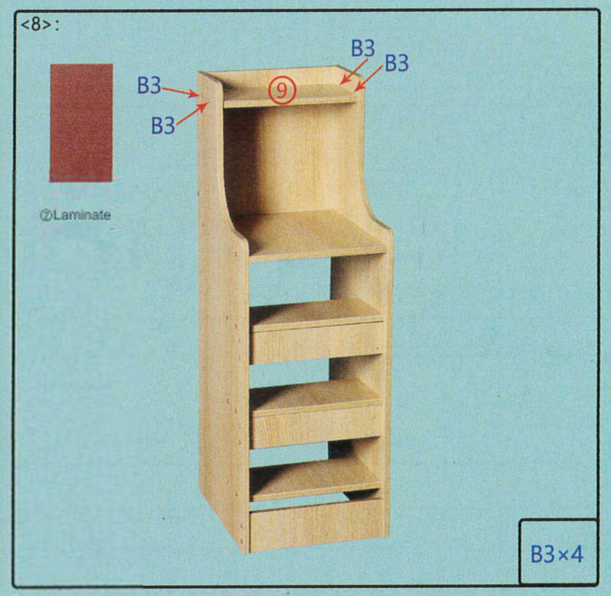

<9>:

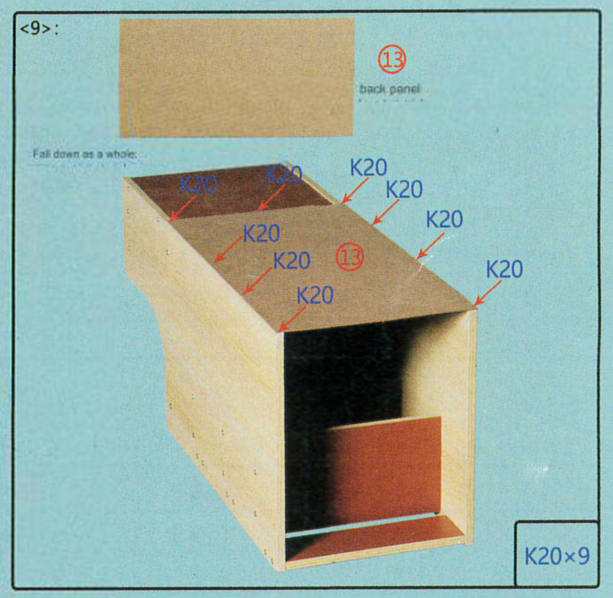

<4>: Install the second layer board and small retaining strip in the same way.

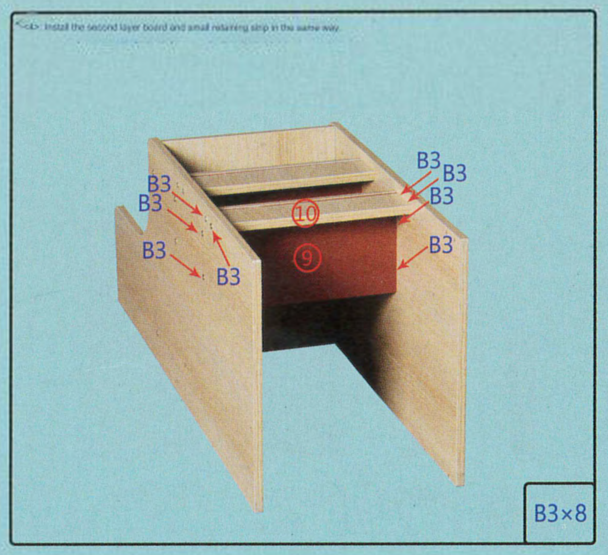

<5>:

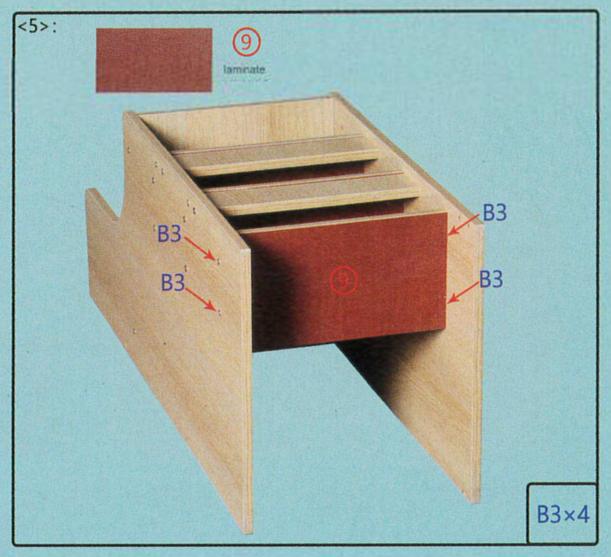

<10>: The overall arrangement is as follows:

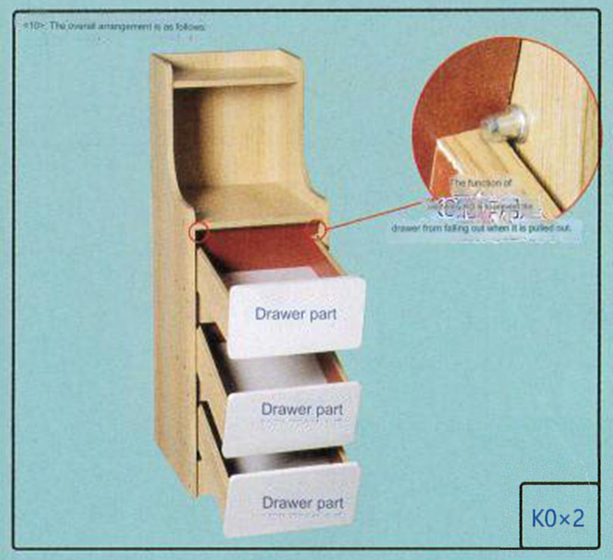

<11>:

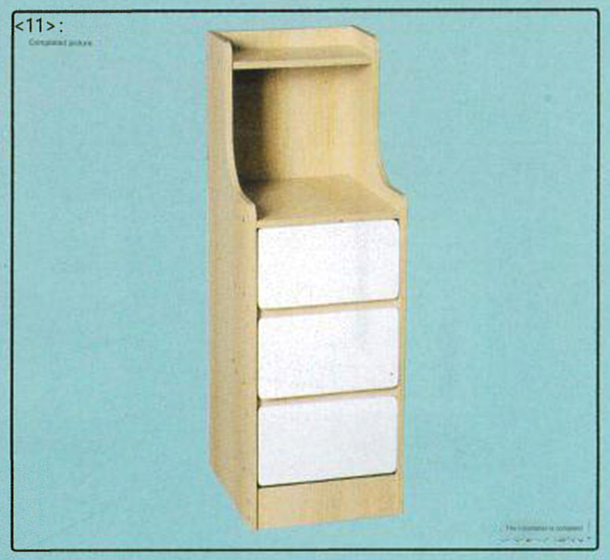

<6>:

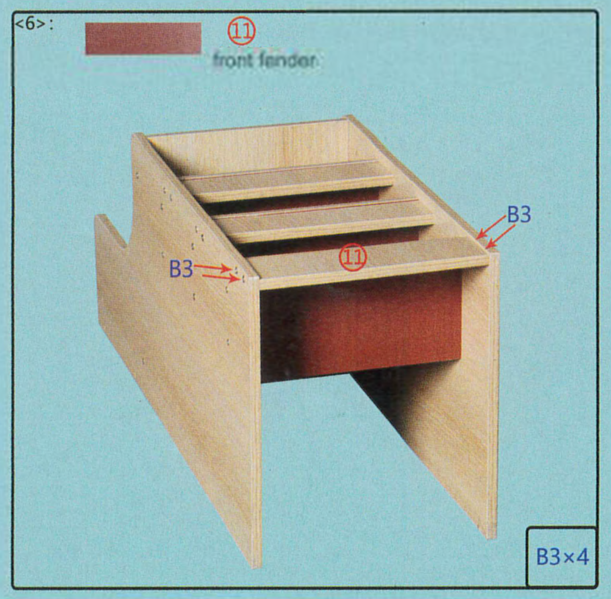
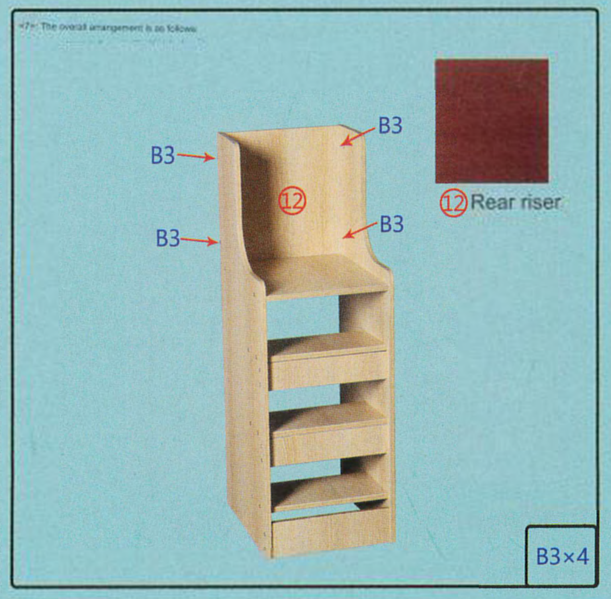
<7>: The overall arrangement is as follows: